



Welcome to the Library at
thecanoncollector.com

Command Back E-1 Instructions

Please enjoy this Canon publication. All ownership rights of this material reside with Canon and I cannot grant you any rights to it. Keep it for your personal use only and do not use it for any commercial purpose.

Check out the Canon Collection at thecanoncollector.com. The site is growing and is far from complete. If you are looking for something specific start in the Index. It will save you a lot of time.

Canon

CANON INC. 7-1, Nishi-Shinjuku 2-Chome, Shinjuku-ku, Tokyo 160, Japan
Mailing address: P.O. Box 5050, Dai-ichi Seimei Building, Tokyo 160, Japan

U.S.A. — **CANON U.S.A., INC. HEADQUARTERS**
One Canon Plaza, Lake Success, N.Y. 11042, U.S.A.
CANON U.S.A., INC. MANHATTAN SERVICE CENTER
800 Third Avenue, New York, N.Y. 10016, U.S.A.
CANON U.S.A., INC. ATLANTA BRANCH
6380 Peachtree Industrial Blvd., Norcross, Georgia 30071, U.S.A.
CANON U.S.A., INC. CHICAGO BRANCH
140 Industrial Drive, Elmhurst, Illinois 60126, U.S.A.
CANON U.S.A., INC. LOS ANGELES BRANCH
123 Paulsen Avenue East, Costa Mesa, California 92626, U.S.A.
CANON U.S.A., INC. LOS ANGELES SERVICE CENTER
3321 Wilshire Blvd., Los Angeles, California 90010, U.S.A.
CANON U.S.A., INC. SANTA CLARA BRANCH
4000 Burton Drive, Santa Clara, California 95054, U.S.A.
CANON U.S.A., INC. DALLAS OFFICE
2035 Royal Lane, Suite 290, Dallas, Texas 75229, U.S.A.
CANON U.S.A., INC. HONOLULU OFFICE
Bldg. B-2, 1050 Ala Moana Blvd., Honolulu, Hawaii 96814, U.S.A.

CANADA — **CANON CANADA INC. HEADQUARTERS**
6390 Dixie Road, Mississauga, Ontario L5T 1P7, Canada
CANON CANADA INC. MONTREAL SERVICE CENTRE
10652 Côte de Liesse, Lachine, Quebec H8T 1A5, Canada
CANON CANADA INC. CALGARY OFFICE
2828, 16th Street, N.E. Calgary, Alberta T2E 7K7, Canada

EUROPE, AFRICA
& MIDDLE EAST — **CANON EUROPA N.V.**
P.O. Box 7907, 1008 AC Amsterdam, The Netherlands
CANON FRANCE-PHOTO CINEMA S.A.
20, Boulevard Vital Bouhot, 1e de la Jatte, 92521 Neuilly-sur-Seine, France
CANON UK LTD.
Units 4 & 5, Brent Trading Centre, North Circular Road, London NW10 0JF, United Kingdom

CENTRAL &
SOUTH AMERICA — **CANON LATIN AMERICA, INC. DEPTO. DE VENTAS**
Apartado 7022, Panamá 5, República de Panamá
CANON LATIN AMERICA, INC. CENTRO DE SERVICIO Y REPARACION
Apartado 2019, Zona Libre de Colón, República de Panamá

SOUTHEAST ASIA — **CANON HONGKONG TRADING CO., LTD.**
Golden Bear Industrial Centre, 7/F., 66-82 Choi Wan Kok Street,
Tuen Mun, New Territories, Hong Kong
CANON SINGAPORE PTE. LTD.
60-B Martin Road, #10-01/08, Singapore Warehouse, Block C, Singapore 0923


OCEANIA — **CANON AUSTRALIA PTY. LTD.**
Unit 1/37, Waterloo Road, North Ryde (Macquarie Park), N.S.W. 2113, Australia

JAPAN — **CANON SALES CO., INC.**
J1-28, Mita, 3-Chome, Minato-ku, Tokyo 108, Japan

©CANON INC.

PRINTED IN JAPAN

Command Backs

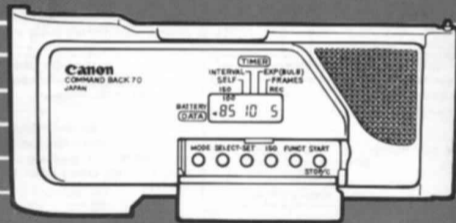

Canon

INSTRUCTIONS
English Edition

E

The Canon Command Backs are special data backs which open up an amazing variety of automatic operations. As their names indicate, the Command Backs are equipped with command functions to control the camera in various timer modes, as well as functions which allow you to record certain types of data automatically on the film.

Features:

1. Data Recording Function

- 1) Built-in automatic date recording mode programmed up through the year 2029.
 - automatically compensates for long and short months and leap years.
 - any of three sequences (Month/day/year, day/month/year, and year/month/day) may be selected.
- 2) Built-in automatic quartz digital clock mode with 24-hour display (Day/hour/minute is recorded.).
- 3) Automatic recording of an arbitrary 6-digit code of numbers and the letters A through F.
- 4) Automatic recording of a 4-digit frame counter number from Fc 00 01 up to Fc 99 99.

2. Timer Control Function

- 1) Self-timer mode
 - the shutter is released once after a fixed period of time.
- 2) Interval timer mode
 - the shutter is released at fixed intervals.
- 3) Long release timer mode
 - the shutter is released and held open for a fixed period of time.

1), 2) and 3) can be set in 1-sec. units to any value from 1 sec. to 23 hrs., 59 mins., 59 secs.

- 4) Frame counter setting (number of exposures setting) mode
 - the number of exposures to be made can be set and operation stops automatically after the set number of exposures has been made.


4) can be set to any value in the range from 1 up to 99.

- The Command Backs can be programmed by combining the modes of the timer control function and using them together with the data recording function.

1. NOMENCLATURE


When reading these instructions, unfold the flap of this booklet for easy reference to the command back's function.

Command Back 70 and 80

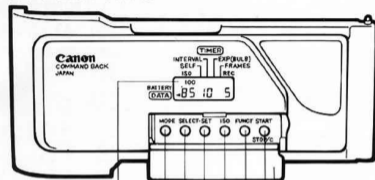

- 8 LCD Panel
- 1 Mode Selector
- 2 Position Selector
- 3 Number Set Button
- 7 Safety Cover (opened)
- 6 Start/Stop/Clear Button
- 5 Data/Timer Selector
- 4 Film Speed Selector (Command Back 70 and 80)
- 4 Exposure Level Adjust Button (Command Back E1 and 90)

Command Back E1 and 90

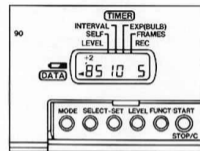

2. Basic Functions of Control Buttons

The basic functions of the Command Back's various control buttons are as follows:

1	Mode Selector—Selects the modes in either the data recording function or the timer control function.	4	<ul style="list-style-type: none"> • Command Back 70 and 80 Film Speed Selector—Sets data exposure brightness according to the film speed in use (3 levels). • Command Back E1 and 90 Exposure Level Adjust Button—Compensates the light intensity of data recording.
2	Position Selector—Selects the digit to be set or reset when changing numbers in the various modes.	5	Data/Timer Selector—Switches between the data recording function and the timer control function.
3	Number Set Button—Sets the desired numbers.	6	Start/Stop/Clear Button—• Starts operation in the timer control function. • Manually stops operation in the timer control function. • Clears values when the digit is flashing.

Labels in five languages are provided. Please attach the one in your language to the inside of the safety cover.


 


Table of Contents


1. Nomenclature.....	P. 3	9. Setting Each Mode of the Timer Control Function.....	P.22
2. Basic Functions of Control Buttons ..	P. 4	(1) Setting the Self-timer	P.22
3. Function Displays	P. 6	(2) Setting the Interval Timer	P.24
4. Attaching the Command Back to the Camera	P. 7	(3) Setting the Long Release Timer	P.26
5. Setting the Film Speed	P. 8	(4) Setting the Frame Counter	P.28
■ Command Back 70 and 80		(5) Multiple Exposures: for the Command Back E1 and 90 only ..	P.30
■ Command Back E1 and 90		(6) Automatic Flash Photography: for the Command Back E1 and 90 only	P.30
6. Basic Operation for Making Mode Settings.....	P.10	10. Combining Various Modes	P.31
7. Basic Operation for Setting Display Numbers	P.12	11. Replacing the Battery	P.40
8. Setting Each Mode of the Data Recording Function	P.13	12. Liquid Crystal Display	P.41
(1) Setting the Date	P.14	Specifications	P.42
(2) Setting the Time	P.16		
(3) Setting the Arbitrary 6-digit Code	P.18		
(4) Setting the 4-digit Frame Counter Number	P.20		

3. Function Displays

- All displays are shown below but normally only the information needed at the time is displayed.

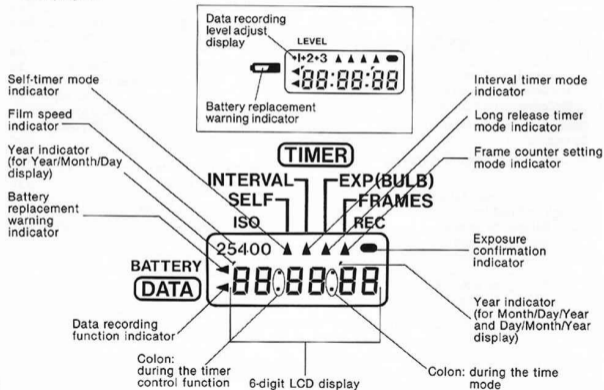


4. Attaching the Command Back to the Camera

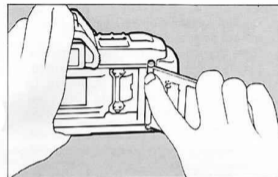

Be sure that there is no film in the camera before attaching the Command Back. Otherwise, the film will be exposed when the regular camera back is opened.

- 1) Open the back cover of the camera and push the hinge release pin down to remove the back cover.

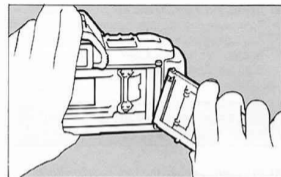

- 2) To attach the Command Back, insert its lower hinge into the lower socket first. Then depress the hinge release pin, align it with the upper socket and let go of the hinge release pin to lock it on.

Note:
Wipe the contacts of the camera and the Command Back with a clean, dry cloth to ensure proper contact. Otherwise the data may not be properly recorded.

 
5. Setting the Film Speed

■ Command Back 70 and 80

To ensure correct data recording, the correct film speed must be set on these Command Backs. Set the film speed indicated by either "ISO" or "ASA" on your film box.

Be sure that the correct film speed is also set on the camera body.


- 1) Press and release the film speed selector. The film speed is displayed on the LCD panel in the rotating sequence: 100, 400, 25.



- 2) Set at 25, 100, or 400 depending on the speed of your film. Use the following table for reference.
 - ISO 25—64: Set at 25.
 - ISO 80—160: Set at 100.
 - ISO 200—400 and ISO 1000: Set at 400.

Notes:

- The film speed set on the Command Back will not be recorded.
- There is a possibility that the data may be slightly blurred when ISO 1000 film is used.
- The film speed settings are guidelines. To determine the perfect setting, take a few trial shots, changing the film speed setting for each shot.

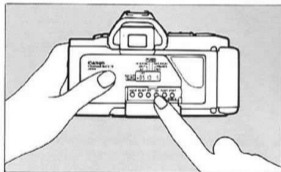

■ Command Back E1 and 90

It is unnecessary to set the film speed on the Command Back E1 and 90, since the DX data of the film is automatically transmitted from the EOS-1 and T90.

Notes:

- The film speed is not displayed on the LCD panel.
- To compensate the light intensity of data recording, press the exposure level adjust button. Every time this button is pressed, the data recording exposure becomes one step brighter up to three steps. On the LCD panel of the Command Back +1, +2 or +3 is displayed. When using ISO 80—ISO 160 film, you can compensate the exposure level only up to 2 steps, and when using ISO 25—ISO 64 film, you can compensate it only one step.
- Exposure compensation is necessary for data recording on the films below:

Sakura Film SR Series ISO 100, 400 or 1600

Agfa Film ISO 100 or 400

Agfa Chrome ISO 1000

Agfa Chrome RS Professional ISO 100 or 1000

— 1 step brighter

Sakura Film SR ISO 200

Agfa Chrome RS Professional 200

— 2 steps brighter

6. Basic Operation for Making Mode Settings

1. Switching between the data recording function and timer control function

Operation is switched between the data recording function and the timer control function each time the data/timer selector is pressed. You can confirm which function the camera is in by looking at the "◀" mark on the LCD panel.

Control Buttons

1 Data Recording Function Display



2 Timer Control Function Display



● indicates button is pressed.

2. Mode Settings in Data Recording Function

The mode display of the data recording function changes each time the mode selector is pressed. These data are automatically recorded upon shutter release except when "OFF" is displayed.

Control Buttons

1 Date Mode Display (year/month/day)



2 Time Mode Display (hour/minute/second)



3 Arbitrary 6-digit Code Mode Display



4 4-digit Frame Counter Number Mode Display



5 (No data will be recorded.)



Note:

Be sure to set to "OFF" when you do not want to record anything on the film.

3. Mode Settings in Timer Control Function

The mode display of the timer control function changes each time the mode selector is pressed. The camera is controlled according to these settings.

Control Buttons

1 Self-timer Mode Display



2 Interval Timer Mode Display



3 Long Release Timer Mode Display



4 Frame Counter Setting Mode Display (Number of exposures is limited.)



7. Basic Operation for Setting Display Numbers

1. Each time the position selector is pressed, a 2-digit unit starts flashing.
2. After the 2-digits you wish to change start flashing, press the number set button until the desired number appears.
3. Press the position selector until all the digits stop flashing.
 - Each depression of the number set button increments the flashing numeral by one. If the number set button is held down continuously in step 2, the number will advance rapidly.
 - If the start/stop/clear button is pressed while the number is flashing, the number will be cleared in the following way.

Command Back 70 and 80

Year	→	'83
Month and Day	→	1
Hour	→	0
Minute, Second, and other numerals	→	00


Command Back E1 and 90

Year	→	'85
Month and Day	→	1
Hour	→	0
Minute, Second, and other numerals	→	00

8. Setting Each Mode of the Data Recording Function

General Information & Notes

1. The data are automatically recorded upon shutter release.
2. The data are recorded in the lower right-hand corner of the picture.
3. If the data have been recorded correctly, a "●" mark will appear in the upper righthand corner of the LCD panel and light up. With the Command Back 90, the shutter speed and the aperture value displayed under the viewfinder of the T90 will change into LED bars.
4. When you do not want to record anything, be sure to set the display to "OFF."
5. It is impossible to record more than one mode at the same time. (For example: the date and time.)
6. It is impossible to record data if any part of the display is flashing.
7. If the background of the data recording area is bright, the data may not appear clearly on the picture. Be sure that a dark part of the subject lies within the data recording area.
8. When using color film, if the background of the data recording area is orange, the data may not appear clearly. This is because the data are printed in orange.
9. In continuous shooting with the EOS-1 or T90, the frame advancing rate may be slowed by data recording.

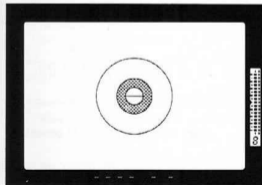

(1) Setting the Date

Any of three formats (year/month/day, day/month/year, and month/day/year) may be selected in the date mode. The year/month/day display is initially set. If you want to change that order, follow these steps:


1. Select the data recording function by pressing the data/timer selector.



2. Select the date mode displayed in year/month/day by pressing and releasing the mode selector.



3. While pressing the number set button, press the mode selector. Each time the mode selector is pressed, the display rotates in the sequence: year/month/day, day/month/year, and month/day/year. Select one of those three displays.

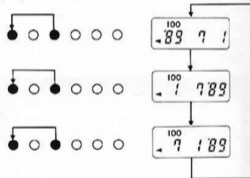

● indicates button is pressed.

EXAMPLE

When you want to change the date from January 3, 1985 to July 1, 1989. (Supposing that the display has already been changed to month/day/year.)

1. Select the data recording function by pressing the data/timer selector.	
2. Select the date mode (month/day/year) by pressing and releasing the mode selector.	
3. When the position selector is pressed, '85 (year) will start flashing.	
4. Press the number set button while '85 is flashing until '89 appears.	
5. Correct 1 (month) to 7 and then 3 (day) to 1 following the same procedures as in steps 3 and 4.	
6. Press the position selector once more to stop the flashing.	

● indicates button is pressed.







(2) Setting the time

To set the precise time, for example, to 12:00 noon, 00 seconds, follow these steps:

1. Select the data recording function by pressing the data/timer selector.
2. Select the time mode (day/hour/minute) by pressing and releasing the mode selector.
3. When the position selector is pressed once, the colon will start flashing. When it is pressed again, 30 (minute) will start flashing.
4. Press the number set button while 30 is flashing until 45 appears.

EXAMPLE

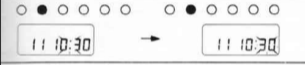When you want to change the time from 10:30 to 17:45.

1. Select the data recording function by pressing the data/timer selector.	
2. Select the time mode (day/hour/minute) by pressing and releasing the mode selector.	
3. When the position selector is pressed once, the colon will start flashing. When it is pressed again, 30 (minute) will start flashing.	
4. Press the number set button while 30 is flashing until 45 appears.	
5. Correct 10 (hour) to 17 following the same procedures as in steps 3 and 4.	
6. Press the position selector once again to stop the flashing.	

● indicates button is pressed.

Note:

Changing the day is possible only when in the date mode. (Please see p. 13)







(3) Setting the Arbitrary 6-digit Code

You can set each 2-digit unit of the arbitrary 6-digit code from 00 to 99 plus the letters A through F. This mode can be used to order your pictures for easy filing.

Each 2-digit unit advances in the rotating sequence of 00→99→ (arbitrary number) →A→b→C→d→E→F→blank→00. If you want to set the number or the letter quickly, hold down the number set button continuously and the display will advance rapidly.

EXAMPLE

When you want to set "b 12 34".

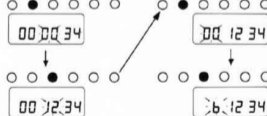




1. Select the date recording function by pressing the data/timer selector.	
2. Select the arbitrary 6-digit code mode (00 00 00) by pressing and releasing the mode selector.	
3. When the position selector is pressed once, the "00" on the right will start flashing.	
4. Press the number set button while the "00" is flashing until 34 appears.	
5. Correct the 00 in the middle to 12 and then the 00 on the left to b following the same procedures as in steps 3 and 4.	
6. Press the position selector once again to stop the flashing.	

● indicates button is pressed.

(4) Setting the 4-digit Frame Counter Number

You can record the frame counter number from Fc 00 01 up to Fc 99 99 on the film in sequence.

EXAMPLE

<p>1. Select the data recording function by pressing the data/timer selector.</p>	
<p>2. Select the 4-digit frame counter number mode (Fc 00 00) by pressing and releasing the mode selector.</p>	
<p>3. When the position selector is pressed once, the right 2 digits (00) will start flashing.</p>	
<p>4. Press the number set button once while the 00 is flashing to set 01.</p>	
<p>5. Press and release the position selector twice to stop the flashing. The frame counter reading automatically advances with the frame counter of the camera, as each exposure is made.</p>	

● indicates button is pressed.

Notes:

- If you want to start the frame counter reading from Fc 00 01 again on the second roll of your film, reset to Fc 00 01 again.
- If you want to continue the sequential numbering after your first roll of film has been finished, there is no need to reset the frame counter reading on the second roll of film. The sequential number is set automatically since the frame counter reading on the LCD panel does not advance during automatic film loading. The frame counter reading from Fc 00 01 to Fc 99 99 can be automatically set and recorded in this manner.
- When continuous shooting is done in this mode at low temperatures (below 5°C/37°F), the recorded number may not appear clearly.
- With the Command Back E1 and 90, recording of the frame counter number cannot follow continuous shooting.

9. Setting Each Mode of the Timer Control Function

General Information & Notes

1. Operation of the timer control function can only be started by pressing the start/stop/clear button. Pushing the camera's shutter button will not start timer control function operation.
2. Operation of the timer control function stops automatically after the specified operations have been completed. However, if you want to manually stop operation, press the start/stop/clear button once again.
3. Operation of the timer control function is possible only when a mode of the timer control function is displayed on the LCD panel. If a data recording function mode is displayed, the timer control function will not operate even when the start/stop/clear button is pressed.
4. To set the timer control function with the Command Back E1 or 90, set the Camera for continuous shooting.
5. Do not set the self-timer on the camera itself when the timer control function is used.








6. Be sure to check that "OFF" is set in the data recording function if you do not want to record any data.
7. If you want to take a picture manually during timer control function operation, it is possible to shoot by pressing the camera's shutter button. Please keep in mind that operation is in progress and the frame counter reading will move forward to the next frame when that mode is set. (See pp. 20-21)

(1) Setting the Self-timer

The self-timer of the Command Back can be set in 1-sec. units to any delay from 1 sec. to 23 hrs., 59 mins., 59 secs.

EXAMPLE

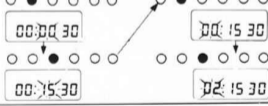When you want to take a picture after a delay of 2 hrs., 15 mins., 30 secs.

1. Select the timer control function by pressing the data/timer selector.	
2. Select the self-timer mode by pressing and releasing the mode selector.	
3. When the position selector is pressed, the 00 on the right will start flashing.	
4. Press the number set button while the 00 is flashing until 30 appears.	
5. Correct the 00 in the middle to 15 and then the 00 on the left to 02 following the same procedures as in steps 3 and 4.	
6. Press the position selector once again to stop the flashing.	
7. To start the self-timer, press the start/stop/clear button once.	








● indicates button is pressed.

(2) Setting the Interval Timer

The interval timer can be set in 1-sec. units to any value from 1 sec. to 23 hrs., 59 mins., 59 secs.

EXAMPLE

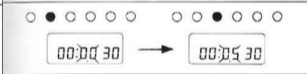When you want to release the shutter every 5 mins., 30 secs.

1. Select the timer control function by pressing the data/timer selector.	
2. Select the interval timer mode by pressing and releasing the mode selector.	
3. When the position selector is pressed, the 00 on the right will start flashing.	
4. Press the number set button while the 00 is flashing until 30 appears.	
5. Correct the 00 in the middle to 05 following the same procedures as in steps 3 and 4. (The 00 on the left should remain the same in this case.)	
6. Press the position selector once again to stop the flashing.	
7. To start the interval timer, press the start/stop/clear button once.	

● indicates button is pressed.

Note:

- In the case of the Command Backs, the interval timer mode must be set longer than the sum of the shutter speed and the winding time. Otherwise, the camera will continue shooting regardless of the interval timer setting. When the EOS-1 or T90 is set for single exposure shooting, the camera stops after a single exposure.

(3) Setting the Long Release Timer


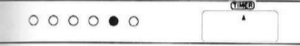

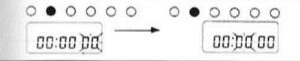

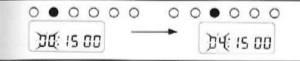


The long release timer mode can be set in 1-sec. units to any value from 1 sec. to 23 hrs., 59 mins., 59 secs.

Bulb must be set on the camera when using the long release timer mode.

When an AC lens is mounted on the T80, the long release timer mode can not be used, since it is impossible to set the camera to bulb when an AC lens is mounted.

EXAMPLE

When you want to keep the shutter open for 4 hrs., and 15 mins.


 










1. Set the camera to "buLb."	
2. Select the timer control function by pressing the data/timer selector.	
3. Select the long release timer mode by pressing and releasing the mode selector.	
4. When the position selector is pressed twice, the 00 in the middle will start flashing. (The 00 on the right should remain the same.)	
5. Press the number set button while the 00 is flashing until 15 appears.	
6. Correct the 00 on the left to 04 following the same procedures as in steps 4 and 5.	
7. Press the position selector once again to stop the flashing.	
8. To start the long release timer, press the start/stop/clear button once.	

(4) Setting the Frame Counter

The number of pictures to be taken can be set from 1 to 99.

EXAMPLE

When you want to take twelve pictures in succession.

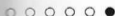1. Select the timer control function by pressing the data/timer selector.		
2. Select the frame counter setting mode (00) by pressing and releasing the mode selector.		
3. When the position selector is pressed once, 00 will start flashing.		
4. Press the number set button while the 00 is flashing until 12 appears.		
5. Press the position selector once again to stop the flashing.		
6. To start taking pictures, press the start/stop/clear button once. After the camera has finished taking the twelve pictures, operation will automatically stop.		

Note:

If the frame counter of the Command Back is set to 00, shooting is impossible even when the start/stop/clear button is pressed.

(5) Multiple Exposure: for the Command Back E1 and 90 only

When taking multiple exposures using the timer function, set the number of frames to "02". In this case, one extra frame will be exposed after shooting.

(6) Automatic Flash Photography: for the Command Back E1 and 90 only

When using an exclusive flash with a built-in SE (Save-Energy) function, the flash is automatically turned off, and the charge starts automatically one minute before shutter release.

10. Combining Various Modes

General Information & Notes

1. The Command Back can be programmed as desired by combining various modes.
 - 1) Combining all modes of the timer control function is possible.
 - 2) Any mode of the data recording function can be combined with any individual mode of the timer control function.
 - 3) Any mode of the data recording function can be combined with multiple modes of the timer control function.

Therefore, there are 11 possible combinations in 1) above, 16 possible combinations in 2) and 44 complex combinations in 3). This is excluding the case of the OFF mode and regarding all three displays of the date mode as one mode. In the case of the Command Back 80, however, there are 4 possible combinations in 1), 12 combinations in 2) and 16 complex combinations in 3). This is because the long release timer mode can not be used when AC lenses are mounted on the T80. Refer to the table below on the type of exposure made with each combination.

ST: Self-timer
 IT: Interval Timer
 LRT: Long Release Timer
 FCS: Frame Counter Setting

	ST	IT	LRT	FCS	Operation	Application
1	●	○	○	○	Long delay self-timer.	Exposure starting time can be set as desired.
2	○	●	○	○	Basically the same as with past interval timers.	Flowers blooming, etc.
3	○	○	●	○	Automatic long exposure control.	Astrophotography, etc.
4	○	○	○	●	Exposure count control and auto-stop.	Limiting the number of continuous exposures.
5	●	○	○	●	Fixed number of exposures taken after a certain period of time.	Same as No. 1 with a limited number of exposures.
6	●	●	○	○	Photography at fixed intervals, starting after a certain period of time.	Allows starting time for interval exposures to be set as desired.
7	●	●	○	●	Limited number of exposures made at fixed intervals, starting after a certain period of time.	Same as No. 6, with addition of limitation on number of exposures.

Notes:

- There are 52 effective combinations excluding Nos. 11 and 15.
- In the case of the Command Back 80 with the AC lens, there are 28 effective combinations including Nos. 1, 2, 4, 5, 6, 7 and 12.


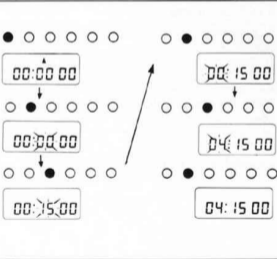
8	●	●	●	○	Long release exposures made at fixed intervals, starting after a certain period of time.	
9	●	●	●	●	Limited number of long release exposures made at fixed intervals, starting after a certain period of time.	
10	●	○	●	○	Long release exposure made after waiting for a certain period of time.	Astrophotography
11	●	○	●	●	(Incorrect setting; operation is same as with No. 10).	Astrophotography
12	○	●	○	●	Limited number of interval time exposures made.	Flowers blooming, etc.
13	○	●	●	○	Long release exposures made at fixed intervals.	
14	○	●	●	●	A limited number of long release exposures made at fixed intervals.	
15	○	○	●	●	(Incorrect setting; operation is same as with No. 3).	Astrophotography

2. When the timer control function is combined with the data recording function, the LCD panel display will appear as follows:
 - 1) The LCD panel automatically switches to the data recording function display as soon as the start/stop/clear button is pressed. The mode which will be recorded is displayed. The timer control function is indicated by the "▲" mark pointing to the mode in operation.
 - 2) If "OFF" is set in the data recording function, the LCD panel will not switch to the data recording function display. In this case, the timer control function mode in operation at the time is displayed and counts down as soon as the start/stop/clear button is pressed.
3. Be sure to set the data recording function to "OFF" if you do not want to print anything.
4. Do not set the self-timer on the camera itself when the timer-control function is used.

5. If the frame counter is set to 00 while any other mode of the timer control function is set, the number of exposures will not be limited; the camera will continue to take pictures until the end of the roll is reached. (See p. 29)
6. When the data recording function and the timer control function are used together at low temperatures (less than -10°C or 22°F), please use the self-timer mode at a setting of approx. 5 secs. This is because the response speed of the LCD is reduced at low temperatures.
7. Be sure to cover the camera viewfinder with the eyepiece cover to keep stray light from entering at the rear.

EXAMPLE 1

When you want to use the interval timer mode set at 4 hrs., 15 mins., and the long release timer mode set at 10 secs.

1. Set the camera to "buLb."	
2. Select the timer control function by pressing the data/timer selector.	
3. Select the interval timer mode and set it to 04:15 00.	

<p>4. Select the long release timer mode and set it to 00:00 10.</p>	
<p>5. Press the start/stop/clear button to start operation.</p>	

Note:
Be sure that the camera is set to "buLb."

EXAMPLE 2

When you want to use the self-timer mode set at a delay of 45 mins., the interval timer mode set at 1 hr., 30 mins., the long release timer mode set at 20 secs., the frame counter setting mode set at 7 exposures, and the 4-digit frame counter mode to record sequential numbering on the pictures.


<p>1. Set the camera to "buLb."</p>	
<p>2. Select the data recording function by pressing the data/timer selector.</p>	
<p>3. Select the 4-digit frame counter mode and set it to Fc 00 01.</p>	
<p>4. Select the timer control function by pressing the data/timer selector.</p>	

<p>5. Select the self-timer mode and set it to 00:45 00.</p>	
<p>6. Select the interval timer mode and set it to 01:30 00.</p>	

<p>7. Select the long release timer mode and set it to 00:00 20.</p>	
<p>8. Select the frame counter setting mode and set it to 07.</p>	
<p>9. Press the start/stop/clear button to start operation.</p>	


Note:
Be sure that the camera is set to "buLb."

11. Replacing the Battery

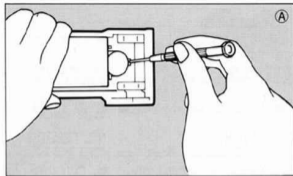


When the "◀" mark appears to the right of "BATTERY" on the Command Back 70 or 80, the battery has become exhausted. With the Command Back E1 and 90, the "◀" mark will appear to the right of the "☐" mark. At this time, replace the battery promptly as instructed below.

- Battery type: Lithium 3V, CR2025 (Coin-shaped)
 - Battery life: Approx. 4 years
 - A battery is loaded in the Command Back when purchased.
- 1) Open the back cover.
 - 2) Using a Phillips-head screwdriver, unscrew the retaining screw to remove the battery chamber cover.

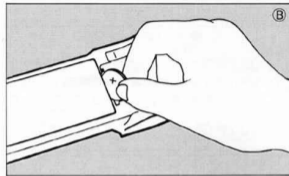

- 3) Insert the tip of the screwdriver into the chamber and then push the battery to the left. The battery will pop up (illus. A).
- 4) Wait for at least 15 seconds after removing the old battery and then load the new battery with the "+" side facing up as indicated on the outside of the battery chamber cover (illus. B).
- 5) To load the new battery, first insert one side into the chamber and then press it to the left with your finger until it will go no further (illus. C).
- 6) Finally, slide the battery slightly to the right and lock it into place.
- 7) Retighten the retaining screw.

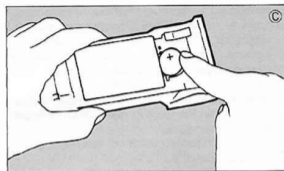

The Command Back's settings upon completion of this procedure will be as follows.

Date: January 1, 1983 (Command Back 70 and 80); January 1, 1985 (Command Back E1 and 90)

Time: 00 00:00

Film speed: ISO 100

Timer function: Completely cleared (all zeros).

Initialization is completed within 10 seconds.

Precautions:

- 1) Keep the batteries away from children. If swallowed, contact a physician immediately.
- 2) Do not remove the battery chamber cover except when the battery is being replaced.

12. Liquid Crystal Display

Liquid crystal is used in the display area and other parts for data recording. There is a possibility that a lack of contrast or blur in the digital display may occur after about five years of normal use. If this should occur, please contact an authorized Canon service facility for replacement. (Replacement will be at the owner's expense.)

Specifications

Used with: Canon T70 (Command Back 70)
Canon T80 (Command Back 80)
Canon EOS-1 (Command Back E1)
Canon T90 (Command Back 90)

Attachment: Exchanges with camera's back cover.

Type: Fully automatic data back with LCD panel, quartz digital auto-calendar and timer control function. (However, film speed must be set manually on the Command Back 70 and 80.)

Data recording function:

- 1) Four modes plus non-recording (OFF)
 - a) Year/month/day (switchable to day/month/year or month/day/year)
 - b) Day/hour/minute
 - c) Record number (up to six digits, or A, b, C, d, E, F, or a space)
 - d) Frame counter: Maximum of 4 digits (additive)
 - e) OFF (non-recording)
- 2) External display of data:
Using a 7-segment, 6-digit LCD display that shows what is recorded on the film. (OFF is displayed on the monitor panel only.)
- 3) Position and size of data:
Recorded in the bottom right corner of horizontal frame and is horizontally arrayed. Character height on negative is approx. 0.7 mm.

- 4) Recording system:
Projected onto the film through a transmissive-type LCD. It is coupled to the camera's exposure mechanism, thus exposure of characters is made automatically.
- 5) Exposure confirmation indicator:
An exposure confirmation mark (an LCD indicator) lights on the monitor panel after the exposure has been made.
With the Command Back 90, bars light under the viewfinder of the T90.
- 6) Adjustment of light intensity: Command Back 70 and 80: Switchable between three levels of brightness according to the film speed. The LCD shows the corresponding film speed (25, 100, or 400). Command Back E1 and 90: Automatic settings correspond to film speeds (ISO 25—ISO 1600). Film speed is not displayed. Light intensity compensation for data recording is possible.
- 7) Auto-calendar function:
Programmed for all dates from 1983 (1985 for the Command Back E1 and 90) to 2029. Correction for long and short months and leap years is made automatically.

Timer control function (command function):

Includes three timer modes and a frame counter set mode.

- 1) Timer modes
 - a) Self-timer (shutter is released after a fixed amount of time)
 - b) Interval timer (repeat shots are made at fixed intervals)
 - c) Long release timer (shutter is released and held open continuously for an extended period of time)
 - * All of the above can be set in 1-second units from 1 second to 23 hours, 59 minutes, 59 seconds.
 - * With the Command Back 80, the long release timer can not be used when AC lenses are mounted.
 - d) Frame counter set (the number of exposures to be made can be set from 1 to 99; the camera stops automatically after the set number of exposures has been made)

- 2) Timer control function display:
Selection of the above modes is done by moving a triangular LCD mark (▲). Data for modes a)—c) are indicated by a 7-segment, 6-digit LCD display. Data for mode d) are indicated by a 7-segment, 2-digit LCD display which shows the number of exposures set.
- 3) Use of the timer control function modes in combination:
Any combination of modes a) through d) is possible.
- 4) Timer control function operation:
Started by pressing the start/stop/clear button, and stopped by pressing that button again. The (▲) mark flashes on and off during operation.

Timer control and data recording functions in combination:

Can be used in combination. Data set prior to the selection of the timer mode is coupled to exposure and is automatically recorded on the film. Display of exposure data on the monitor display panel is resumed when timer control function operation begins. If the Command Back's data recording function is the OFF mode, no data is recorded and the timer control function information is displayed on the monitor display panel during operation.

Digital clock accuracy:

Accurate to within ± 15 seconds per month at 10°C — 30°C and 60% RH.

Power supply:

Type—3 V, provided by one coin-type lithium battery (CR2025)

Battery life and replacement warning:

About 4 years. The Command Back is equipped with an automatic battery check function which turns on a monitor panel indicator (◀) when it is time for the battery to be replaced.

Dimensions:

Command Back 70—130.2(W) \times 59.1(H) \times 23.8(D)
mm

(5-1/8" \times 2-5/16" \times 15/16")

Command Back 80—130.5(W) \times 61.8(H) \times 26.2(D)
mm

(5-1/8" \times 2-7/16" \times 1-1/16")

Command Back E1—152.5(W) \times 60.1(H) \times 28.2(D)
mm

(6" \times 2-3/8" \times 1-1/8")

Command Back 90—148.4(W) \times 58.4(H) \times 26.5(D)
mm

(5-13/16" \times 2-5/16" \times 1-1/16")

Weight: Command Back 70—65 g (2.3 oz.)

Command Back 80—70 g (2.5 oz.)

Command Back E1—85 g (2.9 oz.)

Command Back 90—75 g (2.6 oz.)

Subject to change without notice.

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.