

model


VI-T

model

VI-L

INSTRUCTIONS

Canon

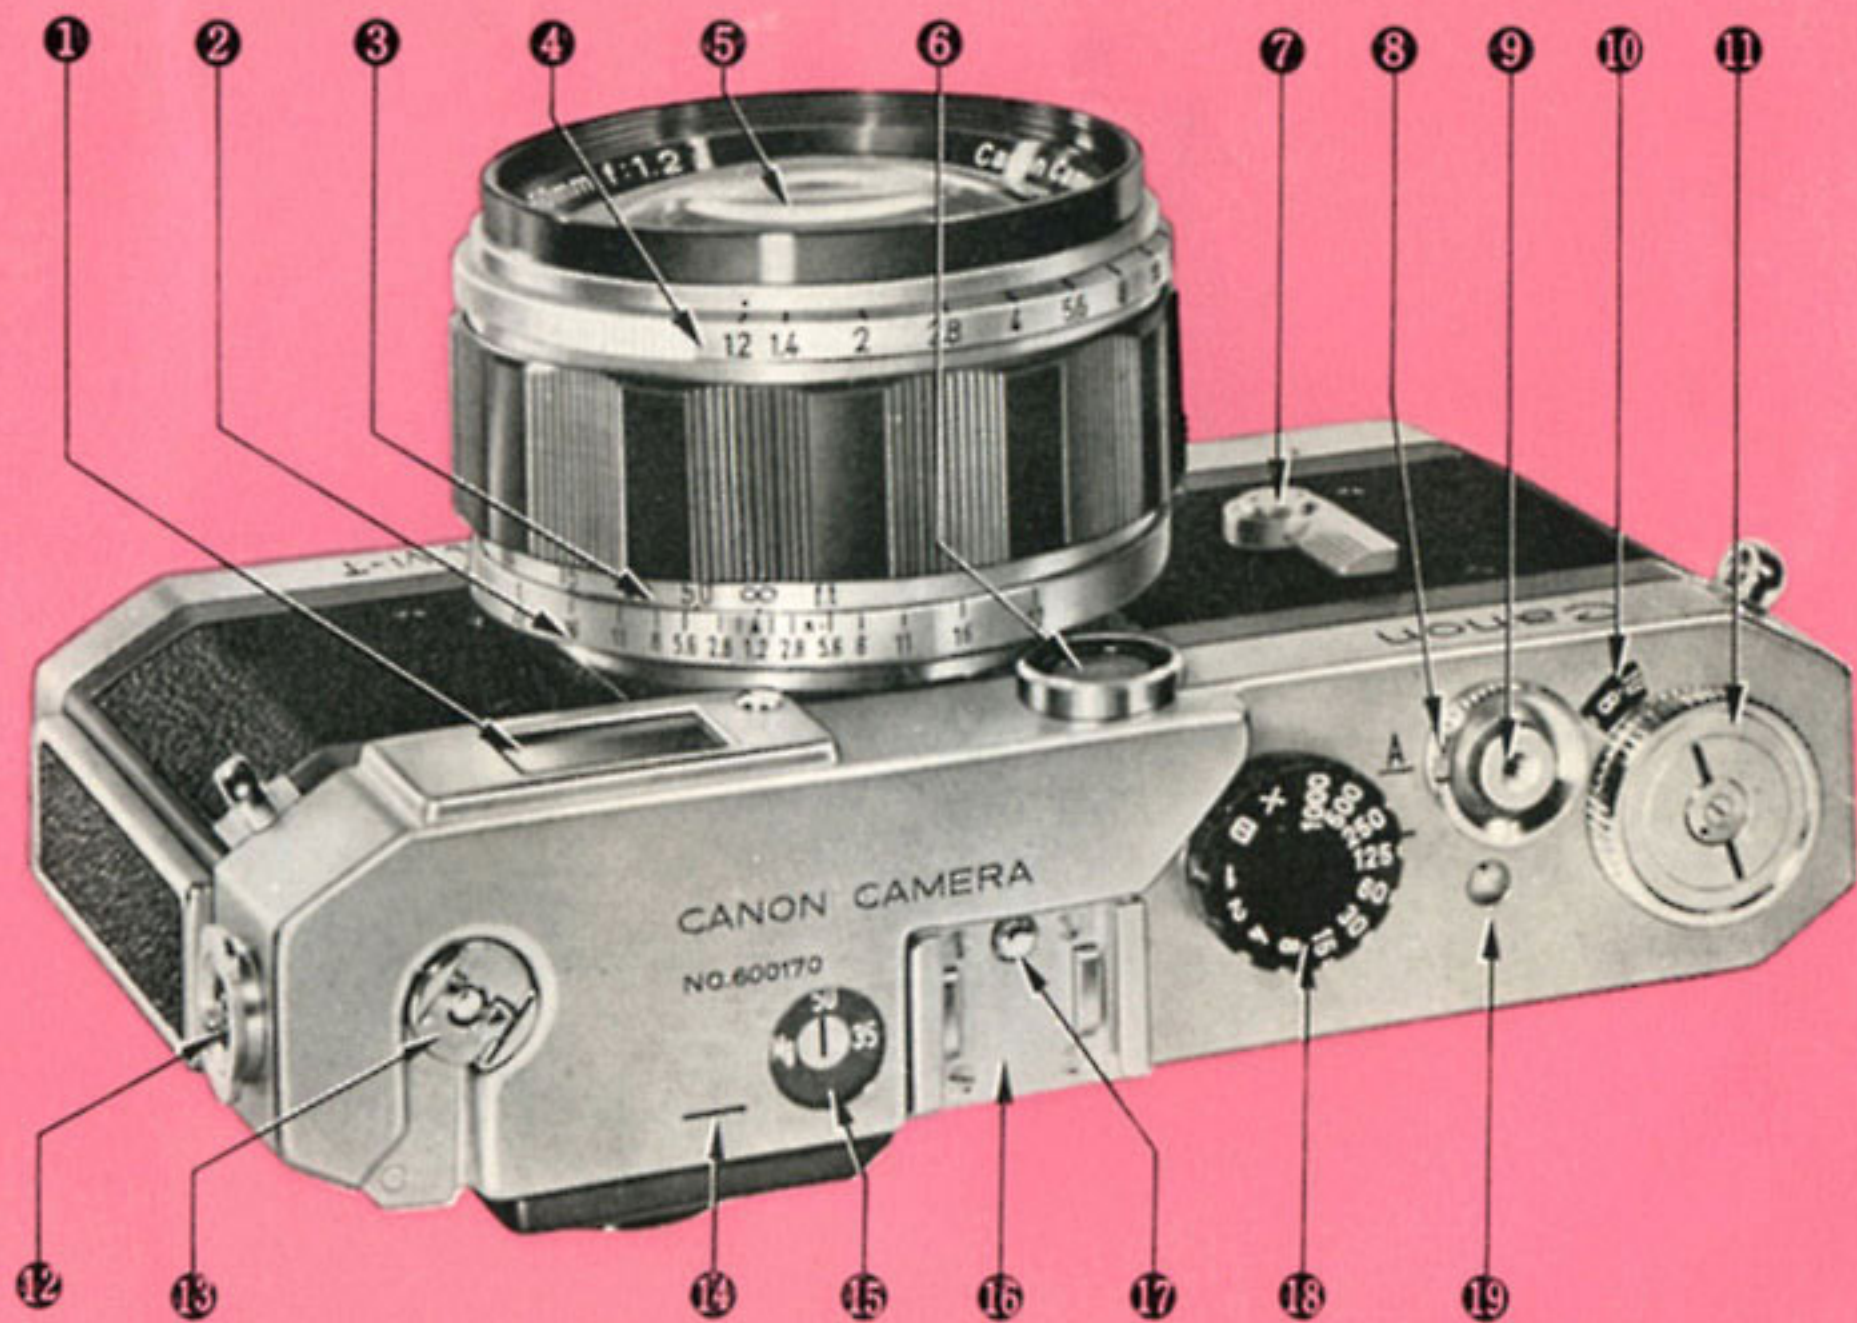

Canon VI-T VI-L

- ① Range-Viewfinder Window
- ② Lens Depth-of-Field Scale
- ③ Lens Distance Scale
- ④ Lens Aperture Scale
- ⑤ Canon Lens
- ⑥ Rangefinder Window
- ⑦ Self-Timer
- ⑧ Film Rewind Ring
- ⑨ Shutter Release Button
- ⑩ Film Frame Counting Dial
- ⑪ Film Winding Knob
- ⑫ Flash Unit Connector Socket
- ⑬ Film Rewind Crank
- ⑭ Film Plane Mark
- ⑮ Viewfinder Dial
- ⑯ Accessory Clip
- ⑰ Automatic Parallax Adjustment Pin
- ⑱ Single Pivot Shutter Speed Dial
- ⑲ Film Transport Indicator

(Continued on the last page)



CANON CAMERA CO., INC. Tokyo, Japan

CANON CAMERA CO., INC.

312 SHIMO-MARUKO-CHO, OHTA-KU, TOKYO

CANON - NEW YORK BRANCH

404 FOURTH AVENUE, NEW YORK 16, N.Y.



CANON-EUROPE DISTRIBUTION CENTER

40 RUE DU STAND, GENEVA, SWITZERLAND

CONTENTS

FILM WINDING.....	6	FILM TYPE INDICATOR	18
SETTING SHUTTER SPEED.....	8	UNLOADING	19
FOCUSING AND COMPOSING ...	9	SELF-TIMER.....	20
RANGE VIEWFINDER SELECTOR	10	CHANGING LENSES	21
USING THE VIEWFINDER WITH PARALLAX CORRECTION	11	CANON-METER	22
SETTING LENS APERTURE.....	12	USING THE CANON-METER	23
DEPTH-OF-FIELD	13	CHANGING THE SENSITIVITY OF THE CANON-METER	24
INFRARED PHOTOGRAPHY	14	DOUBLE EXPOSURES.....	25
EXPOSING	15	FLASH SYNCHRONIZATION	26
FILM LOADING.....	16~17	LOADING FILM INTO CANON MAGAZINE	28
EXPOSURE COUNTER DIAL	18	DEPTH-OF-FIELD TABLES	30
		CARE OF YOUR CAMERA.....	32

WINDING

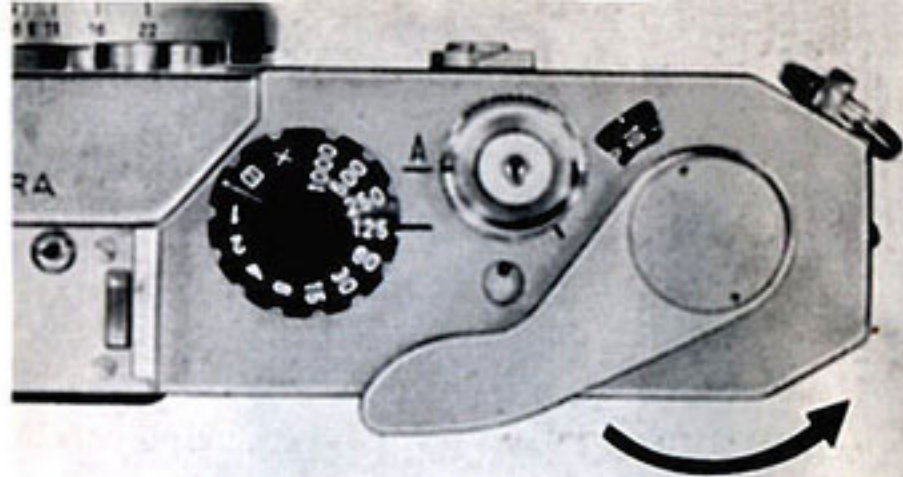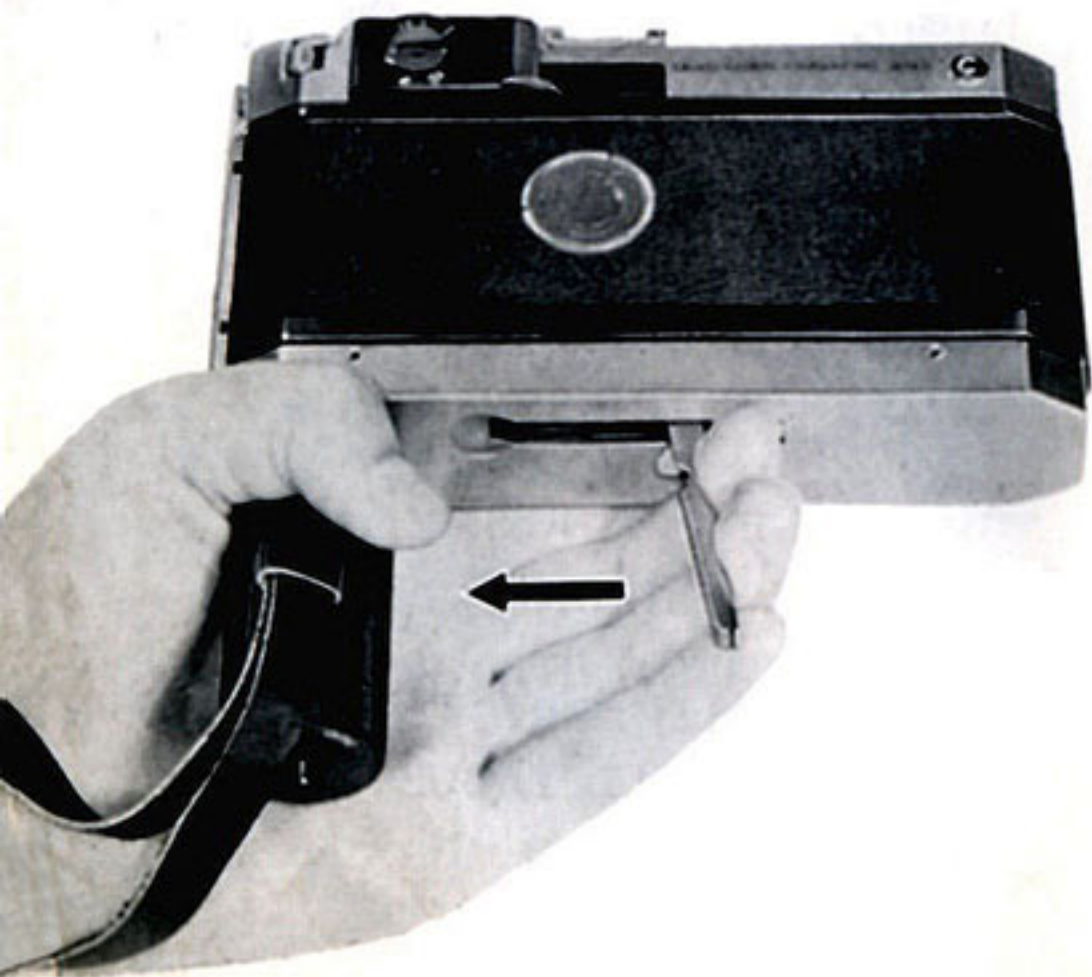




The Canon VI-T and VI-L features the fastest built-in Rapid Wind mechanism...winds the film to the next exposure...recocks the shutter. At the same time, it advances the Film Frame Counting Dial to the next number.

Pull out the Rapid Wind Trigger (29) from its bed in the camera base plate and extend to a vertical position. Pull the trigger the full length of its run. The trigger will automatically return to its original vertical position when released.

For the last three frames on your film, pull the Rapid Wind Trigger very gently or you may tear the film from the spool.

A Canon Rapid Wind Pistol Grip (with wrist strap) is available as an accessory.

For Model VI-L, one-stroke motion of lever on top of the camera winds the film, cocks the shutter, and advances Film Counter Dial.

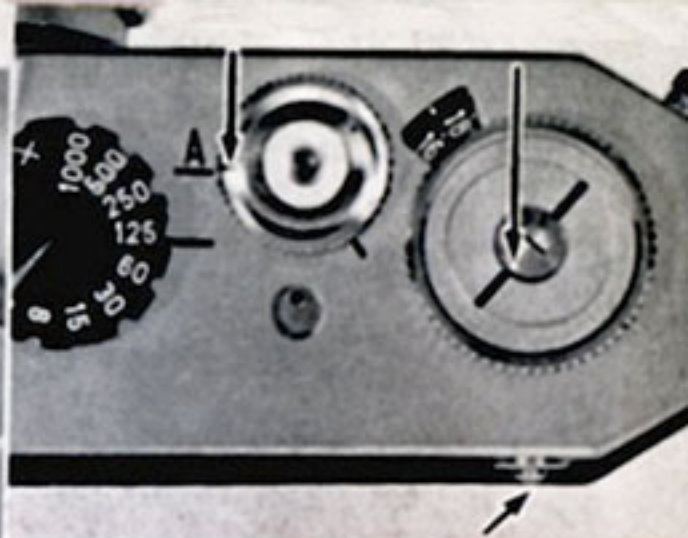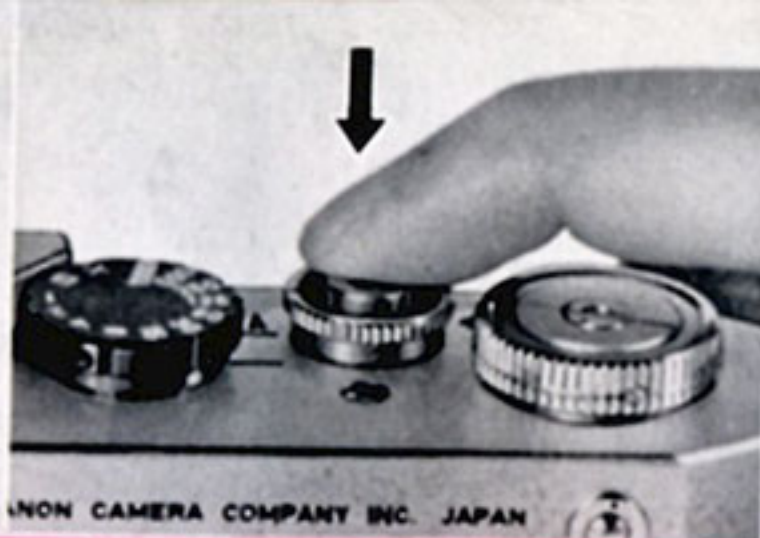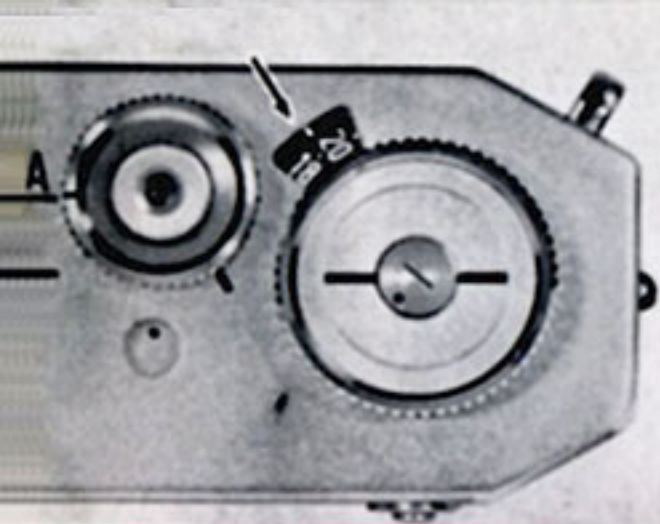

For copying stand work, or when a tripod is used, the Manual Film Winding Knob (11) is used instead of the Rapid Wind Trigger.

Align engraved black dot and black line on the top of the Manual Film Winding Knob and raise the knob it action position.


Turn the knob clockwise until it locks in position. Your film has then been advanced one frame...the shutter has been rewound...the Film Frame Counting Dial set to the next number. Keep the Rapid Wind Trigger in its unraised position.

Before using the Rapid Wind Trigger again, be sure to return the Manual Film Winding Knob back to original position by depressing the Manual Film Winding Knob Release Button (23).

SETTING SHUTTER SPEED

The shutter can be adjusted to speeds of 1 second, and 1/2, 1/4, 1/8, 1/15, 1/30, 1/60, 1/125, 1/250, 1/500, 1/1000 of a second as well as B (bulb) exposures. Each exposure time is half that of the previous one. This method of adjusting is convenient when calculating the relevant lens aperture.

In adjusting the shutter speed, turn the shutter dial either to the right or left until the desired reading is obtained. With the scale set at B (bulb), the shutter will open, and stay open, until you release pressure from the shutter button. It is used, therefore, for exposure times in excess of one second. The X scale reading is used for speedlight (strobeflash) synchronization. The shutter speed is approximately 1/50th of a second; however, the effective time of the exposure in this case becomes faster depending on the performance of the flash light. When time exposure is required, set the dial to B and use a cable release with lock.

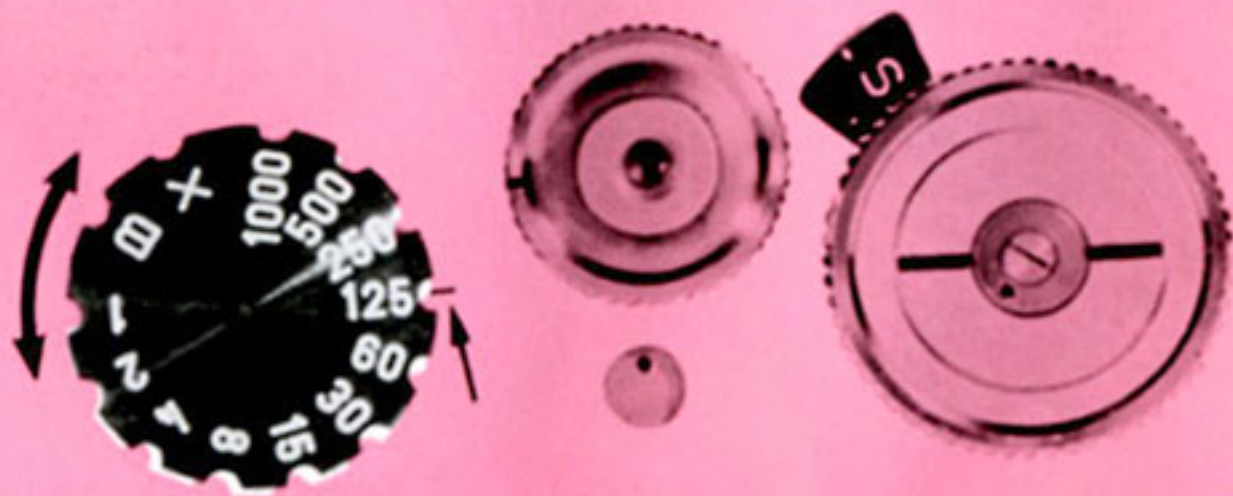

On the Canon VI-T and VI-L, focusing and composing can be done at the same time. When you look through the Range-Viewfinder Eyepiece (20), you will see two images. By releasing the Lens Focusing Lever and rotating the lens barrel, the two images of the object you are focusing upon coincide. At this point of coincidence your camera is *in focus* for the object you are about to photograph.

All Canon Lenses, except those supplied with a reflex housing, couple to Canon Range-Viewfinder mechanism.



Out of focus




In correct focus


FOCUSING & COMPOSING



The image magnification is changed when the Tri-Position Range Viewfinder Selector (21) is turned either to the left or the right. You can select any one among the 35, 50, or Mg selections. Although focusing can be done with any one, when number 35 is selected, the image in the square frame is identical to what would be obtained with a 35 mm lens. When number 50 is used, double white frames can be seen. On the outer white frame is the 50 mm image and in the inner white framed area can be seen an image such as would be taken by a 100 mm lens in life size (1:1). When at the Mg selection, an exclusive magnified selector enables long-range viewfinding. At the 50 reading, which has white frames for 50 mm and 100 mm distance lenses, the viewfinder is automatically regulated for parallax correction.

RANGE VIEWFINDER SELECTOR

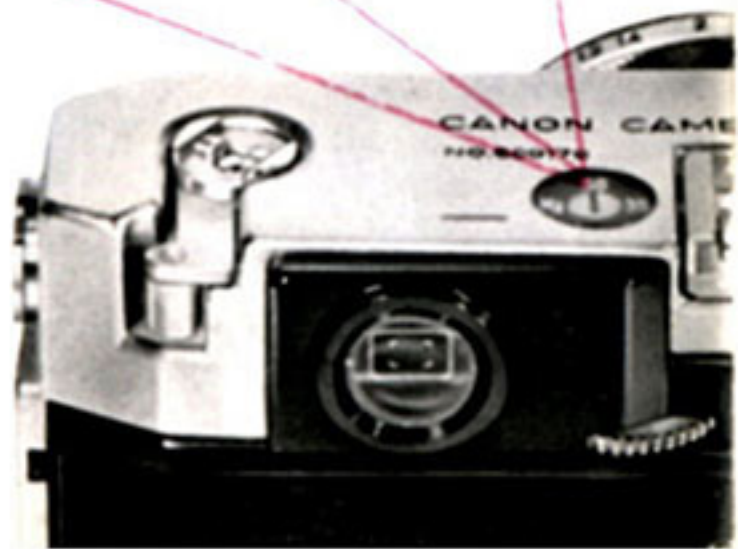

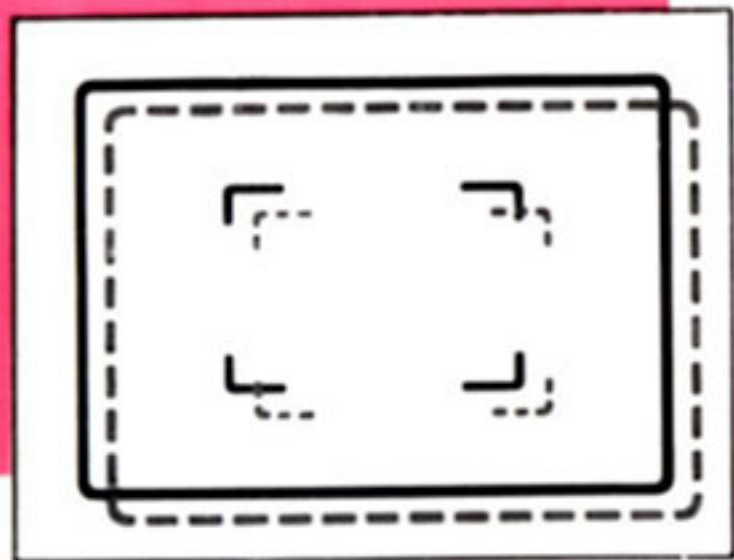

USING THE VIEWFINDER WITH PARALLAX CORRECTION

When the Canon ZoomFinder V, or other auxiliary viewfinders are attached, irrespective of the inter-changeable lens used, parallax error will always be automatically corrected.



SETTING LENS APERTURE (F : STOP)

Set the Lens Aperture Scale (4) by turning the milled ring at the top of the lens until the required f:stop is opposite the index mark.

For correct aperture opening, consult an exposure data card or use the Canon Meter.



Lens aperture	1.2	1.5	1.8	2.0	2.8	(3.5)	4.0	5.6	8.0	11	16
Relative exposure time	.36	.56	.8	1	2	(3)	4	8	16	32	64


DEPTH-OF-FIELD

The Depth-of-Field Scale (2) shows you the range of objects which will also be in focus on the film. This range will vary with the f :stop chosen. The larger the lens aperture, the lesser will be your depth-of-field. For example, with an f :stop of f :5.6 and with the object you have focused on at 25 feet* your camera will give you a sharp focus picture from approximately 16 feet to 55 feet away from the camera. At f :11 you will get a sharp picture from 12 feet to infinity (∞).

* (Illustration shows 25ft. on Lens Distance Scale (3) opposite Distance Indicator Mark.)

Film Plane Mark (16)

This line gives you the exact position of the film plane in your camera. This information is needed for very accurate close-distance photography where a film-to-subject measurement must be taken.

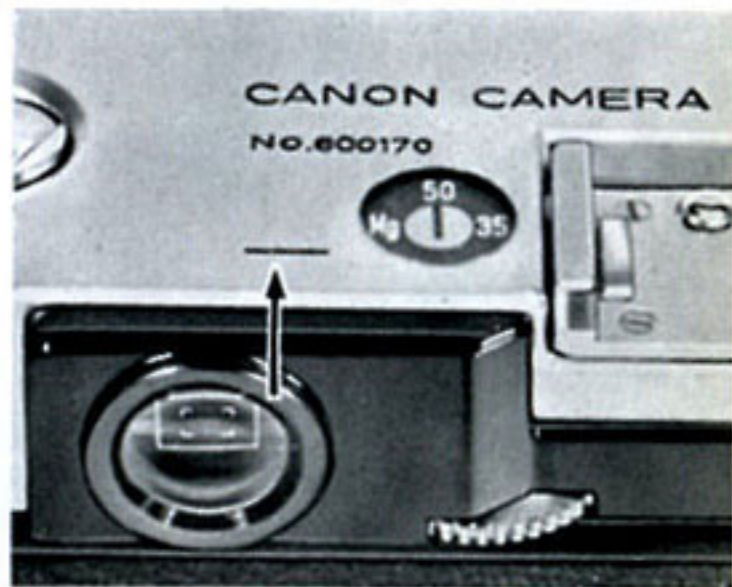

INFRARED PHOTOGRAPHY

On the Depth-of-Field Scale (2) of all Canon Lenses is the letter "R." This is for infrared film. When using this film, focus in the normal way. Read off the distance of the object you are focusing on as shown opposite the Distance Indicator Mark on the Lens Distance Scale (3). Turn the lens barrel until the distance reading is opposite the "R" mark. Your lens is now focused for infrared photography.



You have now completed the following steps :


1. Wound your shutter...ready for your first exposure.
2. Set the speed dial
3. Adjusted the Lens Aperture Scale
4. Focused your lens
5. Composed your picture through the correct Viewfinder setting.

You are now ready to expose your picture. Hold the camera in a vertical or horizontal position, firmly but gently. The camera should be held in both palms and the index finger of your right hand should rest over the Shutter Release Button. Hold your breath and press the Shutter Release Button in a smooth, steady action. Do not jerk the camera.

For exposures longer than 1/15 sec. you should use a tripod and cable release to eliminate movement.

EXPOSING



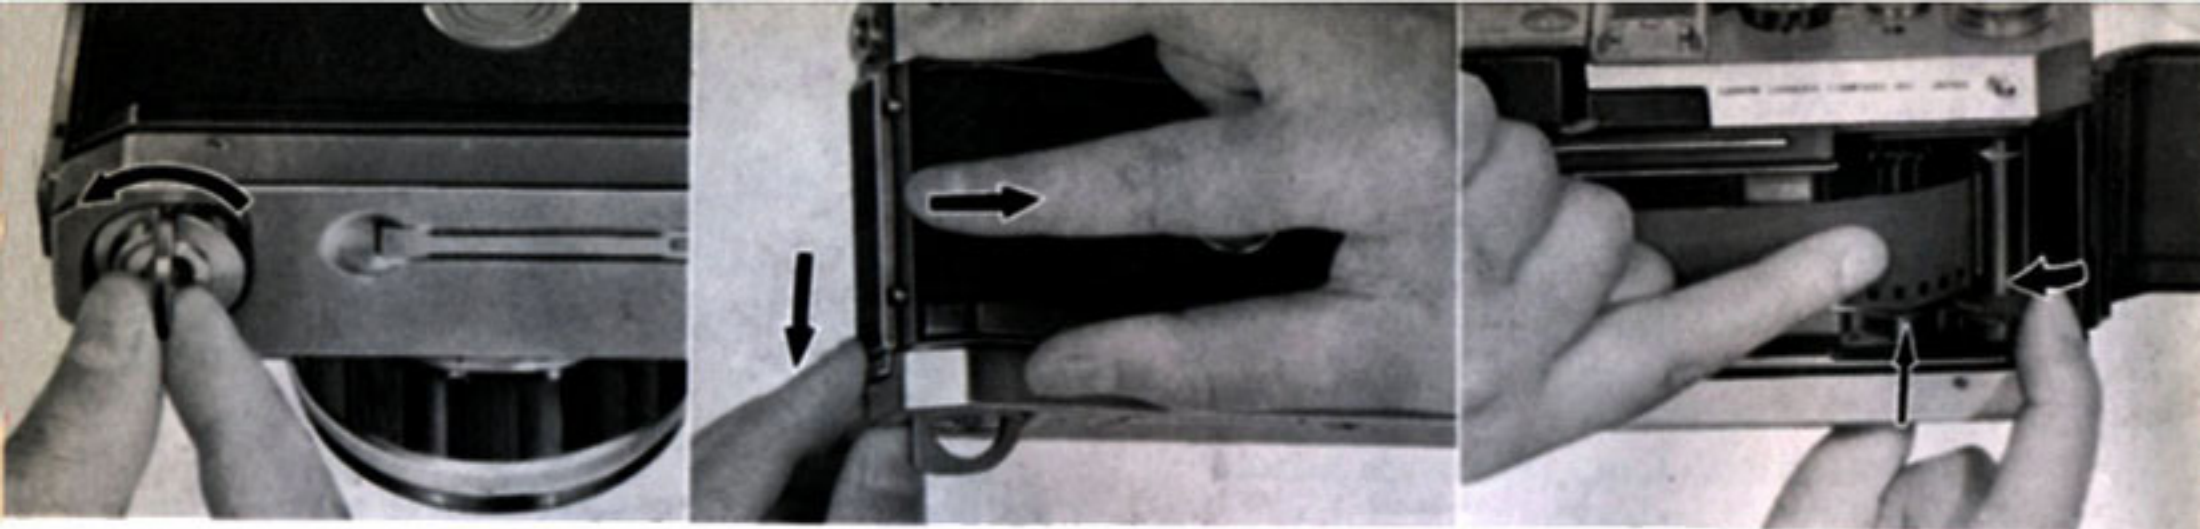


Canon VI-T and VI-L accepts any standard 35 mm film cartridge, as well as Canon Film Magazine V.

To open the camera, turn the Magazine Opening Key (27) counter-clockwise and pull down the Hinged-Back Lock (25).

The camera back will then swing open.

Rotate the Take-up Spool (31) until the groove on the spool permits you to slide the end of the film leader into the groove. Then engage the second perforated hole of the leader with a small hook inside the groove. Adjust the film so that the film perforations fit the teeth of the Film Sprocket (30).

Be sure the dull (emulsion) side of the film faces the lens.

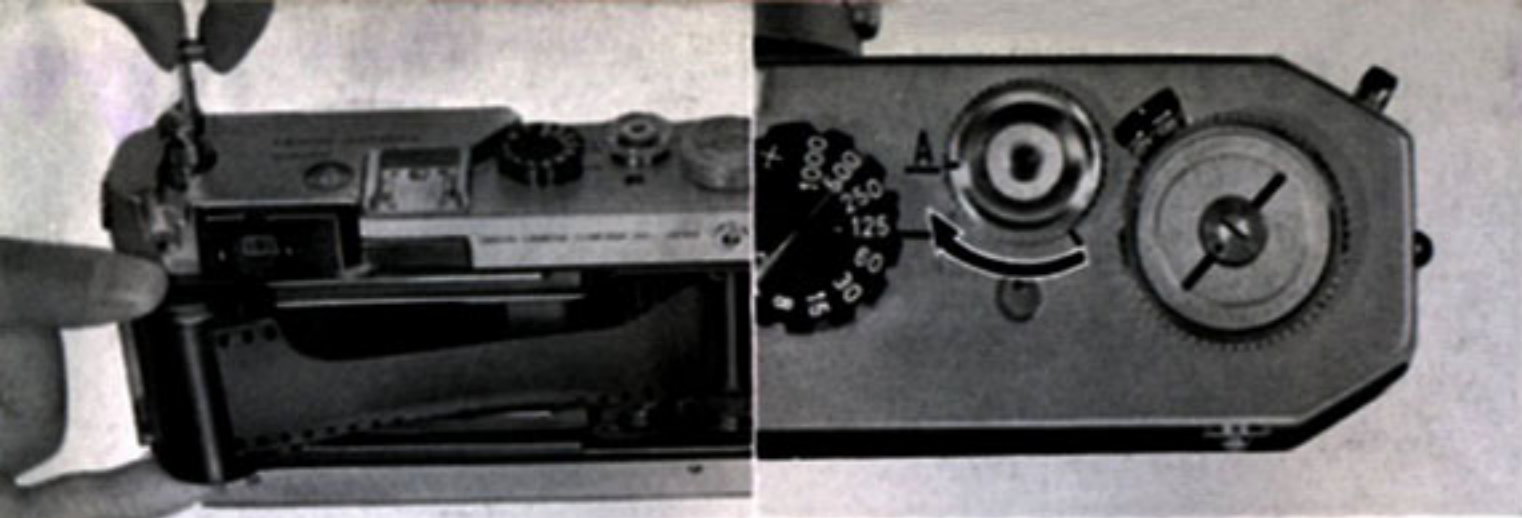


Lift up the Rewind Crank (13).

Put the film cartridge in the recess directly beneath the Rewind Crank. Depress the Film Rewind Crank (13) again to lock the film cartridge in place.

With your thumb on the knurled lower end of the Take-up Spool (31), turn the spool clockwise half a turn until the film is taut. (Be sure the index line of the Film Rewind Ring (8) points to the "A" position.)

The camera back will lock shut automatically when you close it. Turn the Magazine Opening Key (27) clockwise to "close." Next, wind film one turn and press the Shutter Release Button (9). By doing this you will have cleared the two frames already exposed to light while you were loading.

The red dot on the Film Transport Indicator (19) makes one complete turn each time you advance the film one frame. You will know you have loaded correctly if the indicator line on the Crank Shaft turns counter-clockwise each time you cock the shutter mechanism.

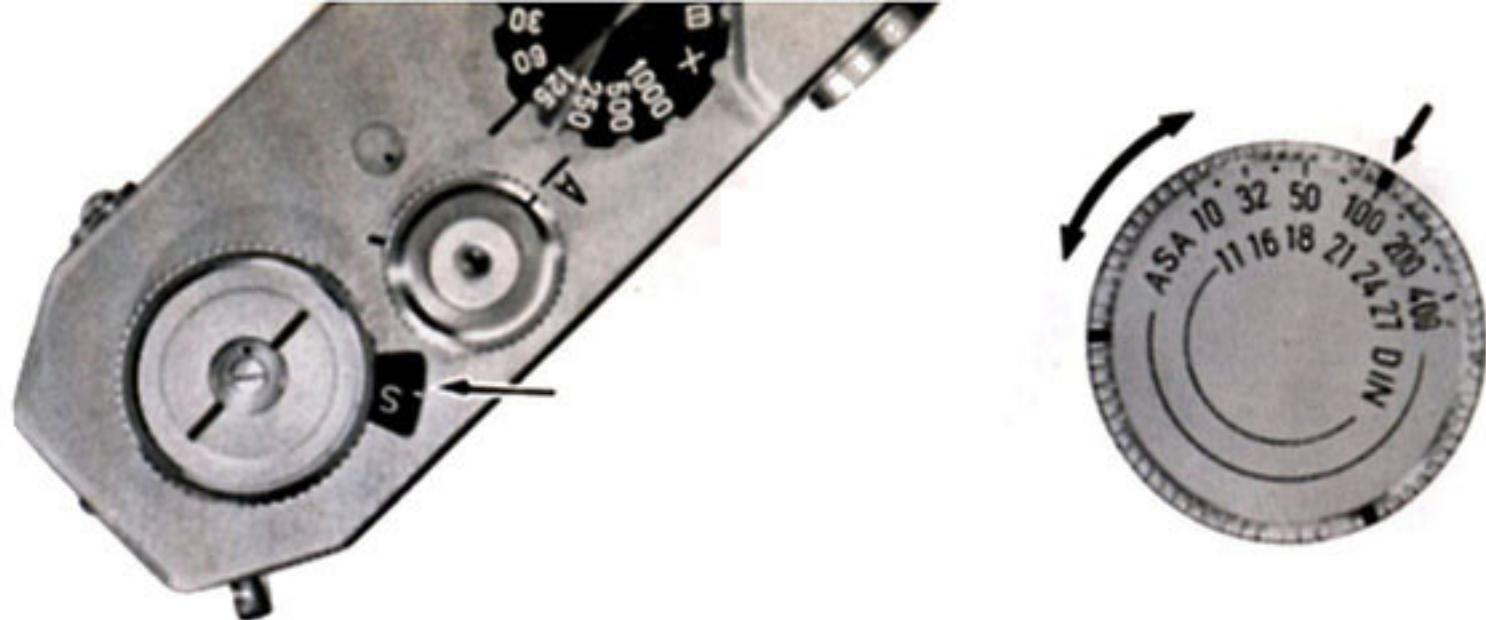

EXPOSURE COUNTER DIAL





The Exposure Counter Dial (10) will return to S position automatically whenever the camera is loaded with new film. At the start of the film, the film counter indicator will be at "S" (start), but when the shutter has been released twice, it will advance to 0. The next time the film is wound it will move to 1.

FILM TYPE INDICATOR

Depending on the type and variety of film in use, the Film Type Indicator Disc (22) is revolved with the top of one's finger until the relevant indicator symbol appears in the indicator window.

Black color is used to indicate black and white film, blue for daylight type color film, and red to show for tungsten color film.

This indicator also gives both ASA and DIN film sensitivity readings.

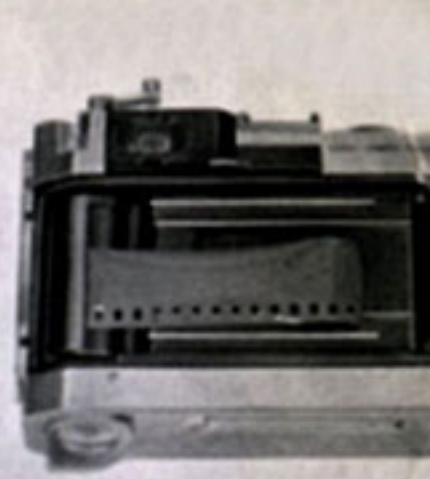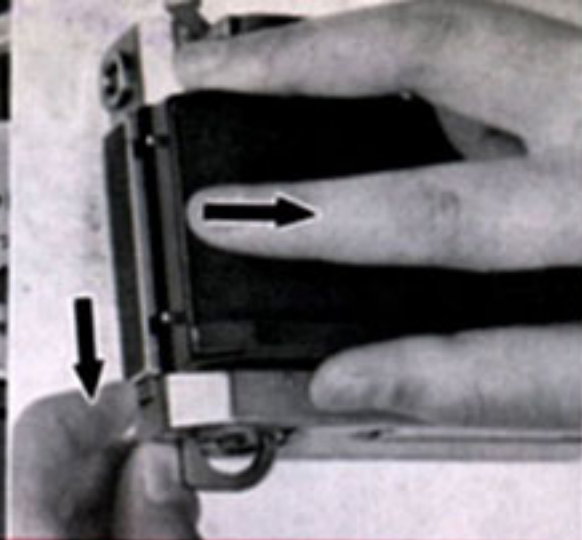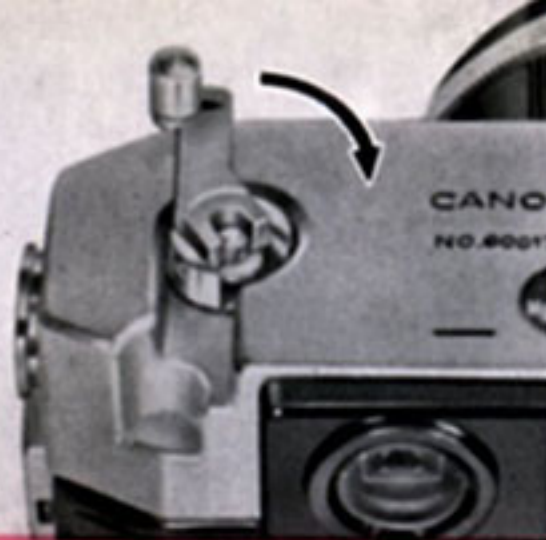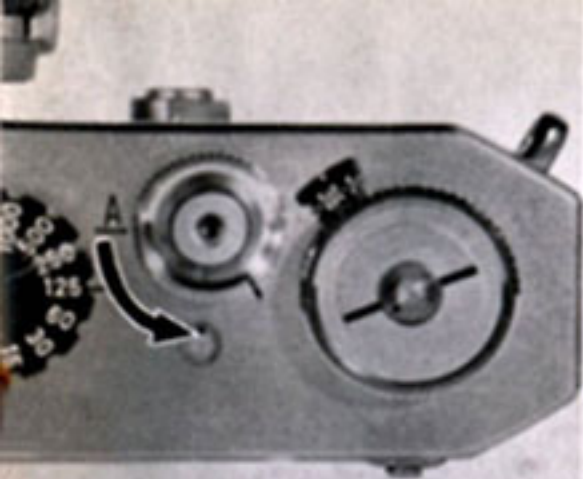

1. Turn the Film Rewind Ring (8) from "A" to the Film Rewind Mark (▲).
2. Raise the Rewind Crank (13) into operating position as illustrated above. Turn it clockwise, as shown by the arrow, until all the film has been wound back into the original cartridge. Tension on the Film Rewind Crank will cease as soon as this has been done and the Film Transport Indicator (19) will also stop rotating. As long as the Film Transport Indicator rotates clockwise, film is being rewound in the camera. One complete turn indicates one frame rewind.
3. Open the camera back.
4. Pull out the Rewind Crank (13) and take out the film cartridge.

SELF-TIMER

A built-in Self-Timer (7) is incorporated in the Canon VI-T and VI-L. When you are ready to take a picture, turn the Self-Timer Lever (7) counter-clockwise until it turns no farther. This can be done before or after cocking the shutter. The timing device will begin working as soon as you depress the Shutter Release Button (9). (You will hear a buzz.) The shutter will be actuated approximately 10 seconds later.

Note: Once you have cocked the Self-Timer it cannot be released unless the Shutter Button is depressed.

When taking Self-Timer pictures, it is recommended that you use a Canon Cable Release and Camera Holder with a sturdy tripod.



All Canon Lenses are interchangeable and feature a standard, screw-in lens mount, which has been proved to be the most accurate and durable...and has the greatest area of lens-to-camera contact of any type of camera connection.

To change your lens, place the Lens Cap over the top of the lens. Grip the lens barrel at its base and apply gentle pressure until the lens is loosened. Continue turning until the lens is completely unscrewed. Be sure that the camera (when loaded with film) is in the shade. Be sure to cover the lens base with a Dust Cap as soon as possible.

To replace a lens, keep Lens Cap on the lens but remove Base Cap. Turn the lens first counter-clockwise for half a turn to insure that the lens threads and the camera mount flange do not cross. Next, turn clockwise until the lens is securely in place. Do not force the lens any farther.

Always tighten a lens by its base-not by the top. If the lens has a Lens Focusing Lever, be sure this is in the locked (∞) position.


Note: When mounting or dismounting a lens of 85 mm or greater focal length, be sure to set it at the nearest footage setting to protect the camera's rangefinder mechanism.



CHANGING LENSES

When attaching the Canon-Meter both the shutter dial and the lens aperture should be set.

First see that the Combination Dial is set to the same indicator number as is shown on the shutter dial. Give one pull outward on the Combination Dial, and push the Canon-Meter into the accessory clip. Then, push the combination dial back into position. See that the three cogs at the bottom are on the cogwheel of the shutter dial.

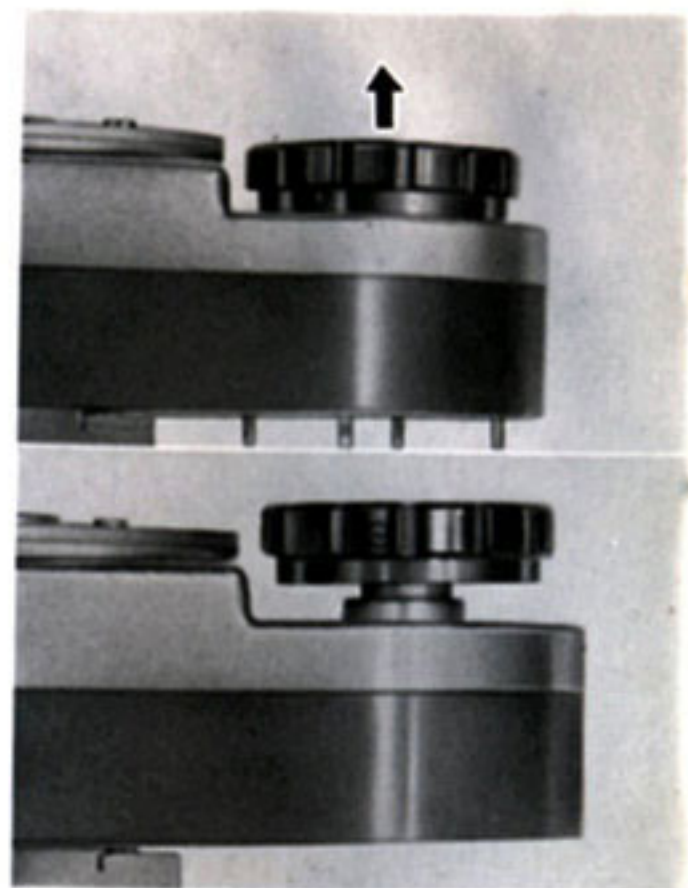


CANON-METER

1. Push in the Combination Dial and turn the Meter Dial until the figure agrees with that of the film sensitivity in use.
2. Hold the Canon Meter against the subject-facing the window of the Canon-Meter at the subject-turn the Combination Dial until the needle above the Meter Dial agrees with the pre-arranged lens aperture reading.
The figure is found below the guide line where the needle stops. When this is done, the shutter dial will automatically be set to the correct exposure time.

Instead of first deciding on the lens aperture :

1. Move the shutter dial to set the shutter speed.
2. Face the Canon Meter window to the subject and then adjust the lens aperture to agree with the reading which is indicated by the needle on the Light Meter Indicator. In this manner the relevant exposure setting is obtained.

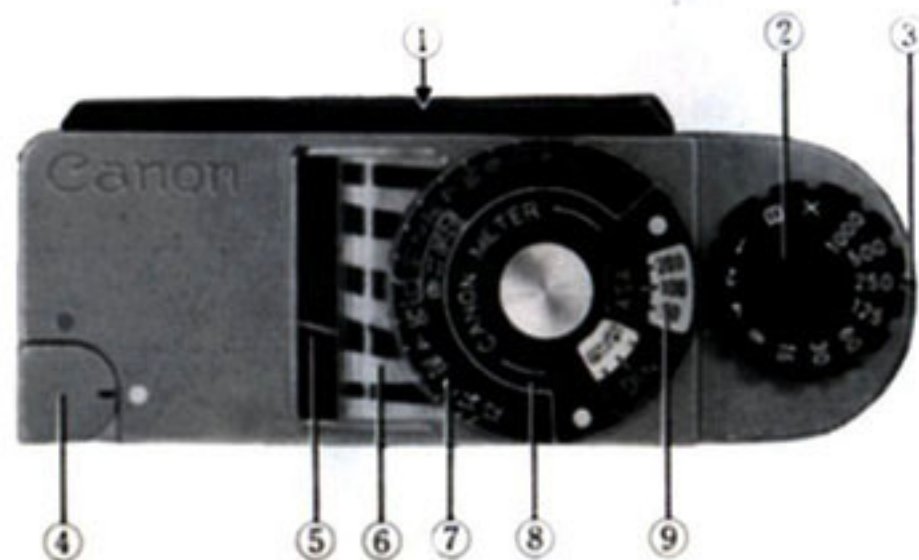

- ① Light Meter Window
- ② Combination Shutter Dial
- ③ Shutter Speed Index Mark
- ④ Sensitivity Lever
- ⑤ Light Meter Needle
- ⑥ Guide Line for Aperture Reading
- ⑦ Aperture Scale
- ⑧ Canon-Meter Dial
- ⑨ Film Sensitivity Indicator

CHANGING THE SENSITIVITY OF THE LIGHT METER

If the subject is too bright causing the Canon Meter Needle to react too strongly, or if the photo subject is too dark to give sufficient impulse to the needle, the light meter sensitivity is changed by moving the Sensitivity Lever on the light meter. When the lever indicator shows orange it is suitable for a clear, bright subject. The white indicator is for a dark subject. When the subject is very bright use the orange figures on the needle point readings. For dark, or gloomy, subjects the white figures should be used.


Using the Booster, the sensitivity of the Canon Meter will increase by 4 times or 2 stops on I.V Scale. An incident light attachment comes with the Canon Meter.




Incident Light Attachment



Booster

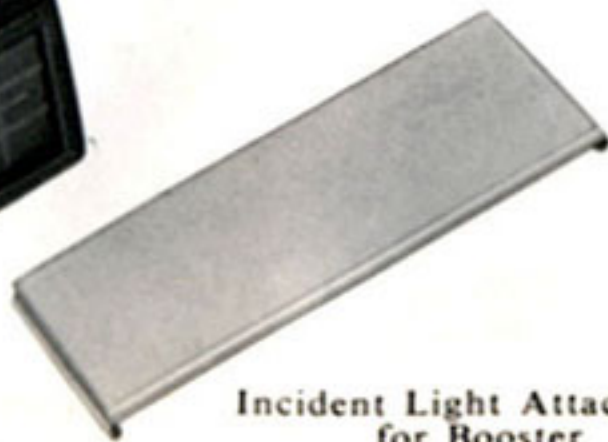

Incident Light Attachment
for Booster

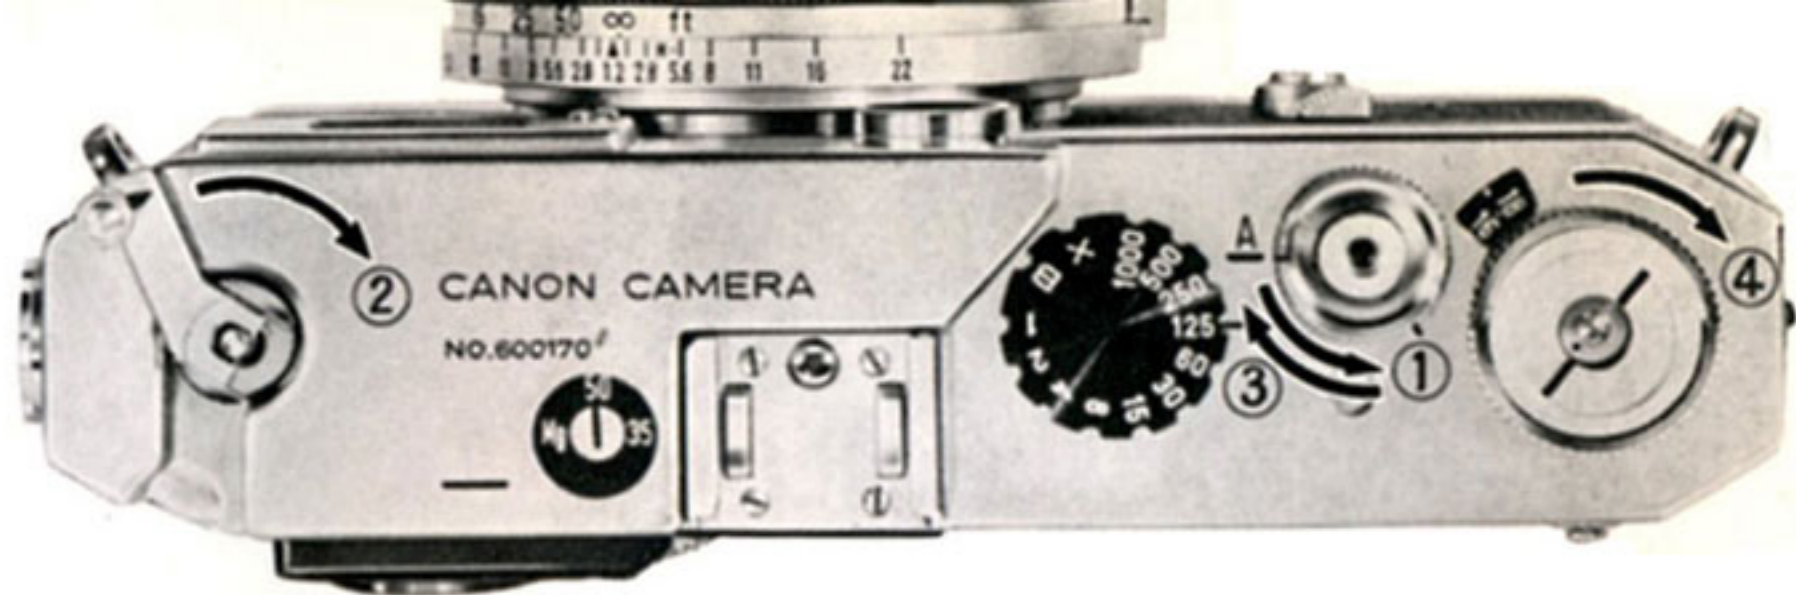


DOUBLE EXPOSURES

1. First turn the Film Rewind Ring (2) from its position A anti-clockwise as far as it will go.
2. While watching the Film Transport Indicator, turn the Film Rewind Crank to the right and stop when the Film Transport Indicator has made about one and a half turns.
3. Return the winding ring to position A.
4. Next while pulling the trigger and using the shutter, a double exposure

can be taken on the same film. By repeating the same operation, multiple exposures can be obtained on the same film. By turning the Film Transport Indicator to twice, or more times, double exposure can be obtained on two or, if necessary, more sections of the film. When the shutter is opened accidentally and the lens cap is still on, the film can be wound back by using this method.

FLASH SYNCHRONIZATION

When the Canon Flash Unit V is fitted directly into the Flash Unit Connector Socket (12), and when the shutter button is pressed, it is automatically adjusted for the various shutter speeds synchroflash operation.

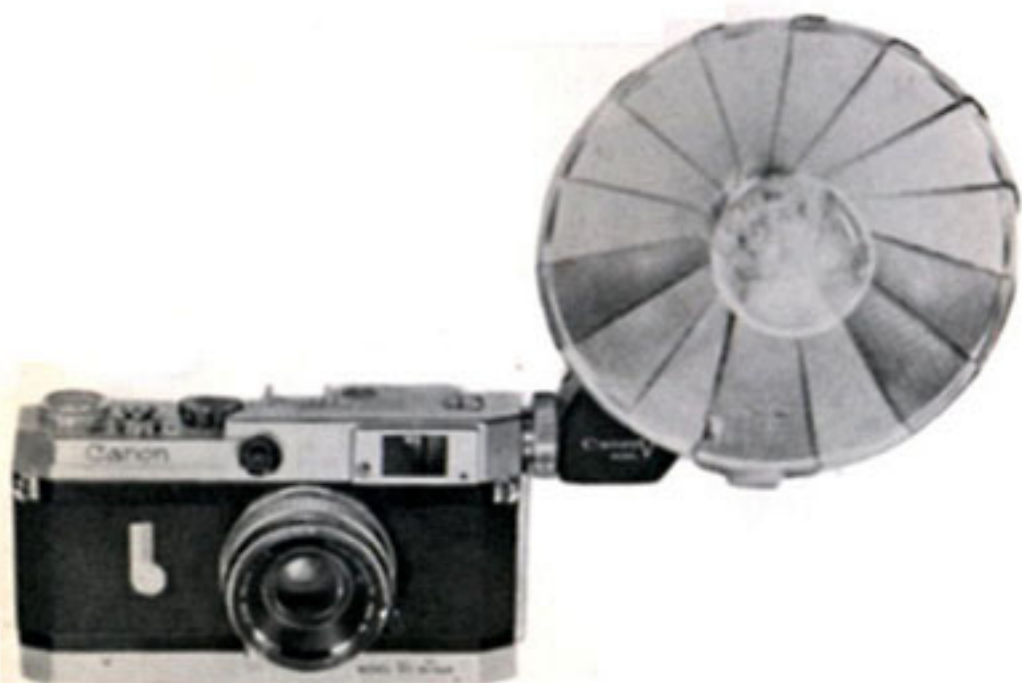

Consult the table below for shutter speeds

FLASH IN USE	SHUTTER SPEED
FP Type Bulb	1/1000 ~ 1 sec. (except 1/30)
M Type Bulb	1/250 ~ 1 sec. (except 1/30)
F Type Bulb	1/30 ~ 1 sec.
Speedlight (Electronic Flash)	X (1/55 second)

Note: A lens hood is also necessary when taking flash pictures.



CANON SPEEDLIGHT UNIT

NOTE:

1. For Electronic Flash, turn Shutter, as shown, to "X." The shutter speed at that time will be 1/50 sec.
2. When using "F" type bulbs, be sure the Shutter Speed Dial is at 1/30 sec.


Perfect electrical contact is made when the Canon Flash Unit Model V, or Canon Speedlight Unit Model V, is attached to the Flash Unit Connector Socket (12). No external wiring is necessary and all synchronization is done automatically in the camera itself.

To extend the Flash Unit from the Camera, or to connect a Speedlight Unit of non-Canon make, use a Canon Extension Cord Va (15 ft) or Vb (3 ft).


LOADING FILM INTO MAGAZINE



The Canon Film Magazine V is designed to hold 5¼ feet of 35 mm film. It consists of three parts: Center Spool, Inner Shell, and Outer Shell.

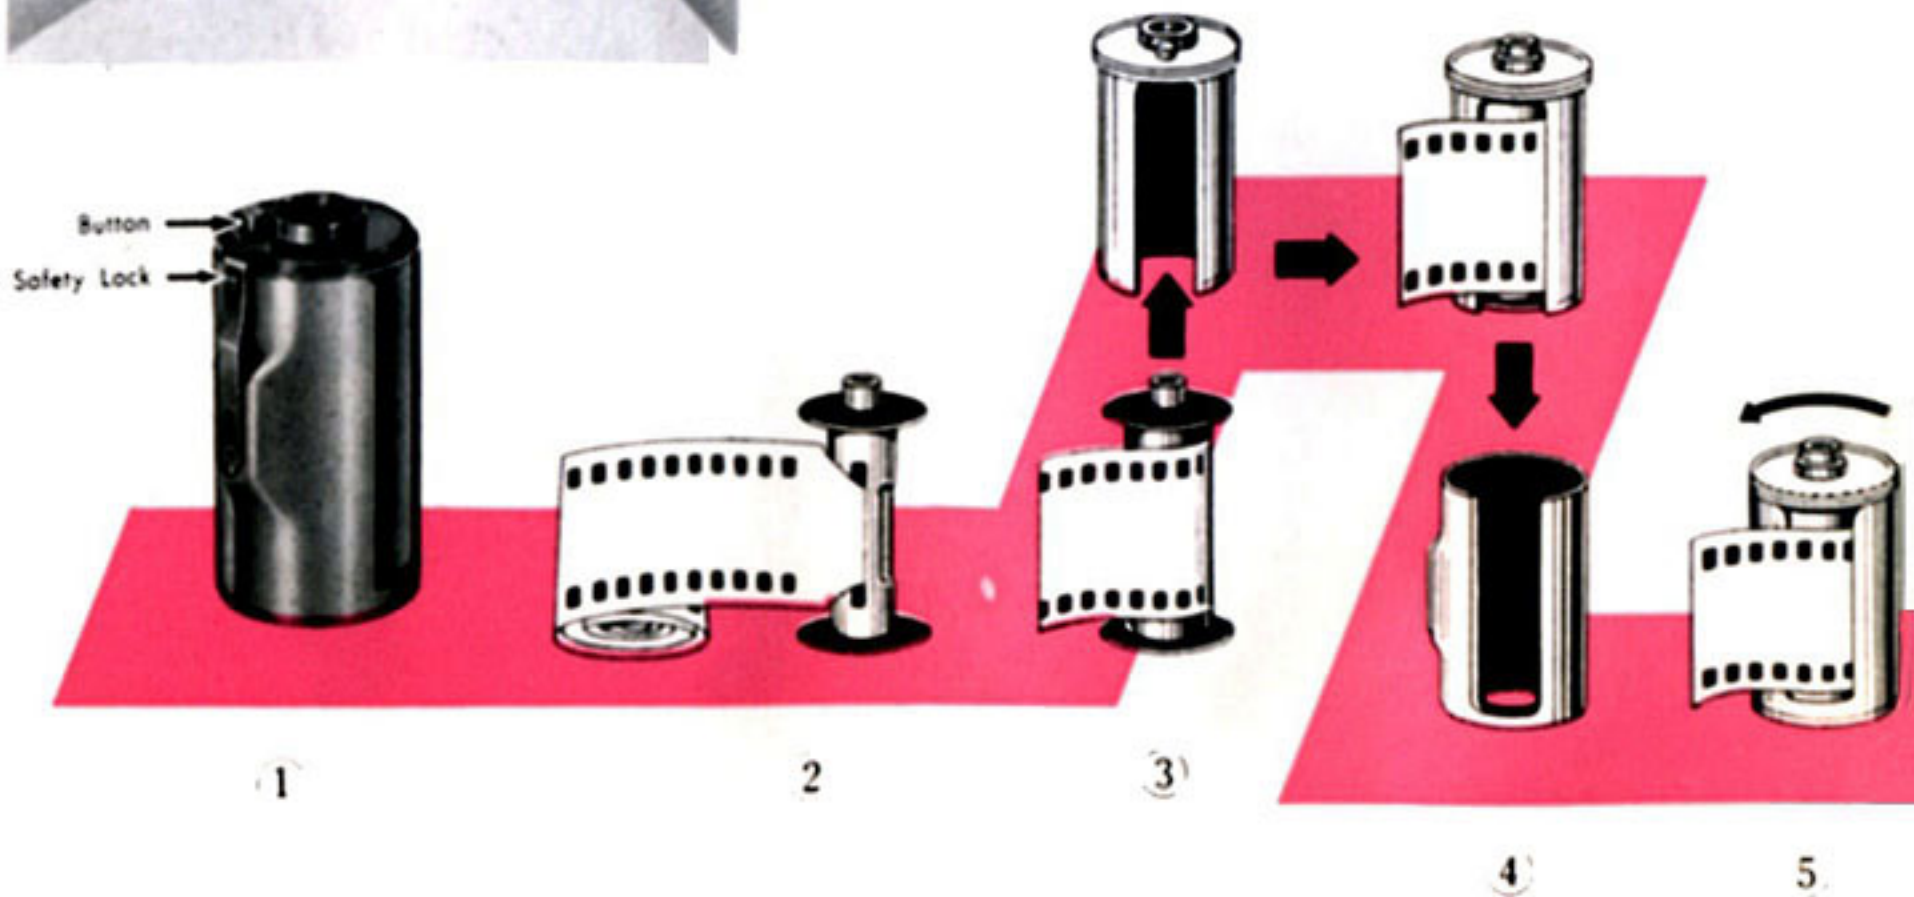

1. To disassemble the magazine, place your finger on the Button and turn the Inner Shell clockwise until both the Inner and Outer Shell Slots are superimposed and the Safety Lock disengaged. Draw out the Inner Shell.
2. Insert the tapered end of the film into the slit of the Center Spool. Face the emulsion (dull) side towards the spindle of the spool.
3. Wind $5\frac{1}{4}$ feet of film around the Center Spool moderately tight for 36 exposures, $3\frac{1}{4}$ ft. for 20 exposures,

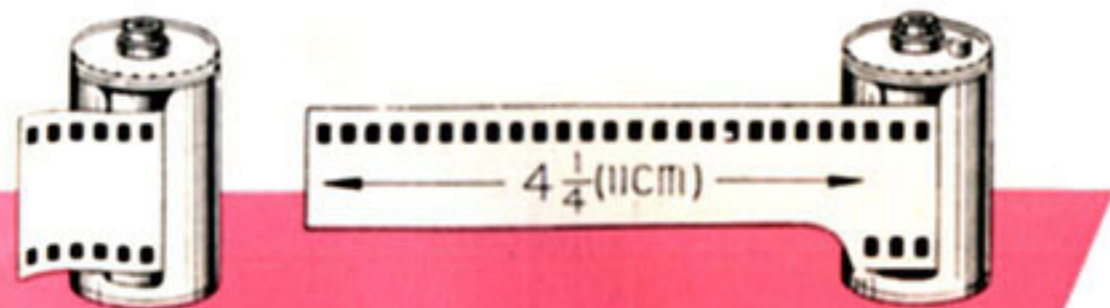

6

7

3 ft. for 18 exposures and 2 ft. for 10 exposures.

4. To assemble the Magazine, first insert the Center Spool into the Inner Shell, with the beginning of the film sticking out of the slot.
5. Place the Inner Shell and the Center Spool into the Outer Shell with both Inner and Outer Shell Slots superimposed. Turn the Inner Shell counter-clockwise until it clicks into locked position.

This procedure must be done in a dark room with safe lighting or in complete darkness depending upon the manufacturer's instructions.

6. When the film magazine is properly loaded and locked, draw out the film and trim it as illustrated.

Depth-of-Field Table

for Canon 35 mm f: 1.5, f: 2.8

In Feet

Minimum Circle of Confusion: 0.035 mm

Distance focused on (ft)	Depth of Field Table.																		
	f : 1.8		f : 2		f : 2.8		f : 4		f : 5.6		f : 8		f : 11		f : 16		f : 22		
	ft-in	ft-in	ft-in	ft-in	ft-in	ft-in	ft-in	ft-in	ft-in	ft-in	ft-in	ft-in	ft-in	ft-in	ft-in	ft-in	ft-in	ft-in	ft-in
∞	65-10 ¹ / ₄	∞	59-3 ¹ / ₂	∞	43-	∞	29-9	∞	21-3 ¹ / ₄	∞	15-	∞	10-11 ¹ / ₂	∞	7-7 ¹ / ₄	∞	5-7 ¹ / ₈	∞	
50	28-5 ¹ / ₄	∞	27-2 ¹ / ₈	∞	23-	∞	18-8 ¹ / ₄	∞	14-11 ¹ / ₄	∞	11-6 ¹ / ₄	∞	8-11 ¹ / ₂	∞	6-6 ¹ / ₈	∞	4-11 ¹ / ₈	∞	
25	18-2 ¹ / ₈	40-1 ¹ / ₈	17-7 ¹ / ₈	42-11 ¹ / ₈	15-9 ¹ / ₂	60-	13-7 ¹ / ₄	155	10-4 ¹ / ₂	∞	9-4 ¹ / ₈	∞	7-7 ¹ / ₈	∞	5-9 ¹ / ₈	∞	4-6 ¹ / ₂	∞	
15	12-3 ¹ / ₈	19-4	11-11 ¹ / ₈	19-11 ¹ / ₈	11-2	23-1 ¹ / ₄	10-3 ¹ / ₈	29-11	8-10 ¹ / ₈	49-10	7-6 ¹ / ₈	∞	6-4 ¹ / ₈	∞	5-7 ¹ / ₈	∞	4-1	∞	
10	8-8 ¹ / ₈	12-3 ¹ / ₈	8-7 ¹ / ₈	11-11 ¹ / ₈	8-1 ¹ / ₈	12-11 ¹ / ₈	7-6 ¹ / ₂	14-10 ¹ / ₈	6-10 ¹ / ₂	18-6 ¹ / ₈	6-3 ¹ / ₄	29-4	5-3 ¹ / ₂	110-	4-4 ¹ / ₂	∞	3-7 ¹ / ₂	∞	
8	7-2	9-3 ¹ / ₄	7-1	9-2 ¹ / ₈	6-9 ¹ / ₄	9-9 ¹ / ₈	6-4 ¹ / ₄	10-9 ¹ / ₄	5-10 ¹ / ₂	12-7 ¹ / ₈	5-3 ¹ / ₈	16-9 ¹ / ₄	4-8 ¹ / ₄	28-7 ¹ / ₂	3-11 ¹ / ₂	∞	3-4	∞	
6	5-6 ¹ / ₄	6-6 ¹ / ₈	5-5 ¹ / ₈	6-7 ¹ / ₈	5-3 ¹ / ₂	6-11 ¹ / ₈	5-1 ¹ / ₂	7-5 ¹ / ₄	4-8 ¹ / ₄	8-2 ¹ / ₈	4-4 ¹ / ₈	9-9 ¹ / ₄	3-11 ¹ / ₈	12-10	3-5	27-1 ¹ / ₂	2-11 ¹ / ₂	∞	
5	4-8	5-4 ¹ / ₈	4-7 ¹ / ₈	5-5 ¹ / ₈	4-6 ¹ / ₄	5-7 ¹ / ₂	4-3 ¹ / ₈	5-11 ¹ / ₄	4-1 ¹ / ₄	6-5 ¹ / ₈	3-9 ¹ / ₄	7-4	3-6	8-10 ¹ / ₄	3-1	13-10 ¹ / ₄	2-8 ¹ / ₂	43-9	
4	3-9 ¹ / ₂	4-2 ¹ / ₈	3-9 ¹ / ₄	4-3 ¹ / ₄	3-8 ¹ / ₄	4-4 ¹ / ₈	3-6 ¹ / ₄	4-6 ¹ / ₄	3-5	4-10 ¹ / ₈	3-1 ¹ / ₈	5-3 ¹ / ₈	2-11 ¹ / ₈	6-1 ¹ / ₈	2-8 ¹ / ₄	8-1 ¹ / ₂	2-4 ¹ / ₂	13-1 ¹ / ₈	
3.5	3-4 ¹ / ₈	3-8 ¹ / ₈	3-3 ¹ / ₈	3-8 ¹ / ₈	3-3 ¹ / ₄	3-9 ¹ / ₈	3-2	3-11	3-1 ¹ / ₄	4-1 ¹ / ₂	2-10 ¹ / ₈	4-5 ¹ / ₂	2-8 ¹ / ₂	4-11 ¹ / ₄	2-5 ¹ / ₂	6-2 ¹ / ₄	2-2 ¹ / ₄	8-9	

Depth-of-Field Table

for Canon 50 mm f: 1.2, f: 1.8, f: 2.8

In Feet

Minimum Circle of Confusion: 0.035 mm

Distance Focused in (ft)	Depth of Field Table																							
	f: 1.2		f: 1.4		f: 1.5		f: 1.8		f: 2		f: 2.8		f: 4		f: 5.6		f: 8		f: 11		f: 16		f: 22	
	Close	Far	Close	Far	Close	Far	Close	Far	Close	Far	Close	Far	Close	Far	Close	Far	Close	Far	Close	Far	Close	Far	Close	Far
∞	∞	∞	∞	∞	∞	∞	∞	∞	∞	∞	∞	∞	∞	∞	∞	∞	∞	∞	∞	∞	∞	∞	∞	∞
50	40-4	65-9	29-1	69-3	28-7	71-	26-10	76-	25-10	83-	22-2	112	27-11	243	23-9	∞	39-3	∞	15-9	∞	12-1	∞	6-3	∞
25	22-4	28-3	21-11	29-1	21-10	29-4	21-3	30-4	20-11	31-1	19-7	34-4	18	41-3	16-2	36-	34-	319-	12-1	∞	9-9	∞	7-10	∞
15	14-0	16-2	13-10	14-4	13-10	14-3	13-7	14-7	13-5	14-11	12-11	17-11	12-2	19-7	11-4	22-3	30-3	28-2	9-2	42-1	7-9	247	6-6	∞
10	9-6 ¹ / ₂	10-6	9-3 ¹ / ₂	10-7	9-3 ¹ / ₂	10-7	9-4 ¹ / ₂	10-9	9-3 ¹ / ₂	10-10	9-1 ¹ / ₂	11-2	8-8	11-10	8-3	12-10	7-8	14-3	7-1	17-4	6-3	26-	5-4 ¹ / ₂	24-11 ¹ / ₂
8	7-8 ¹ / ₂	8-3 ¹ / ₂	7-8	8-4 ¹ / ₂	7-7 ¹ / ₂	8-1 ¹ / ₂	7-7	8-3 ¹ / ₂	7-6 ¹ / ₂	8-4 ¹ / ₂	7-4 ¹ / ₂	8-8 ¹ / ₂	7-11 ¹ / ₂	9-1	6-10 ¹ / ₂	9-7 ¹ / ₂	6-3 ¹ / ₂	10-7	6-1 ¹ / ₂	12-	5-3	15-7	4-8 ¹ / ₂	25-9 ¹ / ₂
6	5-10	6-2 ¹ / ₂	5-9 ¹ / ₂	6-2 ¹ / ₂	5-9 ¹ / ₂	6-2 ¹ / ₂	5-9 ¹ / ₂	6-3	5-9	6-3 ¹ / ₂	5-7 ¹ / ₂	4-4 ¹ / ₂	5-6 ¹ / ₂	6-7	5-4 ¹ / ₂	6-10 ¹ / ₂	5-1 ¹ / ₂	7-3 ¹ / ₂	4-10	7-11 ¹ / ₂	4-3 ¹ / ₂	6-4	3-11 ¹ / ₂	12-4 ¹ / ₂
5	4-10 ¹ / ₂	5-1 ¹ / ₂	4-10 ¹ / ₂	5-1 ¹ / ₂	4-10 ¹ / ₂	5-1 ¹ / ₂	4-10 ¹ / ₂	5-2	4-9 ¹ / ₂	5-2 ¹ / ₂	4-9 ¹ / ₂	5-3 ¹ / ₂	4-8	5-4 ¹ / ₂	4-6 ¹ / ₂	5-6 ¹ / ₂	4-4 ¹ / ₂	5-10 ¹ / ₂	4-2 ¹ / ₂	6-3	3-10 ¹ / ₂	7-1 ¹ / ₂	3-6	6-8 ¹ / ₂
4	3-11 ¹ / ₂	4-1	3-11	4-1	3-11	4-1	3-10 ¹ / ₂	4-1 ¹ / ₂	3-10 ¹ / ₂	4-1 ¹ / ₂	3-10 ¹ / ₂	4-2	3-9 ¹ / ₂	4-2 ¹ / ₂	3-8 ¹ / ₂	4-4 ¹ / ₂	3-7 ¹ / ₂	4-6 ¹ / ₂	3-3 ¹ / ₂	4-8 ¹ / ₂	3-3 ¹ / ₂	5-2 ¹ / ₂	2-11 ¹ / ₂	6-10 ¹ / ₂
3.5	3-3 ¹ / ₂	3-6 ¹ / ₂	3-3 ¹ / ₂	3-6 ¹ / ₂	3-3 ¹ / ₂	3-6 ¹ / ₂	3-3 ¹ / ₂	3-6 ¹ / ₂	3-3	3-7	3-4 ¹ / ₂	3-7 ¹ / ₂	3-4	3-8 ¹ / ₂	3-3 ¹ / ₂	3-9	3-2 ¹ / ₂	3-10 ¹ / ₂	3-1 ¹ / ₂	4-4 ¹ / ₂	2-11 ¹ / ₂	4-4 ¹ / ₂	2-8 ¹ / ₂	4-11 ¹ / ₂

CARE OF YOUR CANON MODEL VI-T & VI-L

DON'T keep your camera in the glove compartment of your car.

DON'T keep your camera in a damp room or near corrosive fumes.

DON'T clean your Canon Lens with anything but special lens tissue and possibly a little pure alcohol, or ether, if available. Wrap tissue around a wooden matchstick and wipe in a circular motion...lightly and systematically.

INTERCHANGEABLE CANON LENSES

These interchangeable lenses will further increase the already outstanding versatility of your Canon Camera and enable you to enjoy every pleasure of 35 mm photography.

The Canon Lenses are widely used by professional cameramen the world over because of their high resolving power and color fidelity, which is a result of Canon's constant research in the fields of glass development, lens design and lens coating compound.

25 mm f: 3.5	50 mm f: 1.2	135 mm f: 3.5
28 mm f: 2.8	50 mm f: 1.8	400 mm f: 4.5
28 mm f: 3.5 II	50 mm f: 2.8	600 mm f: 5.6
35 mm f: 1.5	85 mm f: 1.5	800 mm f: 8 II
35 mm f: 1.8	85 mm f: 1.9 II	1000 mm f: 11
35 mm f: 2.8 II	100 mm f: 3.5	



⑳ Range-Viewfinder Eyepiece

㉑ Viewfinder Selector

㉒ Film Type Indicator Dial

㉓ Release Button for Film Winding Knob

㉔ Hinged Back

㉕ Lock for Hinged Back

㉖ Tripod Socket



㉗ Magazine Opening Key

㉘ Trigger Retracting Button

㉙ Rapid Wind Trigger (Retractable)

㉚ Built-in Take-up Spool

㉛ Film Sprocket

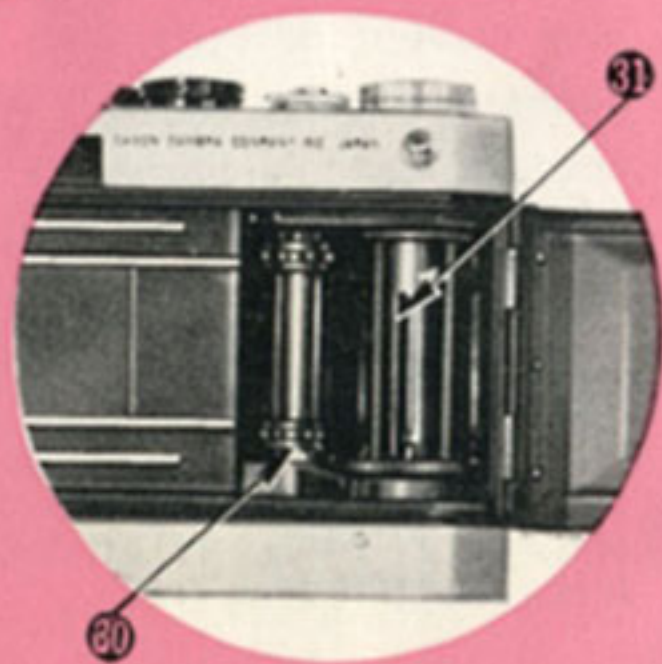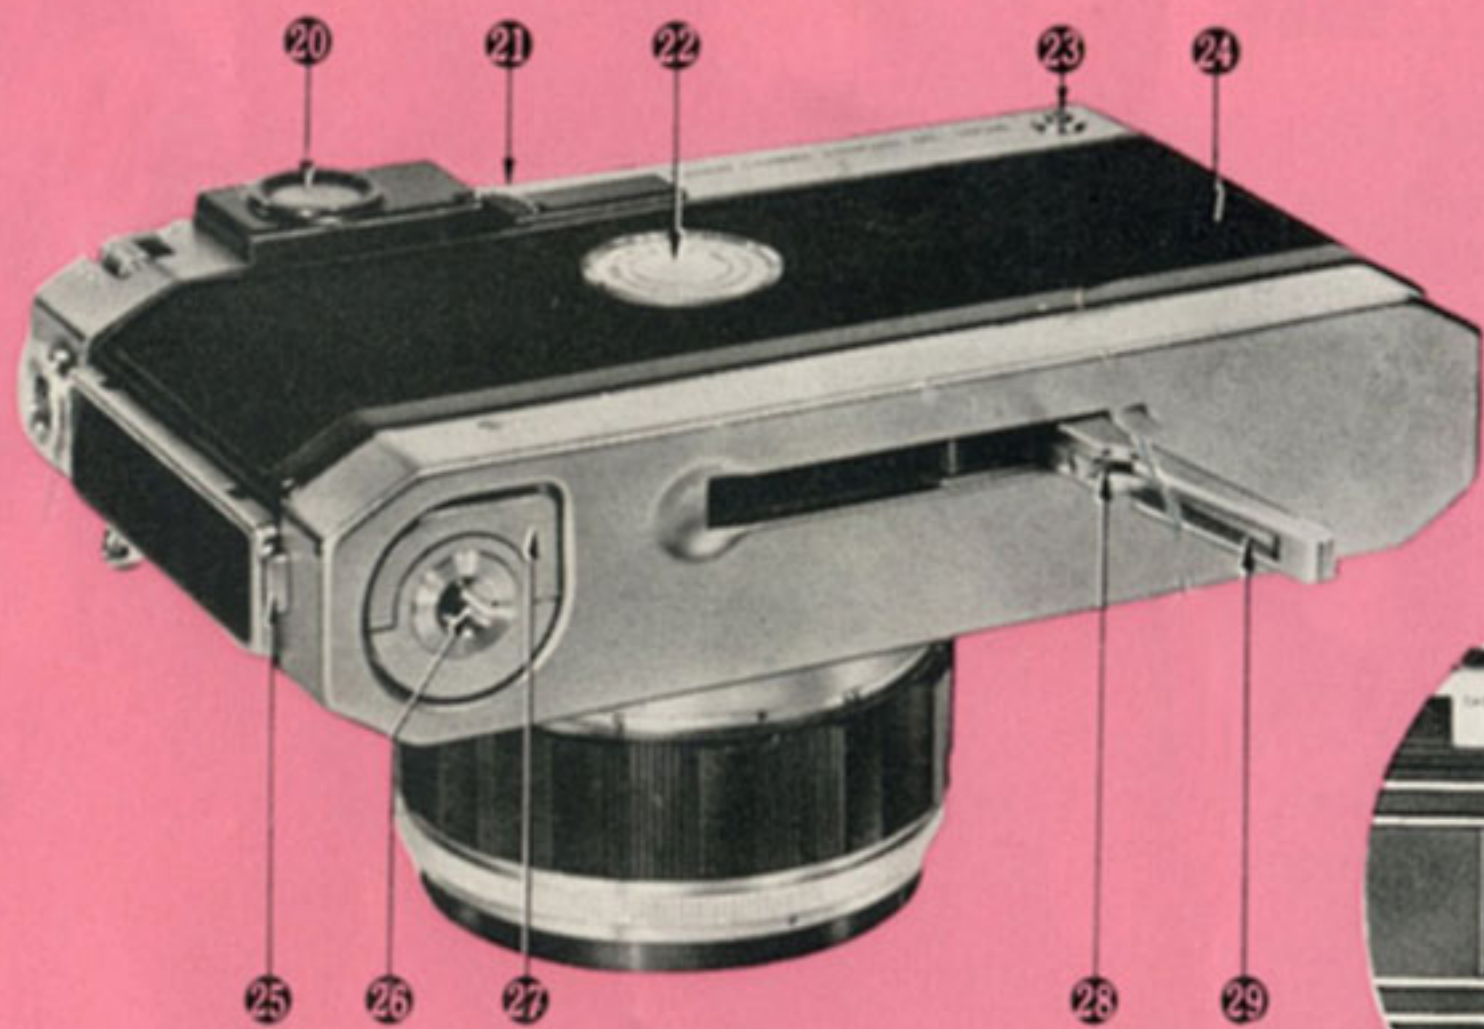

Canon VI-T VI-L

CANON CAMERA
CO., INC.

PUB. NO. 419 5T-7-58
PRINTED IN JAPAN DAITO

