Canon



We recommend that first-time users of the Canon PowerShot A5 start by consulting the Quick Start Guide. Read this guide for additional details about the use and functions of the Canon PowerShot A5. This guide presents individual explanations of each camera function.

ENGLISH

ZZP-SC1XA210 © CANON INC. 1998 Printed in the EU

Introduction

Thank you for purchasing a Canon PowerShot A5, the easy-to-use, compact digital camera with a large range of functions incorporated into a card-sized body.

Please read this guide and the *Quick Start Guide* to gain maximum benefit of the highquality digital imaging made possible with the
PowerShot AS

Please read the Handling and Safety Precautions section of this guide before attempting to use the camera.

About the LCD panel

The LCD panel incorporates extremely highprecision technology. When the panel is in use, minute black, red or green spots may appear and linger. The pixels are operating at 99.99% effectiveness, and this does not constitute a malfanction. Moreover, these spots have no effect on the image you record.

Disclaimer

While every effort has been made to ensure that the information contained in this manual is accurate and complete, no liability can be accepted for any errors or omissions. Canon Inc. reserves the right to change the specifications of the hardware and software described herein at any time without prior notice.

No part of this manual may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form, by any means without prior written permission of Canon Inc.

Canon Inc. makes no warranties for damages resulting from corrupted or lost data due to a mistaken operation or malfunction of the camera, the CompactFlash ards (CF cards), personal computers, peripheral devices or use of non-Canon CF cards.

Trademark Acknowledgement

Canon and PowerSinct are trademarks of Canon Inc. Adobe and Adobe Photoshop are trademarks of Adobe Systems Incorporated. Apple, Macrinosh and Power Macrinosh are trademarks of Apple Computer, Inc. CorporatTisks is a steelmark of SanDisk Corporation. IBM is a registered trademark of International Business Machines Corporation in the Microsoft and Windrows are registered trademarks of Microsoft Corporation in the

Ulead Systems, Inc. and PhotoImpact are trademarks of Ulead Systems, Inc.
Other names and products not mentioned above may be trademarks or registered trademarks of their respective companies.

■ Table of Contents

Quick Guide to Page Numbers by Category	5
Handling and Safety Precautions	9
Guide to Components	
Basic Functions of the PowerShot A5 1	8
Image Size and Quality Specifications 1.	8
Power On/Off Switch 1	9
Power Save Function 1	9
Camera Modes	
Display Panel	1
Viewfinder2	2
Viewfinder Frame Marks 2	2
Indicators	3
Shutter Button	
Pressing Halfway	4
Pressing Fully	5
Continuous/Self-Timer (+) Button	5
Flash (-) Button	6
Macro/Jump Button	δ
LCD Button	9
MENU Button	9
SET Button 3	0
Mode Dial Functions	1
Lock	1
Auto Mode 3	1
Buttons Available in Auto Mode 3	
Program Mode	2

Buttons Available in Program Mode	32
Stitch Assist Mode	33
What is Stitch Assist?	33
Play Mode	34
Multi Mode	
PC Mode	35
Taking Pictures in Stitch Assist Mode	36
Buttons Available in Stitch Assist Mode	36
Retaking a Picture	36
When a Sequence is Complete	36
Shooting Hints	
Procedures for Shooting Horizontal/Vertical	
Sequences	38
2x2 Shot Procedures	39
Menu Features	42
Record Menu	42
Play Menu	42
Basic Menu Operations	43
MENU Button	43
+/- Buttons	43
SET Button	43
Record Menu	44
Quality	44
Review	45
+/- (Exp.)	
Reset File No	46

Copyright © 1998 Canon Inc. All rights reserved.

Table of Contents continued... 2/2 =

About File Numbers
Play Menu
Show Info.
Slide Show
Protect
Erase
Print Mark
Setup
LCD
Beep
Power Save
Reset
Date/Time
Format
Language
onnecting to a TV
onnecting to a Computer
Connecting to a Windows Computer
Connecting to a Macintosh Computer
nanging the Button Battery and Setting
e Date/Time
Changing the Button Battery
Setting the Date/Time
mera Maintenance
otional Accessories
Soft Case

CF Cards	6
CF Cards and Capacities	6
PCMCIA Card Adapter	6
CF Card Reader	6
Digital Printer CD-200	6
Troubleshooting	
List of Message Codes	6
List of Messages	7
Specifications	7
Appendix A: Canon Battery Pack NB-5H	7
Appendix B: Canon Compact Power Adapter	7
Appendix C: CompactFlash™ Card	8
Index	8
Canon Customer Support	8
Ulead Customer Support	¢

Quick Guide to Page Numbers by Category ___

Shooting

Flash photography with humans or animals as subjects	
How to aim the camera at your subject to improve the focus	22
How to adjust the exposure setting (Exposure Compensation)	
How to compensate for a backlight subject	
How to compensate for a subject in shadow	45
How to force the flash to go off	26
How to press the Shutter button	24
How to shoot continuous frames	
How to shoot extreme close-ups with the Macro mode	
How to shoot moving objects (Continuous mode)	
How to shoot multiple frames by pressing the shutter once	
How to shoot pictures in a horizontal sequence for merging later	
How to shoot pictures in a vertical sequence for merging later	
How to shoot pictures without the red-eye effect	
How to take a panorama shot	
How to take a picture	31
How to stop the flash from going off	
How to use the frame marks inside the viewfinder	22
How to use the Self-Timer function	
How to use the viewfinder	
Taking shots of panoramic scenes bigger than one frame	
What mode should I use for everyday shots?	24, 31

Quick Guide to Page Numbers by Category continued....2/4

eplaying Images	
Connecting the camera to a computer	35, :
Connecting the camera to a computer Connecting the camera to a television	
How to change the play time of images in a slide show	
How to check an image immediately after shooting	
How to continuously replay recorded images	
How to delete marks from images in a slide show	
How to load camera images onto a computer	
How to make a slide show with only the images you select	
How to play images one at a time on the LCD panel	
How to scroll through images displayed on the LCD panel	
How to scroll to the next set of images in Multi mode	
How to set a slide show to continuous display	
How to use the Review function	
How to view camera images on a television	
How to view camera images on a television How to view images on the camera LCD panel	
How to view images on the camera LCD panel while shooting	
How to view images on a television screen	
How to view images on a television screen How to view images with the slide show function	
How to view the date/time information for an image	

Quick Guide to Page Numbers by Category continued....3/4

Saving, Printing and Deleting Image Files About image file names

How to change a file number	46
How to delete an unwanted image	
How to mark a file for printing	51
How to protect a file from accidental deletion	50
saving an image file onto a computer	56

Settings	
About each function	
About the symbols on the Mode Dial	20
Changing date and time settings	53, 60
How to change the date/time display format	53, 60
How to change error messages to another language	
How to change the image quality setting and take a shot	
How to change the image size setting and take a shot	
How to change the LCD panel brightness	
How to reset default LCD panel, beep and Power Save settings How to select Menu options	
How to turn the Power Save function on and off	
How to turn the Review function on and off	4
How to turn off the beep	
How to turn the power on and off	
How to use the +/- buttons	43

Quick Guide to Page Numbers by Category continued....4/4

Other Topics

About part names	16
Accessories	62
Accessories	16
How to use the Menu button	
How to use the Menu features 29, 42,	
How to use the Mode Dial	31
How to use the Set button	43
How to view date/time data in Play mode	47
I would like to use the CompactFlash™ (CF) card from another camera	54
What are the available image formats?	18
What are the available image sizes?	18
What can be done in Auto mode?	31
What can be done in Program mode?	32
What do the indicator lights mean?	23
What do the LCD panel messages mean?	70
What do the symbols and codes displayed in the LCD mean?	69
What does the orange indicator light mean?	28
What is the meaning of the beep when the shutter button is pressed?	25
What is the meaning of the indicator lights beside the viewfinder?	23
What to do if you detect a problem (troubleshooting)	
Why the power shuts off a few minutes the camera is set down	19

Handling and Safety Precautions

Please ensure that you have read and understood these handling and safety precautions before you operate your PowerShot A5 Digital Camera. Once you have read the instructions on the next few pages, we recommend that you keep the camera with you and try each function as you read about it in the remaining pages.

Exclusion of Liability and Warning Against Copyright Infringement (Please Read) Exclusion of Liability

Before you shoot images of subjects of importance to you, we highly recommend that you shoot several trial images to confirm that you are operating the camera correctly. Please note that Canon Inc., its subsidiaries and affiliates, and distributors of its digital cameras are not liable for any consequential damages arising from any malfunction in a PowerShot camera or CompactFlashTM CF card that results in the failure of an image to be recorded or to be recorded in a format that is machine sensible.

Warning Against Copyright Infringement

Please note that PowerShot digital cameras are intended for personal use and should never be used in a manner that infringes upon or contravenes international or domestic copyright laws and regulations. Please be advised that in certain cases the copying of images from performances, exhibitions, or commercial properties by means of a camera or other device may contravene copyright or other legal rights even if the image was shot for personal use.

Handling and Safety Precautions continued....2/7

Safety Precautions

- Before using the camera, please ensure that you have read and understood the safety precautions described below. Always ensure that the camera is operated correctly.
- The safety precautions noted on the following pages are intended to instruct you in the safe and correct operation of the camera and its accessories to prevent injuries or damage to yourself, other persons and equipment.
- In the next few pages, the term "equipment" refers primarily to the camera and its power supply accessories.

⚠ Warnings

- Stop operating the equipment immediately if it should emit smoke or noxious fumes. Failure to
 do so may result in fire or electrical shock. Immediately shut off the camera's power switch,
 remove the camera battery and unplug the power adapter cord from the power socket.
 Confirm that smoke or fume emissions cease, Please consult your camera distributor or the
 closest Canon Customer Support Help Desk.
- Stop operating the equipment if it is dropped or the casing is damaged. Failure to do so may result in fire or electrical shock. Immediately shut off the camera's power switch, remove the camera battery and unplug the power adapter cord from the power socket. Please consult your camera distributor or the closest Canon Customer Support Help Desk.

landling	and	Safoty	Processi	ione	continued	3/7

- Prevent the equipment from contact with, or immersion in, water and other liquids. Do not allow liquids to enter the interior. The camera has not been waterproofed. If the exterior comes into contact with liquid or salt air, wipe it dry with a soft, absorbent cloth. In the event that water or other foreign substances enter the interior, immediately shut off the camera's power switch, remove the camera battery and unplug the power adapter cord from the power socket. Continued use of the equipment may result in fire or electrical shock. Please consult your camera distributor or the closest Canon Customer Support Help Desk.
- To avoid the risk of high-voltage electrical shock, do not touch the flash portion of the camera if
 it has been damaged. In addition, never touch internal portions of the equipment that become
 exposed as a result of damage. There is a risk of high-voltage electrical shock. Please take the
 first opportunity to consult your camera distributor or the closest Canon Customer Support Help
 Desk.
- Do not attempt to disassemble or alter any part of the equipment that is not expressly prescribed in this guide. Disassembly or alteration may result in high-voltage electrical shock.
 Internal inspections, alterations and repairs should be conducted by qualified service personnel authorized by your camera distributor or the closest Canon Customer Support Help Desk.
- Do not use substances containing alcohol, benzene or thinners or other flammable substances on the equipment. The use of these substances may lead to fire or electrical shock.
- Do not cut, damage, alter or place heavy items on the power adapter cord. Any of these actions
 may cause an electrical short circuit, which may lead to fire or electrical shock. Replace a broken
 or damaged power adapter cord.

Handling and Safety Precautions continued....4/7

- Do not handle the power adapter cord if your hands are wet or moist. Handling the power adapter cord with wet hands may lead to electrical shock. When unplugging the cord, ensure that you hold the rigid portion of the plug. Pulling on the flexible portion of the cord may damage or expose the wire and insulation, creating the potential for fires or electrical shocks.
- Store this equipment out of the reach of children and infants. Accidental damage to the equipment by a child could result in serious injury.
- Use of power sources not expressly recommended for this equipment may lead to overheating, distortion of the equipment, fire, electrical shock or other hazards. Use only the recommended compact power adapter and accessories.
- Power down the computer and unplug the power adapter cord before attempting to connect the interface cable to avoid the risk of electrical shock.
- Be particularly careful to keep the button-sized (CR2016 lithium) batteries used in the camera
 out of the reach of children. Seek medical assistance immediately if a child swallows a battery.
- Do not place the batteries near a heat source or expose them to direct flame or heat. Neither should you immerse them in water. Such exposure may damage the batteries and lead to the leakage of corrosive liquids, fire, electrical shock, explosion and serious injury.
- Do not attempt to disassemble, alter or apply heat to the batteries. There is serious risk of injury
 due to an explosion. Immediately flush with water any area of the body or clothing that comes
 into contact with the inner contents of a battery.

Handling and Safety Precautions continued....5/7

- Avoid dropping or subjecting the battery to severe impacts that could damage the casing. It
 could lead to leakage and injury.
- Do not short-circuit the battery terminals with metallic objects, such as key holders. It could lead
 to overheating, burns and other injuries. Use the supplied battery case when transporting or
 storing batteries.
- Before you discard a battery, cover the terminals with tape or other insulators to prevent direct contact with other objects. Contact with the metallic components of other materials in waste containers may lead to fire or explosions. Discard the batteries in specialized waste facilities if they are available in your area.
- Use of batteries not expressly recommended for this equipment may cause them to explode or leak, resulting in fire, injury and damage to the surroundings. Use only recommended batteries and accessories.
- Use only the recommended compact power adapter to recharge the rechargeable batteries. Use
 of chargers not expressly recommended may result in overheating, distortion, fire or electrical
 shock.
- Disconnect the compact power adapter from both the camera and power socket after recharging and when the camera is not in use to avoid fires and other hazards.

 The camera terminal of the compact power adapter cord is designed for exclusive use with

 In examera terminal of the compact power adapter cord is designed for exclusive use with PowerShot cameras. Do not use the compact power adapter with other products or batteries There is a risk of fire and other hazards. Handling and Safety Precautions continued....6/7

- Do not trigger the flash in close proximity to human or animal eyes. Exposure to the intense light produced by the flash may injure eyesight. In particular, remain at least one meter (39 inches) away from infants when using the flash.
- Do not aim the camera directly into the sun or at other intense light sources that could injure your eyesight.

⚠ Caution

- Avoid using, placing or storing the equipment in places subject to strong sunlight or high temperatures, such as the dashboard or trunk (boot) of a car. Exposure to intense sunlight and heat may cause the batteries to leak, overheat or explode, resulting in fire, burns or other injuries. High temperatures may also cause deformation of the casing.
- Be sure to use the compact power adapter in a well ventilated area when recharging batteries or performing other recommended procedures.
- Do not store the equipment in humid or dusty areas. Storage in these areas could lead to fire, electrical shock or other damage.
- Be careful when wearing or holding the camera by the strap not to bang or subject it to strong
 impacts or shocks that could lead to injury or damage the equipment.
- Be careful not to cover the flash with your fingers when shooting. In addition, do not touch the surface of the flash after taking several pictures in rapid succession. Either action could result in burns.

Handling and Safety Precautions continued....717

Preventing Malfunctions

Avoid Strong Magnetic Fields

Never place the camera in close proximity to electric motors or other equipment generating strong electric fields. Exposure to strong magnetic fields may cause malfunctions or corrupt image data.

Avoid Condensation Related Problems

Moving the equipment rapidly between hot and cold temperatures may cause condensation (water droplets) to form on its external and internal surfaces. You can avoid this by placing the equipment in a plastic bag and letting the contents adjust to temperature changes slowly before removing it from the bag.


If Condensation Forms Inside the Camera

Stop using the camera immediately if you detect condensation. Continued use may damage the equipment. Remove the CF card, batteries and power adapter cord from the camera and wait until the moisture evaporates completely before resuming use.

Extended Storage

When not using the camera for extended periods of time, remove the batteries (except the buttonsized CR2016 lithium battery) and store the equipment in a safe place. Storing the camera for extended periods with the batteries installed will run down the batter and may damage the camera.

Guide to Components

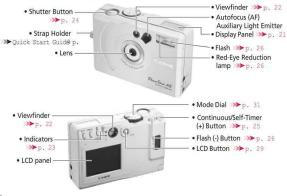

Guide to Components continued....2/2



Basic Functions of the PowerShot A5

Image Size and Quality Specifications

The PowerShot A5 can take pictures with the following screen sizes and qualities.

Size/Quality	Compression Format	File Size
Large/Fine (1024 x 768)	JPEG High Quality	180 KB
Large/Normal (1024 x 768)	JPEG Normal	85 KB
Small/Fine (512 x 384)	JPEG High Quality	60 KB
Small/Normal (512 x 384)	JPEG Normal	30 KB
CCD RAW	No Compression	940 KB

 Large and small image sizes cover the exact same scope of the photographic subject but reproduce the images with differing numbers of dots. On computer monitors the large format images are displayed at 1024 x 768 pixels, while the small images are displayed at 512 x 384 pixels.

- The size and quality settings can be changed before an image is shot with the Menu feature in the Auto, Program or Stitch Assist modes. (p. 44)
- In the Continuous mode, the default size and quality settings are Small/Fine or Small/Normal
- Figures noted herein reflect standard shooting conditions established by Canon. Actual file sizes will vary between photographic subjects.

Basic Functions of the PowerShot A5 continued... 2/13

Power On/Off Switch



The camera's power is turned on and off with the Mode Dial. The power is off when the dial is set to the L (Lock) position and on when set in any other position.

Power Save Function Shooting Modes

The camera automatically closes the lens cover and powers down if you do not use a camera function for approximately three minutes

Playback Modes

The camera automatically powers down if you do not use a camera function for approximately five minutes.

PC Mode

When connected to a computer, a message is displayed on the computer monitor if you do not use a camera function for approximately five minutes. If you do not use a camera function for an additional minute, the camera automatically powers down.

- To reactivate the camera after powerdown, turn the Mode Dial or press any button.
- You can deactivate the Power Save function with the Menu feature. (p. 53)

☐: Auto Mode

Auto mode is for taking standard pictures. The focus, exposure and white balance settings as well as the flash are automatically selected or activated by the camera.

P: Program Mode

Program mode is also for taking pictures, but the Flash On/Off and Continuous settings can be selected manually. The focus, exposure and white balance settings are automatically selected by the camera. However, the exposure setting may also be adjusted manually with the Exposure Compensation function. (p. 45)

□ : Stitch Assist Mode

Taking pictures in this mode is helpful if you intend to merge several images into a single high-quality panoramic image. Merging images is easy if you use the PhotoStutch utility software. In this mode, the focus, exposure and white balance settings are automatically selected by the camera.

PLAY: Play Mode

Play mode is for viewing images recorded on the CF card. Images are displayed on the LCD panel one by one.

MULTI: Multi Mode

Multi mode is for viewing multiple images recorded on the CF card. Images are displayed on the LCD panel in groups of nine.

PC: PC Mode

PC mode is for viewing and processing images with a computer. Basic Functions of the PowerShot A5 continued....4/13 =

Display Panel

The Display Panel on the camera top shows the status of camera settings, battery levels and the approximate number of images that can be stored in the CF card at the current size and quality settings. Changing size and quality settings will alter this number.

 Message codes on the Display Panel will indicate errors or camera status. (p. 69) □ Single Mode

In Continuous Mode

Self-Timer Mode

Normal
CCD RAW

L Large

s Small

Flash On Flash Off

Red-Eve Reduction

Macro Mode

Exposure Compensation

Beep On

■ Low Battery

Clock Not Set

Viewfinder

The camera is equipped with an optical viewfinder for image composition.



- In Macro mode (photographic subject 9-50 cm from the lens), the actual area shot by the lens is slightly lower than the area shown in the viewfinder. The closer the camera is to the photographic subject, the larger the difference between these areas.
- When taking shots in Macro mode, be sure to confirm the image composition and focus in the LCD panel.

Viewfinder Frame Marks

The camera focuses on the area encompassed by the square brackets in the viewfinder's center. When composing images, aim the camera so that the photographic subject is in the middle of the viewfinder.

 Pressing the shutter button halfway locks the focus until the button is released.
 This allows you to focus on a particular object while freely changing the image composition. A moment after depressing the shutter button halfway, two beeps will sound and a green or red indicator will light, indicating a focus lock. You are now free to reorient the camera knowing that your target subject is in focus.

Basic Functions of the PowerShot A5 continued....6/13

Indicators

Two indicators appear to the left of the viewfinder. These lights shine or flash when the shutter button is pressed to confirm various actions and camera modes.

Upper Indicator



Upper Indicator

Green: Ready to take picture (no flash)
Flashing Green: Storing to CF card

Red: Flash On mode, ready to take picture

Flashing Red: Flash Off mode, insufficient light (image may blur)

Lower Indicator

Orange: Macro Mode On

Pressing Halfway

Press the shutter button halfway to automatically set the focus, exposure and white balance to the optimal setting. When the camera finishes metering, it will beep and lock the shutter.



 When the camera is ready to take a shot, the upper indicator lamp will shine green (no flash) or red (flash) and two

- beeps will sound.
 When the LCD panel is turned on, the image will freeze for an instant.
- In the Flash Off mode, the upper indicator will flash red when there is insufficient light for the exposure setting. This is a warning that hand tremors or camera movement will blur the image.
- In the Macro mode, the lower indicator will shine orange.
- In the Exposure Compensation mode, the image of the photographic subject will appear in the LCD panel after the second beep.

Basic Functions of the PowerShot A5 continued....8/13

Pressina Fully

Pressing the shutter button all the way down captures an image and stores the data on the CF card.

- When an image is captured, a single beep will sound and the upper indicator will flash green while the data is stored on the CF card.
- If the LCD panel is turned on while an image is being stored, the window will momentarily blank and display a Busy message.
- If the LCD panel is turned off and the Review function is set to On with the Menu feature, a preview of the photographic subject will briefly appear in the LCD panel while the shutter button is fully depressed.

Continuous/Self-Timer 型◎

ner

In Auto mode, this button turns the Self-Timer mode on and off.



(+) Button

In Program mode, this button switches between the Single (frame), Continuous (frame) and Self-Timer functions.



 mark indicates the Single mode. A single frame will be stored each time you press the shutter button.

- Imark indicates the Continuous mode. The camera will record up to 15 frames in rapid succession as long as the shutter button is depressed and sufficient memory is free. The images are stored at the small size.
- \infty mark indicates the Self-Timer mode.

 The shutter will automatically activate 10 seconds after the shutter button is pressed.

In Play mode, this button displays the next stored image.

In Multi mode, this button selects the next stored image.

In the Menu feature, this button moves the selection to the next option.

Flash (-) Button



In Program or Stitch Assist mode, this button switches between the Auto, Red-Eye Reduction, Flash On and Flash Off functions.



mark indicates the Red-Eye Reduction lamp will light when you press the shutter button.

The Red-Eye Reduction mode counteracts the tendency for flash photography to produce the red-eye effect in prints of humans and animals, the result of light reflected back from the subjects' retinas. The flash emitted before the actual shutter operation causes the subjects' irises to narrow in advance, thereby

Basic Functions of the PowerShot A5 continued....10/13 .

reducing the potential for reflections back from the retinas.

When shooting in the Red-Eye Reduction mode, press the shutter button halfway and wait a moment before pressing it fully. If the interval between pressing the shutter halfway and all the way is too short, the Red-Eye Reduction lamp may not fire.

- \$ mark indicates the Flash On mode. The flash will fire when you press the shutter button.
- •
 § mark indicates the Flash Off mode.

 The flash will not fire when you press the shufter buffon.
- When none of these symbols appear, the camera is set to Auto Flash mode and the light level detected by the camera will automatically fire the flash.

- In Play mode, this button displays the previous stored image.
- In Multi mode, this button selects the previously stored image.
- In the Menu feature, this button moves the selection to the previous option.

Macro/Jump Button



In Auto, Program or Stitch Assist mode, this button turns the Macro mode on or off.



- w mark indicates that the Macro mode is
- In Macro mode, the lower indicator will shine orange when the Shutter Button is depressed halfway.
- In Macro mode, the actual area shot by the lens is slightly lower than the area shown in the viewfinder. The closer the camera is to the photographic subject, the larger the difference between these areas.

- In Macro mode, the photographic subject can be shot within a range of the 50 cm and remain in focus.
- When shooting in Macro mode, check the LCD panel to confirm that the focus and scope of the image are

In Play and Multi mode, this button turns the Jump mode on or off.

- In Play mode, turning the Jump mode on enables you to skip to the first or last image by pressing the +/- Buttons.
- In Multi mode, turning the Jump mode on enables you to display the next or previous set of nine images by pressing the +/- Buttons.

Basic Functions of the PowerShot A5 continued....12/13

LCD Button



MENU Button



This button turns the LCD panel on or off in the Auto and Program modes. In the Play and Multi modes, the button turns the Video Outout function on or off.

- In Stitch Assist mode, the LCD panel is automatically turned on.
 - If the LCD panel is left on for a long period the camera may become warm. This is normal and does not constitute a breakdown.

This button displays the Recording (Rec.) Menu when pressed in the Auto, Program and Stitch Assist modes. (p.44)



The button displays the Play Menu in the Play and Multi modes. (p. 47)

 When a menu is already displayed on the LCD panel, pressing the MENU Button returns to the previous screen.

Basic Functions of the PowerShot A5 continued....13/13 _

SET Button



This button selects the current menu option shown on the LCD panel.



Mode Dial Functions

The Mode Dial allows you to select between the various shooting and playback modes featured on the PowerShot A5.

Lock



The Mode Dial should be set to the Lock position when the camera is not in use. In this mode the lens cover will close and the camera power will shut off.

 Ensure that you set the Mode Dial to the Lock position before you change a battery, eject a CF card or connect the camera to a computer or televi-

Auto Mode



In Auto mode, the camera selects whether or

not to use the flash and automatically chooses focus, exposure and white balance settings. The picture format is fixed at Large for this mode, but the quality setting can be changed. It is convenient to use this mode for normal picture taking.

Buttons Available in Auto Mode

Use this button when you want to shoot a photographic subject 9 to 50 cm distant from the lens. The **%** mark displays in the Display Panel when this mode is selected. Self-Timer Button

Use this button to activate the Self-Timer mode. The Smark displays in the Display Panel when this mode is selected. The shutter will activate 10 seconds after the shutter button is pressed.

Program Mode



In Program mode, you can manually select the Single or Continuous modes as well as the image size and quality.

 You should select this mode to use the CCD RAW function (no compression) for shooting.

Buttons Available in Program Mode

The Flash On, Flash Off and Red-Eye Reduction functions can be manually set with this button. The mark indicates that the Red-Eye Reduction is selected. The

mark indicates the Flash On mode is selected. The mark indicates the Flash Off mode is selected.

Macro Button

Use this button when you want to shoot a photographic subject 9 to 50 cm from the lens. The W mark is shown in the Display Panel when this mode is selected.

Continuous/Self-Timer Button

Use this button to activate the Continuous and Self-Timer modes. The → mark is shown in the Display Panel when the Continuous mode is selected. The ⋄ mark shows when the Self-Timer mode is selected.

Mode Dial Functions continued....3/5

Stitch Assist Mode



What is Stitch Assist?

The Stitch Assist mode is designed to make it easier to merge separate panoramic images into a single, seamless image using a computer. You can shoot a photographic subject that won't fit into a single frame, such as a landscape, and stitch it together later with a computer. This mode displays the previous images while you shoot the next in a horizontal, vertical or matrix sequence of images.

Horizontal Sequence



Vertical Sequence



2x2 (Matrix) Sequence



• See the Taking pictures in the Stitch Assist Mode section for more detail on this subject. (p. 36)



In Play mode, you can display images from the CF card one at time on the LCD panel.



- Press the + or Button to display the next or previous recorded image.
- · Using the Macro/Jump Button to select the Jump mode enables you to skip to the first or last image with the + or -Buttons.



In Multi mode, you can display images from the CF card in groups of nine on the LCD panel.



- . In the group of nine, the selected image is indicated by a green border. Move the selection between images using the +/-Buttons and display the selection at full size by turning the Mode Dial to the PLAY position.
- Using the Macro/Jump Button to select the Jump mode enables you to display the next or previous group of nine images with the +/- Buttons.

PC Mode



In PC mode, you can connect to a computer to load and display images into an image processing application program. (p. 56)

- The LCD panel will display [PC] when the camera is ready to display or load images on the computer.
- The camera may cease to respond when the Mode Dial is turned from the PC position to another setting. Turn the Mode Dial again or press any button to have it resume mal operation.

Taking Pictures in Stitch Assist Mode

Set the Mode Dial to the _ (Stitch Assist) position and follow the procedures below to merge several images into one large panoramic scene. In Stitch Assist mode, images can be shot in horizontal, vertical or 2x2 (matrix) sequences.

Buttons Available in Stitch Assist

Mode

Flash Button

The Auto, Red-Eye Reduction, Flash On and Flash Off modes can be set with this button.

Macro Button

The Macro mode for shooting photographic subjects 9 to 50 cm distant from the lens can be set with this button.

Retaking a Picture

• In this mode, repeatedly pressing the + Button enables you to scroll through the images to confirm the current merge sequence and to retake an image if required.

- To retake an image in a horizontal or vertical sequence, press the + Button to return to the previous image and take the shot. Press the + Button again to return to the original image.
- To retake an image in a 2x2 (matrix) sequence, press the + Button to advance to any image that you wish to replace and take the shot.

When a Sequence is Complete

- When you have completed shooting a sequence, press the SET Button to return to the Stitch Assist menu.
- To exit Stitch Assist mode, turn the Mode Dial to another setting, such as the L (Lock) Position.

Taking Pictures in Stitch Assist Mode continued....2/6

Shooting Hints

- It is convenient to use the Stitch Assist mode to quickly confirm as you shoot that successive images overlap.
- When shooting images for 2x2 matrices, ensure that each frame overlaps its neighbor to prevent a gap appearing in the middle of the merged image. Two images that are askew or mismatched from right to left (or top to bottom) will result in such a gap.
- Shoot all images with the same focus setting. Two images shot with substantially different focal distances — one focused on the foreground, for example, and another on the background — may produce unsatisfactory results. Be particularly careful with interior shots.

- When shooting a horizontal series of scenery shots, hold the camera as level (horizontal) as possible. Tilting the camera up or down may prevent the images from being successfully merged.
- Shooting images with a moving object in the overlapped portion may produce poor results.
 When shooting close-ups of documents
- When shooting close-ups of documents and magazines, avoid shooting segments from different angles. Hold the camera as close to parallel as possible.
- The difference in brightness of an image shot with a flash and one without can sometimes be too great to permit a successful merge. If you intend to merge images later with PhotoStitch, it is recommended that you shoot without the flash in relatively bright places.

Procedures for Shooting Horizontal/Vertical Sequences



 Select [Horizontal] or [Vertical] with the +/- Buttons and press the SET Button.



Horizontal Sequence

- To change the direction, press the + Button.
- Shoot the first image. After the indicator stops flashing green, the next image appears beside the previous image.
- 4. Orient the camera so that the second frame overlaps a small portion of the photographic subject of the first image and press the shutter button to take the next image.



After the indicator stops flashing green, the second recorded image will display beside a preview of the new photoTaking Pictures in Stitch Assist Mode continued....4/6

graphic subject captured by the lens.

- To retake the previous image in the sequence, press the + Button before shooting the next image. The previously recorded image will be replaced by a preview of the new photographic subject captured by the lens.
- Follow the same steps to shoot subsequent images in the sequence.
- Do not worry about minor discrepancies in the overlapped areas because the computer software can compensate for them when the images are merged.
- You can check through a sequence by repeatedly pressing the + Button.
 Release the button to retake the previous image.
- A maximum of 26 frames may be shot in any horizontal or vertical sequence.

 Finish the sequence by pressing the SET Button after the last image has been recorded.

2x2 Shot Procedures

- Turn the Mode Dial to the
 (Stitch Assist) position.
- 2. Select [2x2] with the +/- Buttons and press the SET Button.



 By default, images are recorded in a clockwise direction starting from the upper right. To change the starting position, press the + Button before taking the first shot.



 Overlap a small portion of the photographic subject of the first image and shoot the next image in the sequence.



After the indicator stops flashing green, the second recorded image will display in the lower right, and a preview of the new photographic subject captured by the lens will appear in the lower left.

5. Orient the camera so that the third image will correctly overlap a portion of the second image and take the shot. After the indicator stops flashing green, the third recorded image will display in the lower left, and a preview of the new photographic subject captured by the lens will appear in the upper left.



Taking Pictures in Stitch Assist Mode continued....6/6

6. Orient the camera so that the fourth image will correctly overlap a portion of the third image and take the shot. After the indicator stops flashing green, the fourth recorded image will display in the upper left, and a preview of a new photographic subject captured by the lens will appear in the position of the first image.



- Do not worry about minor discrepancies in the overlapped areas because the computer software can compensate for them when the images are merged.
- You can check through the sequence by repeatedly pressing the + Button, which

will cause the lens preview to disappear. Releasing the button displays the image immediately preceding the last image displayed.

- Finish the sequence by pressing the SET Button after all the images have been recorded.
- To retake a shot, press the + Button to advance to the image you want to replace, wait until the lens preview displays and then retake the shot.

Menu Features

Menus can be used to select image size and quality settings (Record Menu), to select the display options, such as information formats and the Slide Show option (Play Menu), and to select date, time and other camera settings, such as the LCD panel brightness (Setup Menu).

Record Menu





Date/Time p. 53

Play Menu

Play Mero	
Show Taffa.	
Silide Shee	COL 4 (1918)
Protect	100000000000000000000000000000000000000
Erasa :	O
Setup	No. 10
Frant Bark	

p. 41
p. 47
p. 50
p. 51
p. 52
p. 52
p. 53
p. 53
p. 53
p. 53
p. 54
p. 54
p. 51

Menu Features continued....2/13

Basic Menu Operations

Menu functions are operated by the MENU, +/- and SET Buttons.



MENU Button

This button turns the menu display on or off.
This button also displays the previous menu
when a submenu has been selected

+/- Buttons

These buttons move the selection from one option to another within a menu. A highlight appears around an option to indicate its selection. Press the + Button to display the

next option and press the - Button to display the previous option.



The selected item is highlighted

SFT Rutton

This button confirms the selection of a menu option or a setting. When there is a submenu available, pressing this button advances the display to the next menu level. Once the SET Button has been pressed, the selected setting comes into force.

Record Menu

Pressing the MENU Button in the Auto, Program or Stitch Assist modes displays the Record Menu on the LCD panel.

Quality

The Quality option is used to set the format in which the image will be recorded. Image quality can be set to Normal, Fine or CCD RAW and the size can be set to Large or Small.



Size/Quality Compression Format File Size Large/Fine (1024 x 768) JPEG High Quality 180 KB Large/Normal (1024 x 768) 13 IPEG Normal 85 KB Small/Fine (512 x 384) 23 JPEG High Quality 60 KB Small/Normal (512 x 384) IPEG Normal 30 KB CCD RAW (960 x 768) 940 KR No Compression

- JPEG file sizes will vary between photographic subjects.
- Figures noted herein reflect standard shooting conditions established by Canon.
- The Small and CCD RAW sizes are not available in Auto mode.

Menu Features continued....4/13

 The CCD RAW size is not available in Stitch Assist mode.

Review

The Review function displays the picture on the LCD panel if you continue to press the shutter after a shot is taken. The Review function will still display the picture even when the LCD panel is turned off.



+/- (Exp.)

The Exposure Compensation function allows you to adjust exposure settings to a variety of situations in which a photographic subject is shadowed or a light source is too intense, such

as backlight shots and artificially illuminated night shots.





• To use this function, aim the camera at the photographic subject and watch the preview image in the LCD panel while you adjust the exposure setting with the 4/- Buttons. The preview image will reflect the changes. Press the SET Button or MENU Button to set the setting. Once you have selected a setting other than zero, the Display Panel will show the "4/-" symbol.

···

Reset File No.

This function resets the file number that was automatically assigned to each frame as it was recorded. A new CF card will be assigned file number 1 and previously recorded CF cards will be assigned file numbers greater than those on the new CF card.



About File Numbers

Images are recorded in folders on the CF card. A single folder will accommodate up to 50 images. The first folder accommodates file numbers 1 to 50, the second numbers 51 to 100, the third numbers 101 to 150, and so on until the CF card is filled. However, removing a battery will cause the folder last accessed to close. When the battery is replaced, new images are assigned a file number starting from the first number of the next available block of 50. For example, if the last image was assigned file number 12, the first image after battery replacement will be assigned file number 51 and be placed in the next folder

Menu Features continued....6/13 Plav Menu

Pressing the MENU Button in the Play or Multi modes displays the Play Menu on the LCD panel.

Show Info

This function displays information about an image, such as its shooting date and file number.



- "Selecting this option causes the LCD panel to display the image data. The menu then shows the [Hide Info.] option.
- In Play mode, this function displays the image number, total number of images.

file number, shooting date and time and protection setting icon.

 In Multi mode, this function displays the image number of the selected image and the total number of images. When the total number of images requires four or more digits, all image numbers are replaced by the number sign "#".

Slide Show

This function automatically scrolls through the images on a CF card displaying each in turn as in a slide show. You can set the length of time that each is replayed and specify a subset of images to display with the Mark/Unmark option.



Start

Begin the slide show by selecting the Start option.



- The All Images option displays the complete set of images on a CF card.
- Select Show 1, 2 or 3, then use the Mark function to select the images you wish to contain in that show. Images are displayed in order by file numbers.
- During a slide show, press the +/- Buttons to pause or restart it.
- Press the MENU Button to stop a slide show.
- When the Power Save function is on, the camera automatically shuts down if five

minutes passes before a button is operated. To prevent this occurring during a long slide show, we recommend you set the Power Save function to off and use the compact power adapter to conserve the camera battery.

Only images shot with the PowerShot A5 will show the image number and total number of marked images when the Show Info function is on.

Mark/Unmark

This function is used to mark or unmark images for replay in a slide show. A marked image can be saved in shows 1 to 3.



Menu Features continued....8/13

- A Checkmark appears beside slide shows in which marked images have already been registered.
- Use the +/- Buttons to scroll through images and the SET Button to mark an image. If you select the marked image and press the SET Button, the image is unmarked. A checkmark will be associated with marked images.
- A checkmark will appear beside the shows that contain marked images.
- A maximum of 100 images can be marked.

Clear Marks

This function clears all marked data contained in shows 1 to 3.



Selecting the [OK] deletes the marks.
 Selecting the [Cancel] returns the LCD panel to the Slide Show menu.

Play Time

The length of time an image is displayed on the LCD panel can be set to manual (+/-) or to the 2-, 5- or 10-second settings.



- With the manual setting, the slide show can be advanced forward or backward with the +/- Buttons.
- The actual play time for some images may differ slightly from the selected setting.

Repeat

Selecting this option enables you to automatically repeat the slide show once it reaches the last image.



 The MENU Button will still end the slide show when pressed, even if the Repeat function is active.

Protect

The Protect function locks an image file to prevent accidental deletion from the CF card. The function is also used to unlock image files.



- Use the +/- Buttons to scroll through images and the SET Button to protect or unlock an image.
- An icon will appear next to an image that is protected.

Erase

This function can be used to erase image files from a CE card



- Selecting the Single option allows you to scroll through images with the +/-Buttons and select single images for erasing.
- Protected files can not be erased until their status is changed with the Protect

function

- Selecting the All option erases all the images on a CF card with the exception of protected images.
- When confirmation messages are displayed, select [OK] to erase, or [Cancell to cancel, this operation.

Print Mark

This function marks CF card files for printing. When the CF card is used with the optional digital printer CD-200, selecting [Print All] automatically prints the marked images.



 Use the +/- Buttons to scroll through images and the SET Button to mark or

unmark an image. A checkmark is appears beside with the marked images.

- Use the camera to confirm the checkmarks. The checkmarks can't be checked or altered once the CF card is placed in the printer.
- A maximum of 100 images may be marked.
- CCD RAW images will not print as part of the Print All queue on the CD-200 printer even if it is marked.

Setup

Selecting the Setup option in either the Record or Play menus displays the Setup submenu.



 The [Format] and [Language] options do not appear in the Setup submenu accessed from the Record Menu.

LCD

The brightness of the LCD panel can be switched between [Normal] and [Bright] settings.

Menu Features continued....12/13

Beep

The beep that signals the completion of the autofocus process and the closing of the shutter can be turned on or off with this function.

Power Save

This option turns the Power Save function on or off. If turned on, the camera will automatically powerdown if left unused for several minutes in any mode.

Reset

This function resets the LCD, Beep and Power Save settings to the factory default settings.



Factory Default
 Settings
 LCD: Normal
 Beep: On
 Power Save: On

Date/Time

Use this setting to adjust the camera's date and time settings and display formats.



- Press the SET Button to move between the Style, Day, Month, Year, Hour and Minute fields.
- Press the +/- Buttons to advance the numbers or options in a field.
- Press the MENU Button to save the settings and close the Date/Time menu.

Format

This function enables you to format a CF card for use with the camera.



- Please note that formatting a CF card permanently erases all the data, not only the images, previously recorded on it.
- Selecting the [OK] initiates the formatting process. Selecting the [Cancel] returns the Setup menu to the LCD panel.

Language

Use the Language option to change the language in which messages on the LCD panel are displayed.



- Use the +/- Buttons to move between language selections and the SET Button to execute the selection.
- In Play mode, you can go directly to this window by pressing and holding the SET Button, then pressing Macro/Jump Button.

Connecting to a TV

You can connect your camera to a television to display the images you have recorded by following the procedures below.

- Turn the camera's Mode Dial to the L (Lock) position (Off) and ensure that the TV power switch is off.
- Insert one end of the video cable shipped with the camera into the VIDEO Terminal and the other end into the TV's Video In jack.



- Turn the TV on and set its TV/Video setting to Video.
- Turn the camera's Mode Dial to the PLAY or MULTI position.
- Confirm that an image displays on the LCD panel, then press the LCD Button to turn off the panel and display on the TV screen.
- Play images using the normal procedures.
- When you finish viewing, turn the camera Mode Dial to the L (Lock) position before disconnecting the cable from both devices
- When you are using the +/- Buttons to switch images, the display resolution will drop slightly until the next image appears.

Connecting to a Computer


Connecting to a Windows Computer

The camera is shipped with a PC interface cable that fits into the camera's DIGITAL Terminal so that it may be connected to the serial port of a computer running a Windows operating system.



Connecting to a Macintosh Computer

The camera is also shipped with a Macintosh interface cable that fits into the camera's DIGITAL Terminal so that it may be connected to the modem or printer port of a computer running a Macintosh operating system.

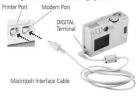

Connecting to a Computer continued....2/2

- *Before connecting the interface cable, ensure that both the camera and computer power switches are turned off. This means that you should turn the camera's Mode Dial to the L (Lock) position.
- Once the interface cables have been connected and the power switches turned on, you can load images onto the computer from the camera by turning the Mode Dial to the PC position and starting up the image processing software supplied with the camera.
- Please read the Quick Start Guide or Help file provided with each software program for specific instructions on their use.

Changing the Button Battery and Setting the Date/Time

If the Clock Not Set message A flashes on the Display Panel, it means that the button battery charge is low and the date/furm setting has been lost. Purchase a generic CR2016 lithium battery and exchange it for the spent battery with the following procedures.

Changing the Button Battery

- Ensure that the Mode Dial is set to the L (Lock) position.
- Slide the battery cover lock to the release position and slide the battery cover open.



3. Remove the battery pack.



Take out the button battery holder and remove the spent battery.



Changing the Button Battery and Setting the Date/Time continued....2/3

5. Place the new button battery into the holder with the negative terminal (-) facing upward as shown.



6. Place the loaded button battery holder back into place in the battery chamber.



Align the button battery holder with its slot and lightly press it forward into place with your fingertip.

7. Replace the battery pack.



Close the battery cover and slide the lock to the locked position.



 Check to make sure that the lock is in the locked position once you have closed the battery cover. The camera will not operate unless the lock is set.

Setting the Date/Time

Follow the procedures below to set the date/ time once you have changed the button battery.

- The Clock Not Set message will continue to flash on the Display Pane until you set the date/time, even if you have changed the button battery. Always set the date/time after changing the button battery.
- Turn the Mode Dial to the □ (Auto) position.
- 2. Press the MENU Button.



3. Use the +/- Buttons to select Setup and press the SET Button.



- Use the +/- Buttons to select Date/Time and press the SET Button.
- 5. Use the SET Button to move between fields and the +/- Buttons to change the values to the appropriate settings.



- Press the Menu button when you finish adjusting the settings.
- 7. Turn the Mode Dial to the L (Lock) position.

Camera Maintenance

Follow the procedures below to clean the camera body, lens, viewfinder and LCD panel when they become dirty.

 Never use thinners, benzene, synthetic cleansers or water to clean the equipment. The use of these substances may distort or damage the equipment.

Camera Body Gently wipe dirt off the camera body with a

from the lens

soft cloth or an eyeglass lens wiper.

Lens
Use a lens blower to remove dust and dirt

Never wipe anything directly on the lens, even a soft cloth or eyeglass lens wiper. If the lens accumulates dirt that will not come off with a lens blower, contact your camera retailer or the closest Canon Customer Support Help Desk.

Viewfinder

Use a lens blower to remove dust and dirt from the viewfinder. If necessary, gently wipe the viewfinder with a soft cloth or eyeglass lens wiper to remove stubborn dirt accumulations

LCD panel

Use a lens blower to remove dust and dirt from the LCD panel. If necessary, gently wipe the LCD panel with a soft cloth or eyeglass lens wiper to remove stubborn dirt accumulations.

Never rub or press strongly on the LCD panel. Rubbing or pressing firmly on the LCD panel may damage it or

Optional Accessories

The follwing optional accessories are available for the PowerShot A5.

Soft Case

This attractive case protects the camera.



CF Cards

CompactFlash™ (CF) cards are used to store images recorded by the camera. The card must be installed into the camera to operate. Only one card can be installed at a time. A CF card is supplied with the camera at the time of purchase. However, if you wish to purchase additional cards, please see the list below for the model names and capacities of the available products.



CF Cards and Capacities

	Small/N	Small/F	Large/N	Large/F	CCD RAW
FC-4M	118	63	45	22	4
FC-8M	236	125	89	44	8
	4.00	225	144	200	12.00

- Figures noted herein reflect standard shooting conditions established by Canon.
- The performance of the PowerShot A5 can be guaranteed only with CF cards manufactured by Canon.
 N=Normal F=Fine CCD RAW= Non compressed

Optional Accessories continued....2/2

PCMCIA Card Adapter

An adapter to fit to a CF card so that it can be used in a PCMCIA (PC card) slot in a computer.



CF Card Reader

This device enables computers lacking a PCMCIA (PC Card) slot to carry out read and write operations on a CF card.

Digital Printer CD-200

A printer into which a CF card can be inserted to print out high-quality image prints. Easy operation.

If print marks are placed on your target images with the PowerShot A5 camera, the printer will automatically print only those images.



Troubleshooting _____

Problem	Cause(s)	Solution(s)
Camera will not operate	Battery cover lock not in lock position	 Slide the battery cover lock into the locked position.
	2CR5 lithium battery is inserted the wrong way	 Install the 2CR5 lithium battery with the terminals oriented toward the back of the chamber.
	Insufficient battery power (LCD panel displays [Lb])	 Use a fully charged battery pack. Replace the battery. Use an approved AC power source.
	Incorrect battery type	 Use the specified battery pack or lithium battery.
	Poor contact between battery and camera terminals	Wipe the battery terminals with a clean, dry cloth.
Camera will not shoot	Mode Dial is set to L (Lock) position	• Turn the Mode Dial to any one of the □ (Auto), P (Program) or □□ (Stitch Assist) mode positions.

Troubleshooting continued....2/5

Problem	Cause(s)	Solution(s)
Camera will not shoot	Flash is charging (\$ mark flashes)	 Wait to press the shutter button until the flash charges, the \$ mark changes from flashing to a steady light and the indicator shines red.
	CF card slot cover is open (LCD panel displays "CF")	 Firmly close and lock the CF card slot cover.
	CF card full	 Replace the CF card. Load the data of the CF card to a computer and erase all or some of the card's images to create space.
	CF card not formatted correctly (LCD panel displays "CF")	The logic circuits of the CF card may be faulty or damaged. Please consult the nearest Canon Customer Support Help Desk.
Battery fails prematurely	Low ambient temperature has diminished battery output	 Restrict use of the battery pack to places with ambient temperatures over 0°C. When taking shots in relatively cold conditions, keep the camera warm next to your body or in a pocket.

Troubleshooting continued....3/5

Problem	Cause(s)	Solution(s)
Battery fails prematurely	Battery capacity has diminished after non-use for a year or more	 The battery should recover if you fully charge and fully discharge it several times.
	Battery pack life has been exceeded	 This battery pack can no longer be used to operate the camera. Replace it with a new battery pack.
Battery pack will not charge	Poor connection between battery pack and compact power adapter	Seat the battery pack more firmly into the charger. Check the AC power cord connection between the wall socket and the charger.
	Camera is drawing power from the AC power source	The battery pack won't charge when the camera is drawing power from the compact power adapter. Turn the camera's Mode Dial to the L (Lock) position to initiate charging.

Troubleshooting continued....4/5

Problem	Cause(s)	Solution(s)
Image is blurred or out of focus	Camera or photographic subject is moving	Be careful not to move the camera when pressing the shutter button.
	Photographic subject is out of focal range	Move camera at least 50 cm from subject. Use the Macro function to shoot subjects between 9 and 50 cm from the lens.
	Autofocus (AF) Auxiliary Light Emitter is obscured, hampering autofocus function	 Be careful not to block the AF Auxiliary Light Emitter with your finger, clothing or jewelry.
Images are too dark	Insufficient ambient light	 Ensure that the Flash mode is set to on.
	Photographic subject is insufficiently illuminated in comparison with surround- ings	Adjust the Exposure Compensation mode to a positive "+" setting.

Troubleshooting continued....5/5 ___

Problem	Cause(s)	Solution(s)
Images are too dark	Photographic subject is beyond the range of the flash	The effective range of the flash is 20 cm to 3.5 m .
Images are too bright	Photographic subject is too close	 The effective range of the flash is 20 cm to 3.5 m.
	Photographic subject is brighter than surroundings	 Adjust the Exposure Compensation function to a negative "-" setting.
	Light is shining directly on or reflected onto camera from the photographic subject	Change the shooting angle.
	Camera is set to Flash On mode	 Set the camera to Auto or the Flash Off mode.
Flash will not work	Camera is set to Flash Off mode	 Set the camera to Auto or Flash On mode.

List of Message Codes _

The following codes may appear in the Display Panel. The significance of the message is explained alongside

alongs	100.
Pb:	Image playback
CF:	No CF card installed, CF card slot cover is open or unlocked, or CF card error
Lb:	Insufficient battery charge to operate camera
PC:	Camera connected to a PC in PC mode
Exx:	(xx: number) Camera malfunction. Turn Mode Dial to L (Lock) position and retry shot or replay. Problem exists if error code reappears. Note the number and contact Canon Cus- tomer Support Help Desk. If error code displays directly after taking a picture, shot may not be recorded. Check image with Play function.
(_1 :	2CR5 lithium battery or Battery Pack NB-5H charge low. Replace 2CR5 lithium battery or recharge Battery Pack NB-5H.
a:	Button battery charge low and date/time setting lost. Replace battery and reset date and time.

List of Messages

The following messages may appear on the LCD panel.

Busy:	Image is recording on CF card.
CF card full!:	CF card is too full to accommodate more images.
No Image.:	No images recorded on CF card.
Image too Large.:	You attempted to view an image larger than the Large (1024 x 768) size.
CF card error!:	CF card has experienced an anomaly.
Naming error!:	There is a file in the root directory titled [DC97] or you attempted to record a shot onto a CF card with a file entitled [AUT_0000.JPG] nestled within the [CTG99999] and the [DC97] folders, respectively.
Incompatible JPEG format:	You attempted to view an incompatible JPEG file.
No CF card:	You attempted to view or shoot an image without a CF card installed.
Corrupted Data:	You attempted to view an image with corrupted data.

Specifications

PowerShot A5

Shutter:

Shutter Speeds:

Focusing Method:

Image Sensor: 810.000-pixel (total), 1/3-inch charge coupled device

8 bits x 3 colors (10-bit data processing)

Gradation Reproduction: Sensitivity: Equivalent to ISO 100 (Large/CCD RAW), Equivalent to ISO 400 (Small)

CompactFlash™ card Image Data Storage:

File Format: CIFF (Camera Image File Format) Image Compression: Images: JPEG and proprietary Canon format (CRW); Thumbnails: JPEG

Compression Modes: Fine, Normal and CCD RAW

Recorded Image Size: 1024 x 768 or 512 x 384 pixels

Image Properties: Shooting date and time, image serial number, etc. Camera Modes: Auto, Program, Stitch Assist, Play, Multi and PC 5 mm (35 mm film equivalent : 35 mm), F2.5 Lens:

Viewfinder: Real-image optical viewfinder, Gives 86% coverage of actual picture area 2-inch low-temperature poli-silicone thin-film transistor liquid crystal display

Mechanical + electronic

1/6 to 1/750 sec.

Through the lens high-speed autofocus

Standard: 50 cm to infinity: Macro: 9 to 50 cm Focusing Range: Auto Exposure Method: Through the lens programmable auto exposure

Metering Range: EV 5 - 16.5 Exposure compensation: + 2 FV

Flash: Built-in (Auto, On, Off, Red-Eve Reduction)

Flash Range: 0.2 to 3.5 m

Specifications continued....2/2

White Balance control: TTI, auto white balance Self-Timer: 10-second delay Interfaces:

RS232C, CF Slot, Video Out

Power Supply: Nickel-hydride Battery Pack NB-5H (400 shots or more, or approximately 70 minutes of replay)

2CR5 lithium battery (700 shots or more, or approximately 100 minutes of replay) Compact Power Adapter CA-PS100E

CR2016 lithium battery for Date / Clock backup

Tesina Conditions

Nickel-hydride Battery Pack NB-5H was used fully charged; 2CR5 lithium battery was used immediately

after purchase.

Shooting:settings were Large/Fine, LCD off; flash used once every four shots. Replay: continuous replay, each image was displayed for 5 seconds.

Operating Temperatures: 0° to 40° C Operating Humidity: 10 to 90 % Dimensions: 103 x 68 x 32 5 mm

Weight: Approximately 230 g, excluding batteries and CF card

* All data are based on Canon's standard testing methods.

Subject to change without notice.

Appendix A

Canon

Canon Battery Pack Instructions



Canon Battery Pack NB-5H is a nickel-hydride battery pack intended for exclusive use with Canon PowerShot digital cameras. The battery pack can be charged with the Canon Compact Power Adapter CA-PS100E for approximately 300 charge cycles.

Before You Use Battery Pack NB-5H

Fully charge Battery Pack NB-5H before using it for the first time.

Please read the operating instructions provided with Compact Power Adapter CA-PS100E to charge.



Compact Power Adapter CA-PS100E

⚠ Operating Precautions

Before you use the battery pack for the first time, charge it fully.

Full Charging Time: Approx. 90 minutes (Based on Canon's standard testing method with the Compact Power Adapter CA-PS100E.)

- ➤ Charge times will vary with ambient temperatures and battery charge states.
- ➤ To prolong the life of the battery pack and prevent deterioration of performance, do not charge for more than 24 hours at a time.
- Recharging before the battery pack is fully discharged may diminish the capacity of the battery. If this should occur, you may restore it by fully charging and discharging it.
- The capacity of battery packs left unused for long periods (more than 1 year) will be shorter than normal immediately after use is resumed.

- The capacity can be restored by fully charging and discharging the battery pack several times.
- Replace a battery pack if it repeatedly fails to record the rated number of images after being charged the specified length of time.

⚠ Safety Precautions

- Do not charge this battery pack with chargers other than those recommended by Canon.
- Do not use the Battery Pack NB-5H in products other than those recommended by Canon.
- Do not short-circuit the positive and negative terminals of the battery pack with metallic or other objects. Use the supplied battery case when transporting or storing the battery pack outside the camera.
- Avoid dropping or subjecting the battery pack to severe impacts.

- Do not attempt to disassemble or alter the battery pack.
 Do not apply heat or expose the battery pack
- to open flame.

 Store the battery pack well out of the reach of

children.

 Immediately flush water over parts of the body or clothing that come into contact with the inner contents of a battery if the outer casing incurs damage. If any of these substances should contact internal tissues, such as eyes or the mouth, immediately flush with water and seek medical assistance.

Appendix A continued....4/4 _

Storage Precautions

Battery packs continually discharge small amounts of energy while installed in the camera. Long storage of a battery pack in the camera could cause unnecessary discharge that will shorten its life.

We recommend that you remove the battery pack from the camera if you do not anticipate its immediate use. Store it in a cool, dry place in the case provided. Before resuming use, ensure that you charge the battery pack fully.

	Specifications
Type:	Nickel-hydride cells
Rated Voltage:	6 V
Rated Amperag	e: 650 mAH
Life-Span:	Approximately 300 charges cycles
Operating Temp	eratures: 0° to 40°C
Dimensions:	34 x 22 x 49 mm
Weight:	Approximately 70 n

Subject to change without notice.

Appendix B

Canon

CA-PS100E



Compact Power Adapter CA-PS100E is designed for exclusive use as the AC power source for Canon PowerShot digital cameras using Battery Pack NB-5H and the charger for NB-5H.

Voltage Range

Compact Power Adapter CA-PS100E is rated for input voltages ranging between 100 and 240 volts.

Charging the Battery Pack NB-5H

- Connect the power cord to the compact power adapter and plug it into a power outlet.
- 2. Place the battery pack into the socket of the compact power adapter (Fig. 1).



While charging, the charging indicator on the compact power adapter will flash green. Once the battery pack has charged, the indicator will remain lit.

A fully depleted battery pack will require approximately 90 minutes to charge fully (based on Canon's standard testing method).

Unplug the compact power adapter from the power outlet after charging and when the unit is not in use.

Appendix B continued....3/4

Powering the Camera with the Compact Power Adapter

- Place the DC Coupler DR-100 into the camera's battery chamber and connect the DC terminal to the compact power adapter (Fig. 2).
- Ensure that the camera's Mode Dial is set to the [L] Lock position (power off).

The DC indicator on the compact power adapter will light red while powering the camera.

Battery Pack NB-5H will not charge while the compact power adapter is powering the camera.

Unplug the power cord from the power outlet after use.

3. Connect the power cord to the compact power adapter and plug it into a power outlet.



⚠ Operating Precautions

- Do not use the compact power adapter to charge products other than Battery Pack NB-5H.
- To prolong the life of the battery pack and prevent deterioration of performance, do not charge it for more than 24 hours at a time.
- The use of this equipment as an AC power source is limited to those devices that also use Battery Pack NB-5H. Do not use this equipment to power any other devices.
- Never disassemble or alter any part of this equipment.
- Do not leave the equipment in places subject to direct sunlight or high temperatures.
- Do not attempt to charge the battery pack in places with poor air circulation.

Please read the operating instructions provided with Battery Pack NB-5H.

Specifications

Input Voltage: AC 100 to 240 V (50/60 Hz)

Rated Output: Charging: 7.2 V, 0.65 A

Camera power supply: 6.5 V, 1.5 A
Input Rating: Charging: 23 to 26 VA (100 V)

Camera power supply: 18 to 20 VA (100 V)
Operating Temperature: 0° to 40°C

Dimensions: 75 x 102 x 39 mm

Weight: Approximately 180 g

Subject to change without notice.

Appendix C

Canon

Canon CompactFlash™ Card



The CompactFlash™ Card (CF card) is designed for exclusive use as storage media for PowerShot dipital cameras. CF cards can be used to record images and sound when installed in the camera. They can also be inserted into a PCMCIA (PC card) sict (PCMCIA 2.1/IEIDA 4.2 Standard slot) with the addition of a PCMCIA adapter and used directly with a computer to load and save images.

Instructions for Camera Installation

Install the CF card in accordance with the handling instructions accompanying the camera.

Instructions for PCMCIA Slot Installation

 Insert the CF card firmly into the PCMCIA adapter as shown in Fig. 1.





Appendix C continued....2/4 _

2. Insert the PCMCIA adapter all the way into the PC card slot as shown in Fig. 2.

Fig. 2



Inserting the PCMCIA adapter will cause the eject button to pop out. Use this button to eject the assembly.

⚠ Operating Precautions

- Do not turn the camera power off or remove the CF card while the camera is recording, reading or deleting files on the CF card.
- CF cards are high-precision electronic devices.
 Do not bend, apply strong force to or subject them to impacts or strong shocks.
- Do not attempt to disassemble or alter CF cards
- Moving a CF card rapidly between hot and cold temperatures may cause condensation (water droplets) to form on it, leading to malfunctions. Avoid this problem by placing the CF card in a plastic bag and letting it slowly adjust to temperature changes before removing it from the bag. If condensation should occur, maintain the CF card at a constant temperature and let the moisture evaporate naturally.

Appendix C continued....3/4 .

- Store CF cards in the special case provided.
- Do not use or store CF cards in places subject to the following conditions.
 - ➤ strong magnetic fields
 - ➤ abundant dirt or dust
 - ➤ high temperatures, high humidity

Precautions with the FC-15M

Please note that a short interval of time (about 1 minute) may be required on certain computers for the PC card icon to appear on the Taskbar after the FC-15M has been inserted into the PC card slot. If this is the case, you are recommended to remove the Windows® standard driver and install the SanDisk ATA FlashDisk device driver. The required procedures are listed below. If you are unclear about these procedures, please consult your computer manufacturer.

Procedures to Remove the Windows Standard Driver

- With the FC-15M inserted in the PC card slot, click the [My computer] icon with the right mouse button and select the [Properties] option.
- In the System Properties dialog box that appears, click the [Device Manager] tab and select the [View devices by connection] check box at the top.
- Click the [Computer] option, select the device with the PC card icon and click the [Remove] button.
- When the Confirm Device Removal dialog appears, click the [OK] button.
- 5. Close the System Properties dialog box.
- 6. Remove the FC-15M from the PC card slot.

Appendix C continued....4/4 ...

Procedures to Install the SanDisk ATA FlashDisk Device Driver

- 1. Insert the FC-15M in the PC card slot.
- When the New Hardware Found dialog box appears, select the [Select from a list of alternate drivers] option and click the [OK] button.
- 3. In the Select Device dialog box, select the [Show all devices] option.
- In the [Manufacturers] category, select [SanDisk], which will automatically cause the [SanDisk ATA FlashDisk] option to be selected in the [Models] category. Finish by clicking the [OK] button.

Specifications	
Interface:	PCMCIA/ATA PCMCIA 2.1/JEIDA 4.2
Card Slot Type:	Туре II
Dimensions:	86 x 54 x 5 mm
Weight:	Approximately 34 g

Subject to change without notice.

Index

Symbols	
+ Button	43
+/- Buttons	43
Button 26,	43
A	
Auto Exposure	
Auto Flash mode	27
Auto Mode	20
Auto White Balance	24
Autofocus	24
Autofocus (AF) Auxiliary Light Emitter	16
В	
Battery cover	58
Battery cover lock 17,	58
Button battery	58
Button battery holder	
C	
Camera Modes	20
CCD RAW 18,	44
CF Card	62
CF Card Reader	63
CF Card Slot Cover	17
Clock Not Set message	58
Continuous Button	
Continuous mode Continuous/Self-Timer (+) Button	26
16 25	

DC Coupler Cable Cover	17
Digital Printer CD-200 51,	
	56
	21
Display status	21
E	
Exposure settings	45
F	
File Numbers	46
Flash	16
Flash (-) Button 16, 26, 32,	36
Flash Off mode	27
Flash On mode	27
Image Size	18
Indicators	23
Jump Button	28
	28
Jump mode	20
L (Lock) position	15
Large/Fine 18,	
Large/Normal	44

LCD Button	. 16,	29
LCD panel		16
Lens		16
Lock for CF Card Slot Cover		17
Lower Indicator		23
M		
Macintosh Computer		56
Macintosh Interface Cable		56
Macro Button 28, 3	1, 32,	36
Macro mode	. 22,	28
Macro/Jump Button	. 17,	28
Maintenance		61
Camera Body		61
LCD panel		61
Lens		61
Viewfinder	*******	61
Menu	*******	42
	7, 29,	43
	9, 20,	31
Auto Mode	*******	31
Lock		31
Multi Mode	*******	34
Play Mode	*****	34
Program Mode	(000000)	32
Stitch Assist Mode		33

Index continued....2/2

P	
PC Card Adapter	ť
PC Interface Cable	4
PC Mode	2
PCMCIA Card Adapter	ŧ
Play Menu 29, 42,	4
Erase	4
Print Mark	4
Protect	-
Show Info	4
Slide Show	4
riay wiode	2
Playback Modes	1
Power Off	1
Power On	1
Power Save Function	1
Pressing Fully	2
Pressing Halfway	2
Program Mode	2
Q	
Quality	4

Quality Reset File No.

Review 45

Red-Eye Reduction lamp 16,	
Red-Eye Reduction mode	26
S	
Self-Timer Button	31
Self-Timer mode	26
SET Button 17, 30,	43
Setup Menu	52
Веер	53
Date/Time 53,	60
Format	54
Language	54
LCD	52
Power Save	53
Reset	53
Shooting Modes	19
Shutter Button 16,	24
Single mode	25
Size	44
Small/Fine 18,	44
Small/Normal 18.	44
Soft Case	62
Stitch Assist Mode	20
2x2 (Matrix) Sequence 33.	39
Horizontal Sequence 33,	38
Vertical Sequence	38
Strap Holder	16

Television	55
Tripod Socket	17
U	
Upper Indicator	23
V	
Video Cable	55
VIDEO Terminal 17,	55
Viewfinder 16,	22
Viewfinder Frame Marks	22
W	Ų
Windows Computer	56

Canon Customer Support

CANON INC.

30-2 Shimomaruko 3-chome, Ohta-ku, Tokyo 146, Japan

NORTH AMERICA

Canon Computer Systems, Inc. Canon U.S.A., Inc.

Computer Systems Customer Care Center Phone (US): 1-800-423-2366 (Automated Support, 24 hours/

day, 7 days/week)

Canon Canada Inc. Computer Systems Customer Care Center

Phone (Canada): 1-800-263-1121 (24 hours/day, 7 days/week)

EUROPE. AFRICA & MIDDLE EAST

Canon Europa N.V.

PO Box 2262, 1180 EG Amstelveen, The Netherlands

Canon (Uk) Ltd

For technical support, please contact the Canon Help Desk: P.O. Box 431, Wallington, Surrey, SM6 0XU Tel: (0990) 143723 (Calls may be recorded)

Fax: (0990) 143340 BBS: (0990) 143350

For sales enquiries, please call on (0121) 666-6262

Canon France S.A.

17. Quai Paul Doumer. 92414 Courbevoie Cedex. France Standard: 01.41.99.77.77

> Télécopie: 01.41.99.77.99 http://www.canon.fr

Canon Deutschland Gmbh

Postfach 528, 47705 Krefeld, Germany Tel: 02151/345-0 Fav: 02151/345-102

Canon Hotline Service:

Customer Support: (02151) 349-555 Info Desk: (02151) 349-566 Mailbox: (02151) 349-577 Fax: (02151) 349-588

Canon Italia S.P.A.

Palazzo L, Strada 6, 20089 Milanofiori - Rozzano (MI), Italy Tel: 02/8248 1 Fax: 02/8248 4604 Pronto Canon: 02/8249 2000 RBS: 02/8249 2099

http://www.canon.it Canon Benelux Belgium N.V./S.A.

Bessenveldstraat 7, 1831 Diegem, Belgium

Canon Benelux N.V.

Neptunusstraat 1, 2132 JA Hoofddorp, The Netherlands

Canon España S.A.

C/Joaquin Costa, 41, 28002 Madrid, Spain

Tel: (91) 538 45 00 Fax: (91) 411 4176 Help Desk: (91) 538 47 87 & (91) 538 47 88 E-mail: helpdesk@lander.es

Canon Norge A.S.

Hallagerbakken 110, Postboks 33, Holmlia, 1210 Oslo 12, Norway Tlf. 2262 9321 Fax. 2262 0615

E-mail: helpdesk@canon.no

Canon Oy Ab

Kornetintie 3, 00380 Helsinki, Finland

Puhelin: 010 54420 Fax 010 544 4571 Help Desk 0600 0 22606 (maksu 14,80 mk/min)

Sähköposti helpdesk@canon.fi http://www.canon.fi

Canon (Schweiz) Ag

Industriestrasse 12, 8305 Dietlikon, Switzerland

Tel. 01-835-6161, Fax 01-835-6860 Hotline 157 30 20 http://www.canon.ch

Canon Svenska Ab

Stensätravägen 13, S-127 88, Skärholmen, Sweden

Canon Gmbh

Zetschegasse 11. 1232 Wien. Austria

Bruhn A.S. Vasekær 12. DK-2730 Herley. Denmark

Hotline: 44 88 26 66 http://www.canon.dk

OCEANIA

Canon Australia Ptv. Ltd.

Info-Line : (02) 9805 2864

Canon New Zealand Ltd. Info-Line: 0900-522666

ASIA

Canon Hongkong Co., Ltd.

Phone: 852-2739-0802 Fax: 852-2739-6428

Canon Singapore Pte. Ltd.
79 Anson Road, #09-01 / 06, Singapore 079906
Phone: (65) 532 4400 Fax: (65) 221 7577

Canon Customer Support continued....3/3

Canon Marketing Services

2 Alexandra Road, #04-01A, Delta House, Singapore 159919 Phone : (65) 273 5311 Fax : (65)273 6786

Canon Marketing (Malaysia) Sdn. Bhd.

13A Jalan 219, 46100 Petaling Jaya, Selangor D.E., Malaysia Phone: (60) 757 7210 Fax: (60) 757 7832

Canon Marketing (Thailand) Co., Ltd.

2nd Floor, Indosuez House, 152 Wireless Road, Bangkok 10330 Thailand Phone: (662) 651 4000. Ext. 454 Fax: (662) 651 4095

Ulead Customer Support

For: Ulead PhotoImpact 4.0

INTERNATIONAL

Ulead Systems, Inc. (Taiwan) Tel: +886-2-8787-6740 Fax: +886-2-8787-6741

Internet: support@ulead.com.tw

Ulead Systems, Inc. (USA)

Tel: +1-310-523-9393 Fax: +1-310-523-9399 Internet: support@ulead.com

Germany Ulead Support Center

Tel: +49-2602-917-329 Fax: +49-2602-917-327 Internet: uleadoer@aol.com

France Center d'assistance Ulead

Internet: graphics@imaginet.fr Tel: +33-1-30-76-10-30 Fax: +33-1-30-76-22-87

BIT (UK) Limited

E-mail: 100111.3424@compuserve.com Tel: +44-1420-83811Fax: +44-1420-80657 Internet: www.bit.co.uk

World Wide Web http://www.ulead.com