Canon

EOS 500D





Thank you for purchasing a Canon product.

The EOS 500D is a high-performance, digital single-lens reflex camera featuring fine-detail CMOS sensor with 15.10 effective megapixels, DIGIC 4, high-precision and high-speed 9-point AF, approx. 3.4 fps continuous shooting, Live View shooting, and Full HD (Full High-Definition) movie shooting.

The camera is highly responsive for shooting at anytime, provides many features for demanding shots, and has many other features.

Take a Few Test Shots to Familiarize Yourself with the Camera

With a digital camera, you can immediately view the image you have captured. While reading this manual, take a few test shots and see how they come out. You can then better understand the camera. To avoid botched pictures and accidents, read the Safety Warnings (p.219,220) and Handling Precautions (p.12,13).

Testing the Camera Before Using and Liability

After shooting, playback and check whether the image has been properly recorded. If the camera or memory card is faulty and the images cannot be recorded or downloaded to a computer, Canon cannot be held liable for any loss or inconvenience caused.

Copyrights

Copyright laws in your country may prohibit the use of your recorded images of people and certain subjects for anything but private enjoyment. Also be aware that certain public performances, exhibitions, etc., may prohibit photography even for private enjoyment.



This camera is compatible with SD memory cards and SDHC memory cards. This manual will refer to all these cards as just "card."

* The camera does not come with a card for recording images. Please purchase it separately.

Item Check List

Before starting, check that all the following items have been included with your camera. If anything is missing, contact your dealer.



Camera (with eyecup and body cap)



Battery Pack LP-E5 (with protective cover)



Battery Charger LC-E5/LC-E5E*



Wide Strap EW-100DB III





Interface Cable AV Cable IFC-200U AVC-DC400



FOS DIGITAL Solution Disk (Software)



FOS DIGITAL Software Instruction Manuals Disk





- (2) Pocket Guide
 - Quick start guide to shooting.
- (3) CD-ROM Guide

Guide to the provided software (EOS DIGITAL Solution Disk) and EOS DIGITAL Software Instruction Manuals Disk

- * Battery Charger LC-E5 or LC-E5E is provided. (The LC-E5E comes with a power cord.)
- If you purchased a Lens Kit, check that the lens is included.
- Depending on the Lens Kit type, the lens instruction manual might also be included.
- Be careful not to lose any of the above items.

Conventions Used in this Manual

Icons in this Manual

<:>> : Indicates the Main Dial.

< \checkmark > < < : Indicate the < \diamond > cross keys.

<(SET)> : Indicates the setting button.

₫4, ₫6, ₫10, ₫16: Indicates that the respective function remains

active for 4 sec., 6 sec., 10 sec., or 16 sec. respectively after you let go of the button.

* In this manual, the icons and markings indicating the camera's buttons, dials, and settings correspond to the icons and markings on the camera and on the LCD monitor.

MENU: Indicates a function which can be changed by pressing the <MENU> button and changing the setting.

: When shown on the upper right of the page, it indicates that the function is available only in the Creative Zone modes (p.20).

(p.**) : Reference page numbers for more information.

: Tip or advice for better shooting.

? : Problem-solving advice.

: Warning to prevent shooting problems.

: Supplemental information.

Basic Assumptions

- All operations explained in this manual assume that the power switch is already set to <ON>.
- It is assumed that all the menu settings and Custom Functions are set to the default.
- For explanatory purposes, the instructions show the camera attached with an EF-S 18-55mm f/3.5-5.6 IS lens.

Chapters I

For first-time users, chapters 1 and 2 explain the camera's basic operations and shooting procedures.

	Introduction	2
	Camera basics.	
1	Getting Started	23
2	Basic Shooting and Image Playback Fully automatic shooting for different subjects.	43
3	Advanced Shooting Techniques Shooting features for specific types of subjects.	57
4	More Advanced Techniques Advanced shooting features.	75
5	Live View Shooting Shoot while viewing the LCD monitor.	105
6	Shooting Movies	121
7	Handy Features Convenient menu-based functions.	129
8	Image Playback	147
9	Printing Images and Transferring Images to a Computer	163
10	Customizing the Camera	181
11	Reference	191

Contents ____

	Introduction
	Item Check List
	Conventions Used in this Manual
	Chapters5
	Contents at a Glance
	Handling Precautions
	Quick Start Guide
	Nomenclature
1	Getting Started 23
	Charging the Battery24
	Installing and Removing the Battery
	Turning on the Power
	Setting the Date and Time
	Selecting the Interface Language
	Installing and Removing the SD Card
	Attaching and Detaching a Lens
	About the Lens Image Stabilizer
	Basic Operation
	MENU Menu Operations
	Formatting the Card
	Switching the LCD Monitor Screen
2	Basic Shooting and Image Playback 43
	☐ Fully Automatic Shooting
	☐ Full Auto Techniques
	Shooting Portraits
	➤ Shooting Landscapes
	Shooting Close-ups
	K Shooting Moving Subjects
	☑ Shooting Portraits at Night
	Disabling Flash
	© Creative Auto Shooting
	▶ Image Playback56

	57
P: Program AE	58
ISO: Changing the ISO Speed	60
\$ Using the Built-in Flash	62
AF: Changing the AF Mode	64
⊞ Selecting the AF Point	66
MF: Manual Focusing	67
□ Continuous Shooting	68
🐧 Using the Self-timer	69
Setting the Image-recording Quality	70
Selecting a Picture Style	73
More Advanced Techniques	75
Tv: Action Shots	76
Av: Changing the Depth of Field	78
Depth of Field Preview	80
M: Manual Exposure	81
A-DEP: Automatic Depth-of-Field AE	82
Changing the Metering Mode	83
Av ☑ 52 Setting Exposure Compensation	84
Auto Exposure Bracketing	86
Customizing a Picture Style	88
Registering a Picture Style	91
Setting the Color Space	93
X AE Lock	94
¥ FE Lock	95
WB: Setting the White Balance	96
₩ White Balance Correction	98
Lens Peripheral Illumination Correction	100
Using the Quick Control Screen	102
Preventing Camera Shake	104
	Advanced Shooting Techniques P: Program AE ISO: Changing the ISO Speed \$ Using the Built-in Flash AF: Changing the AF Mode Selecting the AF Point MF: Manual Focusing Continuous Shooting Using the Self-timer Setting the Image-recording Quality Setting the Image-recording Quality Selecting a Picture Style More Advanced Techniques Tv: Action Shots Av: Changing the Depth of Field Depth of Field Preview M: Manual Exposure A-DEP: Automatic Depth-of-Field AE Changing the Metering Mode Av⊠ Setting Exposure Compensation Auto Exposure Bracketing Selecting a Picture Style Setting the Color Space ★ AE Lock ★ FE Lock WB: Setting the White Balance WE White Balance Correction Lens Peripheral Illumination Correction Eventual Selection Screen Preventing Camera Shake

5	Live View Shooting	105
	☐ Live View Shooting	106
		108
	Using AF to Focus	111
	Focusing Manually	118
6	Shooting Movies	121
	¹ ── Shooting Movies	122
	Movie Settings	123
7	Handy Features	129
	Handy Features	130
	Silencing the Beeper	130
	Card Reminder	130
	Setting the Image Review Time	130
	Setting the Auto Power-off Time	
	Adjusting the LCD Monitor Brightness	
	File Numbering Methods	
	Auto Rotate of Vertical Images	
	DISP. Checking Camera Settings	
	Reverting the Camera to the Default Settings	
	About Copyright Information	
	Preventing the LCD Monitor from Turning off Automatically	
	Changing the Shooting Settings Screen Color	
	Setting the Flash	
	. ☐ Automatic Sensor Cleaning	
	Appending Dust Delete Data	
	Manual Sensor Cleaning	145
8	Image Playback	147
	Searching for Images Quickly	148
	역/역 Magnified View	150
	Rotating the Image	151
	Relaying Movies	152

	Slide Show (Auto Playback)	154
	Viewing the Images on TV	156
		158
		159
	DISP. Shooting Information Display	161
9	Printing Images and Transferring Images to a Computer	163
	Preparing to Print	164
	Printing	166
	Trimming the Image	171
	Digital Print Order Format (DPOF)	173
	Direct Printing with DPOF	176
	Transferring Images to a Computer	177
4-		
10	Customizing the Camera	181
	Setting Custom Functions	182
	Custom Function Settings	184
	Registering My Menu	190
44	~ /	404
11	Reference	191
	When Autofocus Fails	192
	Using a Household Power Outlet	193
	Remote Control Shooting	194
	External Speedlites	196
	Function Availability Table	198
	Menu Settings	200
	Troubleshooting Guide	203
	Error Codes	209
	System Map	210
	Specifications	212
	Index	222















Shooting

- Shoot automatically → p.43 55 (Basic Zone modes)
- Shoot continuously
 ⇒ p.47, 50, 68 (☐ Continuous shooting)
- Take a picture of myself in a group → p.69 (♦ Self-timer)
- Freeze the action
 - ▶ Blur the action ⇒ p.76 (Tv Shutter-priority AE)
- Blur the background
- Keep the background in sharp focus → p.78 (Av Aperture-priority AE)
- Adjust the image brightness (exposure) → p.84 (Exposure compensation)
- Shoot under low light
 ⇒ p.44, 60, 62 (\$ Flash photography)
- Shoot without flash → p.52 (🔁 Flash Off)
- Photograph fireworks at night → p.81 (Bulb exposure)
- Shoot while viewing the LCD monitor → p.106 (☐ Live View shooting)
- Shoot movies
 ⇒ p.122 ('\emptyset\) Movie shooting)

Image Quality

- Shoot with image effects matching the subject
- → p.73 (Selecting a Picture Style)





























- Make a large size print of the picture → p.70 (▲L, ▲L, ►MW)
- Take many pictures
 ⇒ p.70 (▲S, ▲S)

Focusing

- Change the point of focus
 ⇒ p.66 (AF point selection)
- Shoot a moving subject
 ⇒ p.50, 65 (Al Servo AF)

Playback

- View the images with the camera → p.56 (► Playback)
- Search for pictures quickly → p.148 (☑ Index display)
- Prevent important images
 from accidental deletion
 ⇒ p.158 (⋈ Image protect)
- Delete unnecessary images → p.159 (Delete)
- View the images on a TV set
 → p.156 (Video OUT)
- Set the LCD brightness → p.131 (LCD brightness)

Printing

Print pictures easily

→ p.163 (Direct printing)













Handling Precautions

Camera Care

- This camera is a precision instrument. Do not drop it or subject it to physical shock.
- The camera is not waterproof and cannot be used underwater. If you
 accidentally drop the camera into water, promptly consult your nearest
 Canon Service Center. Wipe off any water droplets with a dry cloth. If the
 camera has been exposed to salty air, wipe it with a well-wrung wet cloth.
- Never leave the camera near anything having a strong magnetic field such as a magnet or electric motor. Also avoid using or leaving the camera near anything emitting strong radio waves such as a large antenna. Strong magnetic fields can cause camera misoperation or destroy image data.
- Do not leave the camera in excessive heat such as in a car in direct sunlight.
 High temperatures can cause the camera to malfunction.
- The camera contains precision electronic circuitry. Never attempt to disassemble the camera yourself.
- Use a blower to blow away dust on the lens, viewfinder, reflex mirror, and focusing screen. Do not use cleaners that contain organic solvents to clean the camera body or lens. For stubborn dirt, take the camera to the nearest Canon Service Center.
- Do not touch the camera's electrical contacts with your fingers. This is to prevent the contacts from corroding. Corroded contacts can cause camera misoperation.
- If the camera is suddenly brought in from the cold into a warm room, condensation may form on the camera and internal parts. To prevent condensation, first put the camera in a sealed plastic bag and let it adjust to the warmer temperature before taking it out of the bag.
- If condensation forms on the camera, do not use the camera. This is to avoid damaging the camera. If there is condensation, remove the lens, card and battery from the camera, and wait until the condensation has evaporated before using the camera.
- If the camera will not be used for an extended period, remove the battery
 and store the camera in a cool, dry, well-ventilated location. Even while the
 camera is in storage, press the shutter button a few times once in a while to
 check that the camera is still working.
- Avoid storing the camera where there are corrosive chemicals such as a darkroom or chemical lab.
- If the camera has not been used for an extended period, test all its functions before using it. If you have not used the camera for some time or if there is an important shoot coming up, have the camera checked by your Canon dealer or check the camera yourself and make sure it is working properly.

LCD Monitor

- Although the LCD monitor is manufactured with very high precision technology with over 99.99% effective pixels, there might be a few dead pixels among the remaining 0.01% or less pixels. Dead pixels displaying only black or red, etc., are not a malfunction. They do not affect the images recorded.
- If the LCD monitor is left on for a prolonged period, screen burn-in may occur
 where you see remnants of what was displayed. However, this is only
 temporary and will disappear when the camera is left unused for a few days.
- In low or high temperatures, the LCD monitor display may seem slow or it might look black. It will return to normal at room temperature.

Cards

To protect the card and its recorded data, note the following:

- Do not drop, bend, or wet the card. Do not subject it to excessive force, physical shock, or vibration.
- Do not store or use the card near anything having a strong magnetic field such as a TV set, speakers, or magnet. Also avoid places prone to having static electricity.
- Do not leave the card in direct sunlight or near a heat source.
- Store the card in a case.
- Do not store the card in hot, dusty, or humid locations.

Lens

After detaching the lens from the camera, attach the lens caps or put down the lens with the rear end up to avoid scratching the lens surface and electrical contacts.

Contacts

 


Cautions During Prolonged Use

If you use continuous shooting, Live View shooting, or movie shooting for a prolonged period, the camera may become hot. Although this is not a malfunction, holding the hot camera for a long period can cause slight skin burns.

Quick Start Guide

1



Insert the battery. (p.26)

To charge the battery, see page 24.

2



Attach the lens. (p.33)

When attaching an EF-S lens, align it with the white index on the camera. For other lenses, align it with the red index.

3



Set the lens focus mode switch to <AF>. (p.33)

4





Open the slot cover and insert a card. (p.31)

With the card's label facing you, insert it into the slot.

5



Set the power switch to <0N>. (p.27)

 When the LCD monitor displays the Date/Time setting screen, see page 29.





Set the Mode Dial to \square (Full Auto). (p.44)

All the necessary camera settings will be set automatically.

7



Focus the subject. (p.37)

Look through the viewfinder and aim the viewfinder center over the subject. Press the shutter button halfway, and the camera will focus the subject.

R



Take the picture. (p.37)

Press the shutter button completely to take the picture.

0




Review the picture. (p.130)


The captured image will be displayed for about 2 sec. on the LCD monitor. To display the image again, press the < >> button (p.56).

- The shooting settings displayed on the LCD monitor will turn off when your eye nears the viewfinder eyepiece.
- To delete an image, see "Erasing Images" (p.159).


Nomenclature

The names in bold indicate the parts explained up until the "Basic Shooting and Image Playback" section.

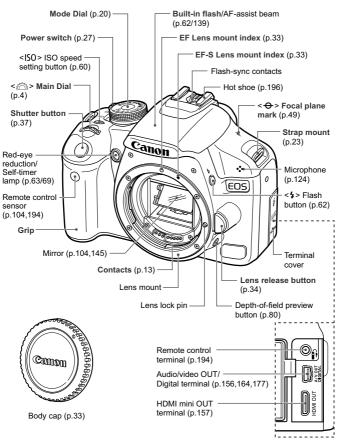

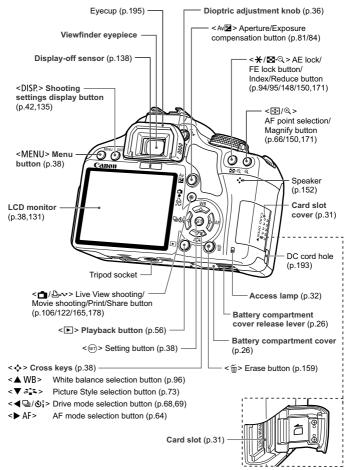


Shooting Settings Display

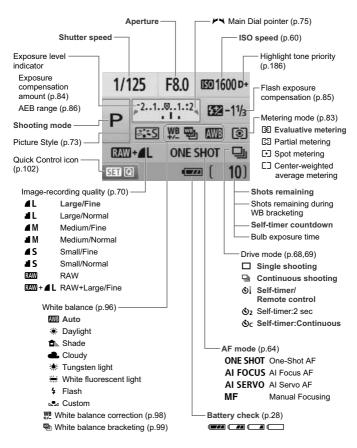

The display will show only the settings currently applied.

Viewfinder Information

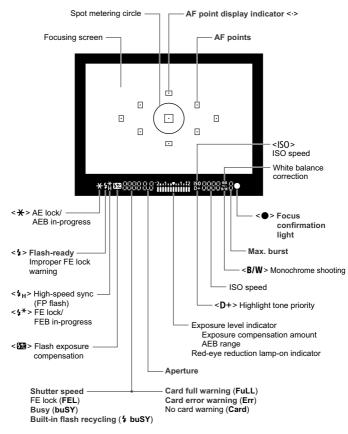

The display will show only the settings currently applied.

Mode Dial

The Mode Dial has the Basic Zone modes, Creative Zone modes, and Movie shooting mode.

Creative Zone

These modes give you more control for shooting various subjects.

P : Program AE (p.58)

Tv : Shutter-priority AE (p.76)

Av : Aperture-priority AE (p.78)

M : Manual exposure (p.81)

A-DEP: Automatic depth-of-field

AE (p.82)

Basic Zone

All you do is press the shutter button. Fully-automatic shooting suitable for the subject.

□: Full Auto (p.44)

CA: Creative Auto (p.53)

Image Zone


Portrait (p.47)Landscape (p.48)

: Close-up (p.49)


Sports (p.50)

: Night Portrait (p.51)


: Flash Off (p.52)

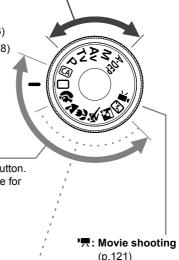

EF-S 18-55mm f/3.5-5.6 IS lens

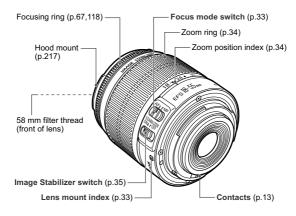


EF-S 18-200mm f/3.5-5.6 IS lens

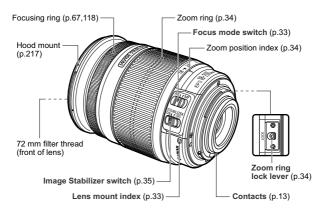

Battery Charger LC-E5


Charger for Battery Pack LP-E5 (p.24).

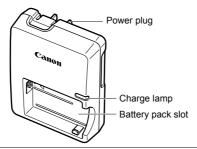

This power unit is intended to be correctly orientated in a vertical or floor mount position.


Battery Charger LC-E5E

Charger for Battery Pack LP-E5 (p.24).

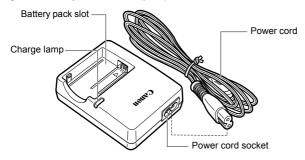

Getting Started


This chapter explains preparatory steps before you start shooting and basic camera operations.

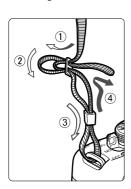

Attaching the Strap

Pass the end of the strap through the camera's strap mount eyelet from the bottom. Then pass it through the strap's buckle as shown in the illustration. Pull the strap to take up any slack and make sure the strap will not loosen from the buckle.

 
 The eyepiece cover is also attached to the strap (p.195).



Charging the Battery



 Remove the protective cover.





LC-E5E

LC-E5



Attach the battery.

- As shown in the illustration, attach the battery securely.
- To detach the battery, follow the above procedure in reverse.

Recharge the battery.

For LC-E5

 As shown by the arrow, flip out the battery charger's prongs and insert the prongs into a power outlet.

For LC-E5E

- Connect the power cord to the charger and insert the plug into the power outlet.
- ► Recharging starts automatically and the charge lamp turns red.
- ▶ When the battery is fully recharged, the charge lamp will turn green.
- It takes about 2 hours to fully recharge a completely exhausted battery.

The time required to recharge the battery depends on the ambient temperature and battery's charge level.

Tips for Using the Battery and Charger

 Recharge the battery on the day before or on the day it is to be used.

Even during non-use or storage, a charged battery will gradually discharge and lose its power.

- After recharging the battery, detach it and unplug the charger from the power outlet.
- When not using the camera, remove the battery. If the battery is left in the camera for a prolonged period, a small amount of power current is released, resulting in excess discharge and shorter battery life. Store the battery with the protective cover attached Storing the battery after it is fully charged can lower the battery's performance.
- The battery charger can also be used in foreign countries. The battery charger is compatible with a 100 V AC to 240 V AC 50/ 60 Hz power source. If necessary, attach a commercially-available plug adapter for the respective country or region. Do not attach any portable voltage transformer to the battery charger. Doing so can damage the battery charger.
- If the battery becomes exhausted quickly even after being fully charged, the battery has worn out. Purchase a new battery.

 


- Do not charge any battery other than Battery Pack LP-E5.
 - Battery Pack LP-E5 is dedicated to Canon products only. Using it with an incompatible battery charger or product may result in malfunction or accidents for which Canon cannot be held liable.

Installing and Removing the Battery


Installing the Battery

Load a fully charged Battery Pack LP-E5 into the camera.




1 Open the battery compartment cover.

  Slide the lever as shown by the arrow and open the cover.



Insert the battery.

 
- Insert the end with the battery contacts.
- Insert the battery until it locks in place.



Close the cover.

Press the cover until it snaps shut.

 Removing the Battery



Open the cover and remove the battery.

 
- Press the battery release lever as shown by the arrow and remove the battery.
- To prevent short circuiting, be sure to attach the protective cover to the battery.



After opening the battery compartment cover, be careful not to swing it back further. Otherwise, the hinge might break.

Turning on the Power

When you turn on the power switch and the date/time setting screen appears, see page 29 to set the date/time.



<NN> : The camera turns on.

<OFF>: The camera is turned off and does not operate. Set to this position when not using the

camera.

About the Automatic Self-Cleaning Sensor

- Whenever you set the power switch to <ON> or <OFF>, the sensor cleaning will be executed automatically. During the sensor cleaning, cleaning, you can still shoot by pressing the shutter button halfway (p.37) to stop the sensor cleaning and take a picture.
- If you turn <ON>/<OFF> the power switch at a short interval, the < † > icon might not be displayed. This is normal and not a problem.

About Auto Power Off

- To save battery power, the camera turns off automatically after about 30 seconds of non-operation. To turn on the camera again, just press the shutter button halfway (p.37).
- You can change the auto power-off time with the menu's [Auto power off] setting (p.131).



If you set the power switch to <OFF> while an image is being recorded to the card, [Recording ...] will be displayed and the power will turn off after the card finishes recording the image.

Checking the Battery Level

When the power switch is set to <0N>, the battery level will be indicated in one of four levels:



: Battery level is OK.

: Battery level is slightly down, but adequate power remains.

: Battery will be exhausted soon.

: Battery must be recharged.

Battery Life

[Approx. number of shots]

Temperature	Shooting Conditions		
remperature	No Flash	50% Flash Use	
At 23°C / 73°F	500	400	
At 0°C / 32°F	490	380	

 The figures above are based on a fully-charged Battery Pack LP-E5, shooting through the viewfinder, and CIPA (Camera & Imaging Products Association) testing standards.

 


- The actual number of shots may be fewer than indicated above depending on the shooting conditions.
 - Pressing the shutter button halfway for long periods or operating only the autofocus can also reduce the number of possible shots.
 - The number of possible shots will decrease with more frequent use of the LCD monitor
 - The lens operation is powered by the camera's battery. Depending on the lens used, the number of possible shots may be lower.
 - Using the Image Stabilizer of the lens will decrease the number of possible shots (shorter battery life).
 - For battery life with Live View shooting, see page 107.

MENU Setting the Date and Time

When you turn on the power for the first time or if the date/time has been reset, the Date/Time setting screen will appear. Follow steps 3 and 4 to set the date/time. Note that the date/time appended to recorded images will be based on this Date/Time setting. Be sure to set the date/time.





 Press the <MENU> button to display the menu.



Under the [♥¹] tab, select [Date/ Time].

- Press the <◀▶> key to select the [♥¹] tab.
- Press the < ▲▼ > key to select [Date/ Time], then press < ((ET) >.



Set the date and time.

- Press the <◀▶> key to select the date or time number.
- Press the < ▲▼ > key to set the number, then press < (set) >. (Returns to □.)

 
4 Exit the setting.

 
- Press the <◀▶> key to select [OK], then press <(st)>.
- ► The date/time will be set.
- Press the <MENU> button to return to the shooting settings display.



- The date/time set will start from when you press < (si) > in step 4.
- If you store the camera without the battery or if the camera's battery becomes exhausted, the date/time might be reset. If this happens, set the date/time again.

MENU Selecting the Interface Language







English	Norsk	Română
Deutsch	Svenska	Türkçe
Français	Español	النربية
Nederlands	Ελληνικά	เกาษาไทย
Dansk	Русский	简体中文
Português	Polski	緊體中文
Suomi	Čeština	한국어
Italiano	Magyar	日本語
Українська		

Display the menu.

 Press the <MENU> button to display the menu.

Under the [**Y**¹] tab, select [Language **⊕**].

- Press the <◀▶> key to select the [¶:] tab.
- Press the <▲▼> key to select [Language] (the third item from the top), then press <€□>.

Set the desired language.

- Press the <♠> key to select the language, then press <♠FT)>.
- ► The language will change.
- Press the <MENU> button to return to the shooting settings display.

Installing and Removing the SD Card

The captured image is recorded onto the card (sold separately).

Make sure the card's write protect switch is set upward to enable writing/erasing.

Installing the Card



1 Open the cover.

 
 Slide the cover as shown by the arrow to open it.

Card's write protect switch



nsert the card.

 As shown by the illustration, face the card's label side toward you and insert it until it clicks in place.





Shots remaining

 
Close the cover.

- Close the cover and slide it in the direction shown by the arrow until it snaps shut.
- When you set the power switch to <ON>, the number of remaining shots will be displayed on the LCD monitor.




- The number of shots remaining depends on the remaining capacity of the card, image-recording quality, ISO speed, etc.
- Setting the [ar Release shutter without card] menu option to [Disable] will prevent you from forgetting to install a card (p.130).

Removing the Card



Access lamp

 

Open the cover.

- Set the power switch to <OFF>.
- Check that "Recording..." is not displayed on the LCD monitor.
- Make sure the access lamp is off, then open the cover.

Remove the card.

- Gently push in the card, then let go.
 The card will stick out.
- Pull the card straight out, then close the cover.



- When the access lamp is lit or blinking, it indicates that the images are being written to or read by the card, being erased, or data is being transferred. While the access lamp is lit or blinking, never do any of the following. Doing so may damage the image data. It may also damage the card or camera.
 - Opening the card slot cover.
 - · Removing the battery.
 - Shaking or banging the camera around.
- If the card already contains recorded images, the image number might not start from 0001 (p.132).
- Do not touch the card's contacts with your fingers or metal objects.
- If a card-related error message is displayed on the LCD monitor, remove and reinstall the card. If the error persists, use a different card.
 If you can transfer all the images in the card to a computer, transfer all the images and then format the card (p.40). The card may then return to normal.

Attaching and Detaching a Lens

Attaching a Lens



 


EF-S lens mount index



EF lens mount index





Remove the caps.

 Remove the rear lens cap and the body cap by turning them as shown by the arrow.

Attach the lens.

- Align the EF-S lens with the camera's white EF-S lens mount index and turn the lens as shown by the arrow until it clicks in place.
- When attaching a lens other than an EF-S lens, align the lens with the red EF lens mount index.

On the lens, set the focus mode switch to <AF> (autofocus).

 If it is set to <MF> (manual focus), autofocus will not operate.

Remove the front lens cap.

Minimizing Dust

- When changing lenses, do it in a place with minimal dust.
- When storing the camera without a lens attached, be sure to attach the body cap to the camera.
- Remove dust on the body cap before attaching it.

About Zooming



To zoom, turn the zoom ring on the lens with your fingers.

If you want to zoom, do it before focusing. Turning the zoom ring after achieving focus may throw off the focus slightly.

 
Detaching the Lens



While pressing the lens release button, turn the lens as shown by the arrow.

- Turn the lens until it stops, then detach it
- Attach the rear lens cap to the detached lens

To owners of the EF-S 18-200mm f/3.5-5.6 IS kit lens:



You can prevent the lens from extending out while you are carrying it around. Set the zoom ring to the 18mm wide-angle end, then slide the zoom ring lock lever to <LOCK>. The zoom ring can be locked only at the wide-angle end.




- Do not look at the sun directly through any lens. Doing so may cause loss of vision.
- If the front part (focusing ring) of the lens rotates during autofocusing, do not touch the rotating part.



Image Conversion Factor

 Since the image sensor size is smaller than the 35mm film format, it will look like the lens focal length is increased by 1.6x.



About the Lens Image Stabilizer

When you use the IS lens' built-in Image Stabilizer, camera shake is corrected to obtain a less blurred shot. The procedure explained here is based on the EF-S 18-55mm f/3.5-5.6 IS lens as an example.

* IS stands for Image Stabilizer.



Set the IS switch to <0N>.

 Set the camera's power switch to <ON>.

Press the shutter button halfway.

► The Image Stabilizer will operate.

Take the picture.

 When the picture looks steady in the viewfinder, press the shutter button completely to take the picture.



- The Image Stabilizer is not effective for moving subjects.
- The Image Stabilizer may not be effective for excessive shaking such as on a rocking boat.



- The Image Stabilizer can operate with the focus mode switch set to either < AF> or < MF>.
- If the camera is mounted on a tripod, you can save battery power by switching the IS switch to <OFF>.
- The Image Stabilizer is effective even when the camera is mounted on a monopod.
- Some IS lenses enable you to switch the IS mode manually to suit the shooting conditions. However, the EF-S 18-55mm f/3.5-5.6 IS and EF-S 18-200mm f/3.5-5.6 IS lenses switch the IS mode automatically.

Basic Operation

Adjusting the Viewfinder Clarity



Turn the dioptric adjustment knob.


 Turn the knob left or right so that the nine AF points in the viewfinder look sharp.



If the camera's dioptric adjustment still cannot provide a sharp viewfinder image, using Dioptric Adjustment Lens E (10 types, sold separately) is recommended

Holding the Camera

To obtain sharp images, hold the camera still to minimize camera shake.

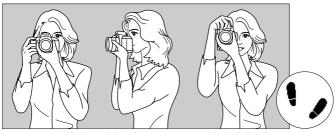

Horizontal shooting

Vertical shooting

- 1. Wrap your right hand around the camera grip firmly.
- 2. Hold the lens bottom with your left hand.
- 3. Press the shutter button lightly with your right hand's index finger.
- 4. Press your arms and elbows lightly against the front of your body.
- 5. Press the camera against your face and look through the viewfinder.
- 6. To maintain a stable stance, place one foot in front of the other.



For shooting while looking at the LCD monitor, see page 105.

Shutter Button

The shutter button has two steps. You can press the shutter button halfway. Then you can further press the shutter button completely.



Pressing halfway

This activates autofocusing and automatic exposure metering that sets the shutter speed and aperture. The exposure setting (shutter speed and

aperture) is displayed in the viewfinder. (*****4)



Pressing completely

This releases the shutter and takes the picture.

Preventing Camera Shake

Camera movement during the moment of exposure is called camera shake. Camera shake can cause blurred pictures. To prevent camera shake, note the following:

 
- Hold and steady the camera as shown on the previous page.
- · Press the shutter button halfway to autofocus, then press the shutter button completely.



- If you press the shutter button completely without pressing it halfway first or if you press the shutter button halfway and then press it completely immediately, the camera will take a moment before it takes the picture.
- Even during the menu display, image playback, and image recording, you can instantly go back to shooting-ready by pressing the shutter button halfway.

MENU Menu Operations


You can set various functions with the menus such as the image-recording quality, date/time, etc. While looking at the LCD monitor, use the <MENU> button, <♣> cross keys, and <> button on the camera back.




Menu Screen

* In the Basic Zone modes and Movie shooting mode, certain tabs and menu options will not be displayed.

Creative Zone modes

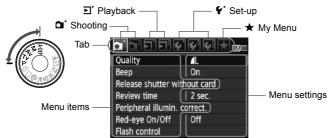

Menu Setting Procedure

 

Display the menu.

- Press the <MENU> button to display the menu.
- Select a tab.
 - Press the <◀▶> key to select a tab.
 - You can also turn the < > dial to select a tab



Select the desired item.

 Press the <▲▼> key to select the item, then press <(€17)>.



✓ Select the setting.

- Press the <▲▼> or <◀►> key to select the setting. (Some settings require you to press either the <▲▼> or <◀►> key to select it.)
- The current setting is indicated in blue.



Set the desired setting.

- Press <(SET) > to set it.
- Exit the menu.
 - Press the <MENU> button to return to the shooting settings display.



- The explanation of menu functions hereinafter assumes that you have pressed the <MENU> button to display the menu screen.
- A list of menu functions is on page 200.

MENU Formatting the Card

If the card is new or was previously formatted by another camera or computer, format the card with the camera.

When the card is formatted, all images and data in the card will be erased. Even protected images will be erased, so make sure there is nothing you need to keep. If necessary, transfer the images to a computer, etc., before formatting the card.



Select [Format].

 Under the [Y¹] tab, select [Format], then press < (sī) >.



Format the card.

- Select [OK], then press < (SET) >.
- The card will be formatted.
- ► When the formatting is completed, the menu will reappear.

For low-level formatting, press the
 < m

 button, checkmark [Low level format] with < √>, then select [OK].

✓ Low level format

Cancel

Execute [Format] in the following cases:

- The card is new.
- The card was formatted by a different camera or a computer.
- . The card is full with images or data.
- A card-related error is displayed (p.209).

About Low-level Formatting

- Do low-level formatting if the card's recording or reading speed seems slow
- Since low-level formatting will erase all recordable sectors in the card, the formatting will take slightly longer than normal formatting.
- You can stop the low-level formatting by selecting [Cancel]. Even in this case, normal formatting will have been completed and you can use the card as usual



When the card is formatted or data is erased, only the file management information is changed. The actual data is not completely erased. Be aware of this when selling or discarding the card. When discarding the card. execute low-level formatting or destroy the card physically to prevent the data from being leaked.



The card capacity displayed on the card format screen might be smaller than the capacity indicated on the card.

Switching the LCD Monitor Screen

The LCD monitor can display the shooting settings screen, menu screen, image, etc.

Shooting Settings



- Displayed when the camera is turned on.
- When your eye nears the viewfinder eyepiece, the display-off sensor (p.17, 138) turns off the LCD monitor automatically. This prevents the bright LCD monitor from interfering with your view. The LCD monitor turns on again when your eye leaves the viewfinder eyepiece.
- While the menu screen or image is displayed as shown below, you
 can instantly return to the shooting settings screen (shown on the
 left) by pressing the shutter button halfway.
- Pressing the <DISP.> button turns the display on or off.



- If you look at the viewfinder while wearing sunglasses, the LCD monitor might not turn off automatically. In such a case, press the <DISP.> button to turn off the monitor.
- If a fluorescent light is nearby, the LCD monitor might turn off. If this happens, take the camera away from the fluorescent light.

Menus



 Appears when you press the <MENU> button. Press the button again to return to the previous screen.

Captured Image



 Appears when you press the > button. Press the button again to return to the previous screen.

Basic Shooting and Image Playback

This chapter explains how to use the Basic Zone modes on the Mode Dial for best results and how to playback images.

With the Basic Zone modes, all you do is point and shoot and the camera sets everything automatically (p.198). Also, to prevent botched pictures due to mistaken operations, major shooting settings cannot be changed in the Basic Zone modes. The settings (functions set automatically) which cannot be set



by the user are graved out.



About the Auto Lighting Optimizer

In the Basic Zone modes, the Auto Lighting Optimizer will adjust the image automatically to obtain the optimum brightness and contrast. It is also enabled by default in the Creative Zone modes (p.186).

☐ Fully Automatic Shooting



Set the Mode Dial to < □>.







- All the AF points will be used to focus, and generally the closest object will be focused.
- Aiming the center AF point over the subject will make focusing easier.



Focus the subject.

- Press the shutter button halfway, and the lens will adjust the focus.
- The dot inside the AF point achieving focus flashes briefly in red. At the same time, the beeper will sound and the focus confirmation light < ●> in the viewfinder will light.
- If necessary, the built-in flash will popup automatically.



Focus confirmation light



Take the picture.

- Press the shutter button completely to take the picture.
- ▶ The captured image will be displayed for about 2 sec. on the LCD monitor.
- If the built-in flash has popped up, you can push it back down with your fingers.

? FAQ

- The focus confirmation light < > blinks and focus is not achieved. Aim the AF point over an area having good contrast, then press the shutter button halfway (p.192). If you are too close to the subject, move away and try again.
- Sometimes multiple AF points flash simultaneously.
 This indicates that focus has been achieved at all those AF points. As long as the AF point covering the desired subject flashes, you can take the picture.
- The beeper continues to beep softly. (The focus confirmation light < ◆ > also does not light.)
 It indicates that the camera is focusing continuously on a moving subject. (The focus confirmation light < ◆ > does not light.) While the beeper is beeping, you can press the shutter button completely to shoot a moving subject in focus.
- Pressing the shutter button halfway does not focus the subject.
 When the focus mode switch on the lens is set to <MF> (Manual Focus), the camera does not focus. Set the focus mode switch to <AF> (Auto Focus).
- Although it is daylight, the flash popped up.
 For a backlit subject, the flash may pop up to help reduce harsh shadows on the subject.
- In low light, the built-in flash fired a series of flashes.
 To assist the autofocusing, pressing the shutter button halfway may trigger the built-in flash to fire a series of flashes. This is called AF-assist beam. It is effective up to approx. 4 meters/13.1 feet away.
- Although flash was used, the picture came out dark.
 The subject was too far away. The subject should be within 5 meters/16.4 feet from the camera.
- When flash was used, the bottom part of the picture came out unnaturally dark.

The subject was too close to the camera, and a shadow was created by the lens. The subject should be at least 1 meter/3.3 feet away from the camera. If a hood has been attached to the lens, remove it before taking the flash picture.

☐ Full Auto Techniques

Recomposing the Shot



Depending on the scene, position the subject toward the left or right to create a balanced background and good perspective.

In the <□> (Full Auto) mode, while you press the shutter button halfway to focus a still subject, the focus will be locked. You can then recompose the shot and press the shutter button completely to take the picture. This is called "focus lock". Focus lock is also possible in other Basic Zone modes (except < < Sports).

Shooting a Moving Subject



In the < > (Full Auto) mode, if the subject moves (distance to camera changes) during or after you focus, AI Servo AF will take effect to focus the subject continuously. As long as you keep aiming the AF point at the subject while pressing the shutter button halfway, the focusing will be continuous. When you want to take the picture, press the shutter button completely.

Shooting Portraits

The < > (Portrait) mode blurs the background to make the human subject stand out. It also makes flesh tones and the hair look softer than with the $\langle \Box \rangle$ (Full Auto) mode.





Shooting Tips

 The farther the distance between the subject and background, the better.

The further the distance between the subject and background, the more blurred the background will look. The subject will also stand out better in front of a plain, dark background.

Use a telephoto lens.

If you have a zoom lens, use the telephoto end to fill the frame with the subject from the waist up. Move in closer if necessary.

Focus the face

Check that the AF point covering the face flashes in red.



- If you hold down the shutter button, you can shoot continuously to obtain different poses and facial expressions. (max. approx. 3.4 shots/sec.)
 - If necessary, the built-in flash will pop up automatically.

Shooting Landscapes

Use the < ♠ > (Landscape) mode for wide scenery, night scenes, or to have everything in focus from near to far. The greens and blues also become more vivid and sharper than with < □ > (Full Auto).





☼ Shooting Tips

- With a zoom lens, use the wide-angle end. When using the wide-angle end of a zoom lens, objects near and far will be in focus better than at the telephoto end. It also adds breadth to landscapes.
- Shooting night scenes. Since the built-in flash will be disabled, this mode is also good for night scenes. Use a tripod to prevent camera shake. If you want to photograph a person against a night scene, set the Mode Dial to <►> (Night Portrait) and use a tripod (p.51).



Shooting Close-ups

When you want to photograph flowers or small things up close, use the < ♥ > (Close-up) mode. To make small things appear much larger, use a macro lens (sold separately).





☆ Shooting Tips

the subject.

- Use a simple background.
 A simple background makes the flower, etc., stand out better.
- Move to the subject as close as possible. Check the lens for its minimum focusing distance. Some lenses have indications such as < ♥ 0.25m/0.8ft>. The lens minimum focusing distance is measured from the < → > (focal plane) mark on the camera to the subject. If you are too close to the subject, the focus confirmation light < → > will blink. Under low light, the built-in flash will fire. If you are too close to the subject and the bottom of the picture looks dark, move away from
- With a zoom lens, use the telephoto end.
 If you have a zoom lens, using the telephoto end will make the subject look larger.

Shooting Moving Subjects

To photograph a moving subject, whether it is a child running or a moving vehicle, use the < < > (Sports) mode.





☆ Shooting Tips

- Use a telephoto lens.
 Using a telephoto lens is recommended so you can shoot from afar.
- Use the center AF point to focus.

Aim the center AF point over the subject, then press the shutter button halfway to auto focus. During autofocusing, the beeper will continue beeping softly. If focus cannot be achieved, the focus confirmation light < > will blink.

When you want to take the picture, press the shutter button completely. If you hold down the shutter button, continuous shooting (max. approx. 3.4 shots per sec.) and autofocusing will take effect.



Under low light when camera shake is prone to occur, the viewfinder's shutter speed display on the bottom left will blink. Hold the camera steady and shoot.

Shooting Portraits at Night

To shoot someone at night and obtain a natural-looking exposure in the background, use the <**⊠**> (Night Portrait) mode.





☼ Shooting Tips

- Use a wide-angle lens and a tripod.
 When using a zoom lens, use the wide-angle end to obtain a wide night view. Also, use a tripod to prevent camera shake.
- Keep the person within 5 meters/16.4 feet from the camera.
 Under low light, the built-in flash will fire automatically to obtain a good exposure of the person. The effective distance of the built-in flash is 5 meters/16.4 feet from the camera.
- Shoot also with < > (Full Auto).
 Since camera shake is prone to occur with night shots, shooting also with < > (Full Auto) is recommended.



- Tell the subject to keep still even after the flash fires.
- If the self-timer is also used, the self-timer lamp will flash after the picture is taken.

Disabling Flash

In places where flash photography is prohibited, use the < > (Flash Off) mode. This mode is also effective for candlelight scenes when you want to capture the ambient light.





∜ Shooting Tips

 If the numeric display in the viewfinder blinks, take care to prevent camera shake.

Under low light when camera shake is prone to occur, the viewfinder's shutter speed display will blink. Hold the camera steady or use a tripod. When using a zoom lens, use the wide-angle end to reduce blur caused by camera shake.

Taking portraits without flash.

 
Under low light, the person must not move until the picture is taken. If the person moves during the exposure, he or she might look blurred in the picture.

(A) Creative Auto Shooting

Basic Zone modes except < (CA > (Creative Auto) take care of everything, whereas the < CA > Creative Auto mode enables you to easily change the picture's brightness, depth of field, color tone (Picture Style), etc. The default settings are the same as the <□> (Full Auto) mode.

* CA stands for Creative Auto







Set the Mode Dial to < CA>.

▶ The Creative Auto screen appears on the LCD monitor

Press <(SET)>.

- You can use the <♦> key to select the function. (310)
- For details about each function, see page 54-55.

Set the desired setting.


- Press the <♠> key to select the function
- A brief description of the selected function is displayed on the screen's bottom
- Turn the < 2 > dial to change the setting.
- Press the shutter button halfway to return to the screen in step 2.

Take the picture.

 Press the shutter button completely to take the picture.



If you change the shooting mode or if the power turns off via auto power off (p.131) or by setting the power switch to <OFF>, the Creative Auto settings will revert to the default. However, the image-recording quality, self-timer and remote control settings will be retained.

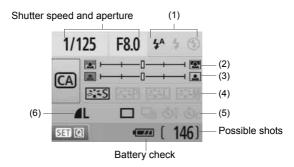


(1) Flash firing



< \$^A > (Auto firing), < \$> (Flash on), or < \$> (Flash off) can be selected.

If you set < 3> (Flash off), see "Disabling Flash" on page 52.

 
(2) Blurring/sharpening the background



If you move the index mark toward the left, the background will look more blurred. If you move it toward the right, the background will look more in focus. If you want to blur the background, see "Shooting Portraits" on page 47.

Depending on the lens and shooting conditions, the background might not look so blurred. This cannot be set (grayed out) while the built-in flash is popped up. When flash is used, this setting will not be applied.

 (3) Adjusting the picture brightness



If you move the index mark toward the left, the picture will look darker. If you move it toward the right, the picture will look brighter.

(4) Image effects



Besides the standard image effect, you can set it for portraits, landscapes, or black-and-white photos. (p.73: Picture Style)

- <Standard): Standard image effect applicable to most scenes.</p>
- < (Smooth skin tones): Effective for close-ups of women or children.
- < [> (Vivid blues and greens): For impressive landscapes.
- < (Monochrome image): Creates black-and-white photos.

(5) Single, continuous, and self-timer shooting



- (Continuous shooting): Shoot continuously at a maximum of about 3.4 frames per second (fps).
- <ỗ∮> (Self-timer/Remote control): See the "Using the Self-timer" note (📳) on p.69. Remote control shooting is also possible. (p.194)
- < ॐc> (Self-timer:Continuous): After 10 sec., the set number of shots is taken continuously. Press the < ▲▼ > key to set the number of multiple shots (2 to 10) to be taken with the self-timer.
- * By pressing <@>>, you can display the [**Drive mode**] selection screen and set the same settings.

(6) Image-recording quality



To set the image-recording quality, see "Setting the Image-recording Quality" on page 70-72. By pressing <\$\varepsilon\rightarrow\$>, you can display the [Quality] selection screen and set the same settings.

▶ Image Playback

The easiest way to playback images is explained below. For more details on the playback procedure, see page 147.




Playback the image.

 When you press the <►> button, the last captured image will be displayed.



Select the image.

- To view images starting with the last image, press the < ◀> key. To view images starting with the first (oldest) image, press the < ▶> key.
- Press the <DISP.> button to change the display format.

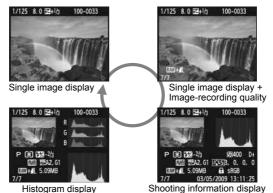

Exit the image playback.

 Press the < >> button to exit the image playback and return to the shooting settings display.

3

Advanced Shooting Techniques

In the Basic Zone modes, to prevent spoiled shots, most functions are set automatically and cannot be changed. In the <**P**> (Program AE) mode, you can set various functions and be more creative.

- In the <P> (Program AE) mode, the camera sets the shutter speed and aperture automatically to obtain the standard exposure.
- The difference between the Basic Zone modes and <P> is explained on page 198.
- * <P> stands for Program.
- * AE stands for Auto Exposure.

P: Program AE

To obtain a good exposure of the subject, the camera sets the exposure (shutter speed and aperture) automatically. This is called Program AE.



¶ Set the Mode Dial to <P>.



Focus the subject.

- Look through the viewfinder and aim the selected AF point over the subject. Then press the shutter button halfway.
- The dot inside the AF point achieving focus flashes briefly in red, and the focus confirmation light < ● > in the viewfinder's bottom right lights (with One Shot AF + automatic AF point selection).
- The shutter speed and aperture will be set automatically and displayed in the viewfinder.



Check the shutter speed and aperture display.

 A correct exposure will be obtained as long as the shutter speed and aperture display do not blink.

Take the picture.

 Compose the shot and press the shutter button completely.

☆ Shooting Tips

- Changing the ISO speed and using the built-in flash.
 - To match the subject and ambient lighting level, you can change the ISO speed (p.60) or use the built-in flash (p.62). In the P > mode. the built-in flash will not fire automatically. So under low light, press the <\frac{1}{2} > (Flash) button to pop up the built-in flash.
- The program can be shifted. (Program shift) After pressing the shutter button halfway, turn the < > dial to change the shutter speed and aperture setting combination (program). After you take the picture, the program shift will be canceled. Program shift is not possible with flash.



In very low light or very bright light, the shutter speed and aperture display will blink when you press the shutter button halfway, as shown in the figure. In low light (30" 3.5), either increase the ISO speed (p.60) or use flash (p.62). In bright light (4000 22), decrease the ISO speed.



Differences Between <P> and <□> (Full Auto)

With <□>, many functions such the AF mode, drive mode, and metering mode are set automatically to prevent spoiled shots. The functions you can set are limited. With <P>, only the shutter speed and aperture are set automatically. You can freely set the AF mode, drive mode, and other functions (p.198).

 
ISO: Changing the ISO Speed *

Set the ISO speed (image sensor's sensitivity to light) to suit the ambient light level. In the Basic Zone modes, the ISO speed is set automatically (p.61).





► [ISO speed] will appear.



Select the ISO speed.

- Turn the < >> dial or press the <**◀▶>** key to select the ISO speed.
- You can also set the ISO speed in the viewfinder while turning the < > dial.
- With "AUTO" selected, the ISO speed will be set automatically (p.61).

ISO Speed Guide

ISO Speed	Shooting Situation (No flash)	Flash Range
100 - 200	Sunny outdoors	The higher the ISO speed,
400 - 800	Overcast skies, evening	the farther the flash range
1600 - 6400, H	Dark indoors or night	will be (p.62).

 


- Under the [¥: Custom Functions (C.Fn)] menu, if [Highlight tone priority] is set to [1: Enable], the settable ISO speed range will be ISO 200 - 3200 (p.186).
- Using a high ISO speed or shooting in high-temperature conditions may result in more grainy images. Long exposures can also cause irregular colors in the image.
- When you shoot at high ISO speeds, noise (horizontal banding, light dots, etc.) may appear.



Under the [: Custom Functions (C.Fn)] menu, if [ISO expansion] is set to [1: On], ISO 6400 and "H" (ISO 12800) can also be set (p.184).

About "AUTO" for Automatic ISO Speed



If the ISO speed is set to "AUTO", the actual ISO speed to be set will be displayed when you press the shutter button halfway. As indicated below, the ISO speed will be set automatically to suit the shooting mode.

Shooting Mode	ISO Speed Setting		
□/ ≥ / ॐ / ॐ / ⑤ / ⑤ / ⑥ /	Automatically set within ISO 100 - 1600		
P	Fixed at ISO 100		
М	Fixed at ISO 400		
With flash	Fixed at ISO 400*		

^{*} If fill flash results in overexposure, ISO 100 or a higher ISO will be set.



When "AUTO" is set, the ISO speed will be displayed in whole-stop increments of 100, 200, 400, 800, or 1600. However, the actual ISO speed may be set more precisely. Therefore, in the image's shooting information, you may find an ISO speed like 125 or 640 displayed as the ISO speed.

^{*} If an external Speedlite is used for bounce flash, ISO 400 - 1600 will be set automatically.

4 Using the Built-in Flash

In indoors, low light, or backlit conditions in daylight, just pop up the built-in flash and press the shutter button to take flash pictures. In the <**P**> mode, the shutter speed (1/60 sec. - 1/200 sec.) will be set automatically to prevent camera shake.



■ Press the <\$> button.

- In Creative Zone modes, you can press the < \$> button anytime to take flash pictures.
- While the flash is recycling, "\$ buSY" is displayed in the viewfinder, and [BUSY \$] is displayed on the LCD monitor.



Press the shutter button halfway.

 In the bottom left of the viewfinder, check that the <\$> icon is lit.



Take the picture.

 When focus is achieved and you press the shutter button completely, the flash will fire for the picture.

Effective Flash Range

[Approx. in meters / feet]

	<u>-</u>	• • •	
ISO Speed	EF-S 18-55mm f/3.5-5.6 IS / EF-S 18-200mm f/3.5-5.6 IS		
	Wide Angle: 18mm	Telephoto: 55mm	
100	1 - 3.5 / 3.5 - 12	1 - 2.5 / 3.5 - 7.5	
200	1 - 5.5 / 3.5 - 17	1 - 3.5 / 3.5 - 11	
400/AUTO	1 - 7.5 / 3.5 - 24	1 - 4.5 / 3.5 - 15	
800	1 - 11 / 3.5 - 34	1 - 6.5 / 3.5 - 22	
1600	1 - 15 / 3.5 - 49	1 - 9.5 / 3.5 - 31	
3200	1 - 21 / 3.5 - 69	1 - 13 / 3.5 - 43	
6400	1 - 30 / 3.5 - 97	1 - 19 / 3.5 - 61	
H: 12800	1 - 42 / 3.5 - 138	1 - 26 / 3.5 - 86	

☆ Shooting Tips

 
- If the subject is far away, increase the ISO speed.
 By increasing the ISO speed, you can extend the flash range.
- In bright light, decrease the ISO speed.
 If the exposure setting in the viewfinder blinks, decrease the ISO speed.
- Detach the lens hood and keep at least 1 meter/3.3 feet away from the subject.

If the lens has a hood attached or you are too close to the subject, the bottom of the picture might look dark due to the obstructed flash. For important shots, check the image on the LCD monitor to make sure the flash exposure looks good (not dark at the bottom).

MENU Using Red-eye Reduction

Using the red-eye reduction lamp before taking a flash picture can reduce red eye.

Red-eye reduction will work in any shooting mode except < ♣ > < ⅓ > < ⅓, > < ¹♠, > .



- Under the [□¹] tab, select [Red-eye On/Off], then press <(xi)>. Select [On], then press <(xi)>.
- For flash photography, when you press the shutter button halfway, the red-eye reduction lamp will light. Then when you press the shutter button completely, the picture will be taken.



- The red-eye reduction feature is most effective when the subject looks at the red-eye reduction lamp, when the room is well lit, or when you go closer to the subject.
- When you press the shutter button halfway, the viewfinder display on the bottom will gradually turn off. For best results, take the picture after this display turns off.



 
• The effectiveness of red-eye reduction varies depending on the subject.

AF: Changing the AF Mode *

Select the AF mode suiting the shooting conditions or subject. In the Basic Zone modes, the optimum AF mode is set automatically.



On the lens, set the focus mode switch to <AF>.



Press the <► AF> button.

- ► [AF mode] will appear.
- Select the AF mode.
 - Press the <◀▶> key to select the AF mode, then press <६०००.



Focus the subject.

 Aim the AF point over the subject and press the shutter button halfway. The camera will then autofocus in the selected AF mode.

One-Shot AF for Still Subjects

Suited for still subjects. When you press the shutter button halfway, the camera will focus only once.

- When focus is achieved, the dot inside the AF point achieving focus flashes briefly in red, and the focus confirmation light < ● > in the viewfinder will also light.
- With evaluative metering (p.83), the exposure setting will be set at the same time focus is achieved.
- While you hold down the shutter button halfway, the focus will be locked. You can then recompose the shot if desired.



- If focus cannot be achieved, the focus confirmation light < > in the viewfinder will blink. If this occurs, a picture cannot be taken even if the shutter button is pressed completely. Recompose the picture and try to focus again. Or see "When Autofocus Fails" (p.192).
- If the [a Beep] menu is set to [Off], the beeper will not sound when focus is achieved

Al Servo AF for Moving Subjects

This AF mode is for moving subjects when the focusing distance keeps changing. While you hold down the shutter button halfway. the subject will be focused continuously.

- The exposure is set at the moment the picture is taken.
- When the AF point selection (p.66) is automatic, the camera first uses the center AF point to focus. During autofocusing, if the subject moves away from the center AF point, focus tracking continues as long as the subject is covered by another AF point.



With Al Servo AF, the beeper will not sound even when focus is achieved. Also, the focus confirmation light < >> in the viewfinder will not light.

Al Focus AF for Automatic Switching of AF Mode

Al Focus AF switches the AF mode from One-Shot AF to Al Servo AF automatically if the still subject starts moving.

 After the subject is focused in the One-Shot AF mode, if the subject starts moving, the camera will detect the movement and change the AF mode automatically to AI Servo AF.



When focus is achieved in the AI Focus AF mode with the Servo mode active, the beeper will sound softly. However, the focus confirmation light > in the viewfinder will not light.

Selecting the AF Point [★]

In the Basic Zone modes, all the AF points are active. Generally, the AF point covering the closest subject will be selected to focus. Therefore, the camera sometimes may not focus the subject you want.

With the <**P**> (Program AE), <**Tv**>, <**Av**>, and <**M**> modes, you can select one AF point to focus where you want.







Press the <⊞> button. (♂6)

- The selected AF point will be displayed on the LCD monitor and in the viewfinder.
- When all AF points light up, automatic AF point selection will be set.

Select the AF point.

- Press the <♠> key to select the AF point.
- While looking at the viewfinder, you can select the AF point by turning the <i>> dial until the desired AF point flashes in red.
- Pressing < (ET) > toggles the AF point selection between the center AF point and automatic AF point selection.

Focus the subject.

 Aim the selected AF point over the subject and press the shutter button halfway to focus.

☆ Shooting Tips

 When shooting a portrait up close, use One-Shot AF and focus the eyes.

If you focus the eyes first, you can then recompose and the face will remain sharp.

- If it is difficult to focus, select and use the center AF point.
 The center AF point is the most sensitive among the nine AF points.
 Also, with a fast lens from f/1.0 to f/2.8, high-precision focusing is possible with the center AF point.
- To make it easier to focus a moving subject, set the camera to automatic AF point selection and AI Servo AF.
 First use the center AF point to focus. If the subject moves away from the center AF point, the other AF points will continue to focustrack the subject automatically.

MF: Manual Focusing



Focusing ring

Set the lens focus mode switch to <MF>.

Focus the subject.

 Focus by turning the lens focusing ring until the subject looks sharp in the viewfinder.



- If you press the shutter button halfway during manual focusing, the AF point achieving focus flashes in red briefly and the focus confirmation light < >> in the viewfinder will light.
- <AF> stands for Auto Focus. <MF> stands for Manual Focus.

□ Continuous Shooting *

You can shoot up to about 3.4 shots per sec. This is effective for shooting your child running toward you and capturing the different facial expressions.



1 Press the < 4 및 ₺ > button.



 Press the < ◀▶> key to select < □>, then press < (ET)>.

Take the picture.

 The camera shoots continuously while you hold down the shutter button fully.



Shooting Tips

 
- Also set the AF mode matching the subject.
 - For moving subject
 When AI Servo AF is set, focusing will be continuous during continuous shooting.
 - For still subjects
 When One-Shot AF is set, the camera will focus only once during continuous shooting.
- Flash can also be used.

Since the flash will require recharging time, the continuous shooting speed will be slower.



- If the [4: Custom Functions (C.Fn)] menu's [High ISO speed noise reduction] (p.185) is set to [2: Strong], the continuous shooting burst will decrease
- In the Al Servo AF mode, the continuous shooting speed may become slightly slower depending on the subject and the lens used.

3 Using the Self-timer





Press the <◀ 및 ಏ > button.

Select the self-timer.

■ Press the < ◀ ▶ > key to select the desired self-timer, then press < (st) >.

రు⊪ 10-sec. self-timer

The remote control can also be

used. (p.194)

32: **2-sec. self-timer** ★ (p.104)

కుం: 10-sec. self-timer plus continuous shots



Press the < AV > key to set the number of multiple shots (2 to 10) to be taken with the self-timer

Take the picture.

- Focus the subject and press the shutter button completely.
- You can check the self-timer operation with the self-timer lamp, beeper, and countdown display (in seconds) on the LCD monitor.
- Two seconds before the picture is taken, the self-timer lamp will stay on and the beeper will sound faster.



With <♂c>, the interval between the multiple shots may be prolonged depending on the image-recording quality and flash.



- After taking self-timer shots, you should check the image for proper focus and exposure (p.56).
- If you will not look through the viewfinder when you press the shutter button, attach the eveniece cover (p.195). If stray light enters the viewfinder when you press the shutter button, it may throw off the exposure.
- When using the self-timer to shoot only yourself, use focus lock (p.46) for an object at about the same distance as where you will be.
- To cancel the self-timer after it starts, press the <◀ 및 ॐ; > button.

MENU Setting the Image-recording Quality =

You can select the number of megapixels to record (approx. 15.1, 8.0, or 3.7 megapixels) and the image quality.



4M MI

4L

 
RAW+/L

15M 4752x3168 [146]



Select [Quality].

- Under the [a] tab, select [Quality], then press < (FT)>.
- ► [Quality] will appear.



 For your reference, the respective quality's megapixel count (***M). image size in pixels (****x****), and the number of possible shots [***] will be displayed. Select the desired quality, then press < (FT) >.

Guide to Image-recording Quality Settings (Approx.)

Quality		Pixels	File Size (MB)	Possible Shots	Maximum Burst		
4 L	High quality			Approx. 15.1 megapixels (15M)	5.0	370	170
a L					2.5	740	740
■ M	Medium quality JF			Approx. 8.0 megapixels (8M)	3.0	610	610
■ M			JPEG		1.6	1190	1190
4 S	Low quality			Approx. 3.7	1.7	1080	1080
■ S			megapixels (3.7M)	0.9	2030	2030	
RAW			Approx. 15.1	20.2	90	9	
RAW + ▲ L		quality megapixels (15M)	20.2+5.0	72	4		

- * Based on Canon's testing standards with a 2GB card, ISO 100, and Standard Picture Style.
- * The file size, number of possible shots, and maximum burst will vary depending on the subject, card brand, ISO speed, Custom Functions, and other settings.

? FAQ

I want to select the quality matching the paper size for printing.

17.8x12.7cm/7.0x5.0in. 14.8x10cm/5.8x3.9in.

Refer to the diagram on the left when choosing the image-recording quality. If you want to crop the image, selecting a higher quality (more pixels) such as **L**, **L**. KAW, or KAW+**L** is recommended.

What's the difference between ▲ and ▲?

It indicates a different image quality due to a different compression rate. Even with the same number of pixels, the **a** image has higher image quality. If **a** is selected, the image quality will be slightly lower, but more images can be saved to the card.

- I took more shots than the number of possible shots indicated.
 Depending on the shooting conditions, you may be able to take more shots than was indicated. Or, it might be fewer than indicated.
 The possible shots displayed is only an estimate.
- Does the camera display the maximum burst?

The maximum burst is displayed in the viewfinder's right side. Since it is only a single-digit indicator 0 - 9, any number higher than 9 will be displayed only as "9." Note that this number will also be displayed even when no card is installed in the camera. Be careful not to shoot without a card in the camera.

When do I use the MW mode?

 \square images require processing with your computer. For details, see "About \square and "About \square and "About \square L" on the next page.

 
Other than XXIII, the images will be in the JPEG type commonly used in digital cameras.

About RW

RAW is the raw image data before it is made into a **L** or other images. Although (AW) images require software like Digital Photo Professional (provided) so they can be displayed on the computer, they also offer flexibility for image adjustments possible only with RAW. RAW is effective when you want to precisely modify the image yourself or shoot an important subject.

About RAW+ ■ L

RAW + 1 L records both a RAW and 1 L image with a single shot. The two images are saved to the card simultaneously. The two images will be saved in the same folder with the same file numbers (file extension .JPG for JPEG and .CR2 for RAW). **L** images can be viewed or printed even with a computer which does not have the camera's provided software.





MAW, MAW+ ▲ L and [4: Custom Functions (C.Fn)] menu's [High ISO speed noise reduction]

Although the [Y: Custom Functions (C.Fn)] menu's [High ISO speed noise reduction] (p.185) settings (Standard/Low/Strong/Disable) are applied to the recorded images, the images are displayed without noise reduction during image playback (on the LCD monitor and on a TV screen) or direct printing. (Noise may be noticeable in the images.) You can check the noise reduction result or print noise-reduced images with Digital Photo Professional (provided software).



Commercial software might not be able to display RAW images. Using the provided software is recommended.

Selecting a Picture Style ★

By selecting a Picture Style, you can obtain image effects matching your photographic expression or the subject.





Press the <▼ ♣ > button.

▶ [Picture Style] will appear.

Select a Picture Style.

- Press the <◀▶> key to select a Picture Style, then press <(ṣɛ)>.
- Take the picture.
 - Focus and press the shutter button completely. The picture will be taken with the selected Picture Style applied.

Picture Style Effects

Standard (CA: Standard)

The image looks vivid, sharp, and crisp. This is a general-purpose Picture Style suitable for most scenes.

Portrait (CA: Smooth skin tones)

SET OK

For nice skin tones. The image looks softer. Effective for close-ups of women or children. This Picture Style is also selected automatically when the Mode Dial is set to < >.

By changing the [Color tone] (p.89), you can adjust the skin tone.

Landscape (A: Vivid blues and greens)

For vivid blues and greens, and very sharp and crisp images. Effective for impressive landscapes. This Picture Style is also selected automatically when the Mode Dial is set to < >>.

►IN Neutral

This Picture Style is for users who prefer to process images with their computer. For natural colors and subdued images.

Faithful

This Picture Style is for users who prefer to process images with their computer. When the subject is captured under a color temperature of 5200K, the color is adjusted colorimetrically to match the subject's color. The image is dull and subdued.

Monochrome (CA: Monochrome image) Creates black-and-white images.



Other than with MW, the black-and-white image cannot be reverted to color. If you want to later shoot pictures in color, make sure the [Monochrome] setting has been canceled. When [Monochrome] is selected, < **B/W** > will appear in the viewfinder.

ানা User Def. 1-3

You can register a basic style such as [Portrait], [Landscape], a Picture Style file, etc., and adjust it as desired (p.88). Any User Defined Picture Style which has not been set will have the same settings as the Standard Picture Style.

4

More Advanced Techniques

This chapter builds on the previous chapter and introduces more ways to shoot creatively.

- The first half of this chapter explains how to use the <Tv><Av><M> <A-DEP> modes on the Mode Dial. Except for <A-DEP>, all the shooting modes can be used in combination with the functions introduced in Chapter 3.
- The second half of this chapter, starting with "Changing the Metering Mode" explains the methods to adjust the exposure and the Picture Styles. All the functions introduced in this chapter can also be used with the <P> (Program AE) mode introduced in Chapter 3.

▶ About the Main Dial Pointer

" 1/125 ·

F8.0

2..1..0..1.:2

The pointer icon < ► \ > displayed together with the shutter speed, aperture setting, or exposure compensation amount indicates that you can turn the < △ > dial to adjust the respective setting.

Ty: Action Shots

You can either freeze the action or create motion blur with the < Tv > (Shutter-priority AE) mode on the Mode Dial.

* < Tv > stands for Time value.



Frozen action (Fast shutter speed)



Blurred motion (Slow shutter speed)



Set the Mode Dial to <Tv>.



1171-2111 V11112 ISO

Set the desired shutter speed.

- See "Shooting Tips" for advice on setting the shutter speed.
- Turning the < 2 > dial to the right sets a faster shutter speed, and turning it to the left sets a slower one.

Take the picture.

 When you focus and press the shutter button completely, the picture will be taken at the selected shutter speed.



Shutter Speed Display

The LCD monitor displays the shutter speed as a fraction. However, the viewfinder displays only the denominator. Also, "0"5" indicates 0.5 sec. and "15"" is 15 sec.

☆ Shooting Tips

- To freeze the action or moving subject.
 Use a fast shutter speed such as 1/4000 sec. to 1/500 sec.
- To blur a running child or animal giving the impression of fast movement.

Use a medium shutter speed such as 1/250 sec. to 1/30 sec. Follow the moving subject through the viewfinder and press the shutter button to take the picture. If you use a telephoto lens, hold it steady to prevent camera shake.

- How to blur a flowing river or water fountain.
 Use a slow shutter speed of 1/15 sec. or slower. Use a tripod to prevent camera shake.
- Set the shutter speed so that the aperture display does not blink in the viewfinder.

If you press the shutter button halfway and change the shutter speed while the aperture is displayed, the aperture display will also change to maintain the same exposure (amount of light reaching the image sensor). If you exceed the adjustable aperture range, the aperture display will blink to indicate that the standard exposure cannot be obtained.



If the exposure will be too bright, the highest aperture will blink. If this happens, turn the <a>> dial to the right to set a faster shutter speed or decrease the ISO speed.

Using the Built-in Flash

To obtain a correct flash exposure, the flash output will be set automatically (autoflash exposure) to match the automatically-set aperture. The flash sync speed can be set from 1/200 sec. to 30 sec.

Av: Changing the Depth of Field

To obtain a blurry background or to make everything near and far look sharp, set the Mode Dial to < Av > (Aperture-priority AE) to adjust the depth of field (range of acceptable focus).

 
* < Av > stands for Aperture value which is the size of the diaphragm hole inside the lens.




Sharp foreground and background (With a small aperture opening)



Blurred background (With a large aperture opening)



Set the Mode Dial to <Av>.

 

Set the desired aperture.

- The higher the aperture, the sharper the picture will look with a wider depth of field
- Turning the < > dial to the right will set a higher f-number, and turning it to the left will set a lower f-number



Take the picture.

Focus and press the shutter button completely. The picture will be taken with the selected aperture.



Aperture Display

The larger the f/number, the smaller the aperture opening will be. The apertures displayed will differ depending on the lens. If no lens is attached to the camera, "00" will be displayed for the aperture.

☆ Shooting Tips

 When using a high aperture, note that camera shake can occur in low light scenes.

A higher aperture will make the shutter speed slower. Under low light, the shutter speed can be as long as 30 sec. In such cases, increase the ISO speed and hold the camera steady or use a tripod.

 The depth of field depends not only on the aperture, but also the lens and subject distance.

Since wide-angle lenses have a wide depth of field (range of acceptable focus in front of and behind the point of focus), you need not set a high aperture to obtain a sharp picture from the foreground to the background. On the other hand, a telephoto lens has a narrow depth of field.

And the closer the subject, the narrower the depth of field. A farther subject will have a wider depth of field.

 Set the aperture so that the shutter speed display does not blink in the viewfinder.

If you press the shutter button halfway and change the aperture while the shutter speed is displayed, the shutter speed display will also change to maintain the same exposure (amount of light reaching the image sensor). If you exceed the adjustable shutter speed range, the shutter speed display will blink to indicate that the standard exposure cannot be obtained.



If the picture will be too dark, the "30" (30 sec.) shutter speed display will blink. If this happens, turn the < > dial to the left to set a lower aperture or increase the ISO speed.

 
If the picture will be too bright, the "**4000**" (1/4000 sec.) shutter speed display will blink. If this happens, turn the <a> dial to the right to set a higher aperture or decrease the ISO speed.

Using the Built-in Flash

To obtain a correct flash exposure, the flash output will be set automatically to match the set aperture (autoflash exposure). The shutter speed will be set automatically between 1/200 sec. - 30 sec. to suit the scene's brightness.

In low light, the main subject is exposed with the automatic flash, and the background is exposed with a slow shutter speed set automatically. Both the subject and background look properly exposed (automatic slow-speed flash sync). If you are handholding the camera, keep it steady to prevent camera shake. Using a tripod is recommended. If you do not want a slow shutter speed to be used, set the [4: Custom Functions (C.Fn)] menu's [Flash sync. speed in Av mode] to [1: 1/ 200-1/60 sec. auto] or [2: 1/200 sec. (fixed)] (p.184).

Depth of Field Preview*



Press the depth-of-field preview button to stop down to the lens's current aperture setting. You can check the depth of field (range of acceptable focus) through the viewfinder.

 


The depth-of-field effect can be clearly seen on the Live View image as you change the aperture and press the depth-of-field preview button (p.106).

M: Manual Exposure

You can set both the shutter speed and aperture as desired. With flash, the flash exposure will be set automatically to match the aperture that was set. The flash sync speed can be set within 1/200 sec. to 1/30 sec. or to bulb.

* < M > stands for Manual.



Standard exposure index



Exposure level mark

■ Set the Mode Dial to <M>.

Set the shutter speed and aperture.

- To set the shutter speed, turn the
 < i > dial.

Set the exposure and take the picture.

 The exposure level indicator in the viewfinder indicates the exposure level up to ±2 stops from the standard exposure index at the center. While you change the shutter speed and aperture, the exposure level mark will move. You can decide which exposure level to set.

Bulb Exposures

In step 2, turn the <a> dial to the left to set <BULB>. A bulb exposure keeps the shutter open for as long as you hold down the shutter button. It can be used to photograph fireworks, etc. The elapsed exposure time will be displayed on the LCD monitor.

For bulb exposures, using a tripod and Remote Switch (p.194) is recommended.

 


- Since bulb exposures produce more noise than usual, the image might look rough or grainy. You can reduce this noise by setting the [¥: Custom Functions (C.Fn)] menu's [Long exp. noise reduction] to [1: Auto] or [2: On] (p.185).
- The Auto Lighting Optimizer (p.186) will not work.

A-DEP: Automatic Depth-of-Field AE

Objects in the foreground and background will be in focus automatically. All the AF points will function to detect the subject, and the aperture required to attain the necessary depth of field will be set automatically.

* < A-DEP> stands for Auto-Depth of field. This mode sets the depth of field automatically.



■ Set the Mode Dial to < A-DEP >.



Focus the subject.

- Aim the AF points over the subjects and press the shutter button halfway.
 (*\overline{\Delta}4)
- All the subjects covered by the AF points flashing in red will be in focus.
- Take the picture.

? FAQ

The aperture display in the viewfinder blinks.

The exposure is correct, but the desired depth of field cannot be obtained. Either use a wide-angle lens or move farther away from the subjects.

The shutter speed display in the viewfinder blinks.

If the "30"" shutter speed blinks, it means that the subject is too dark. Increase the ISO speed. If the "4000" shutter speed blinks, it means that the subject is too bright. Decrease the ISO speed.

- A slow shutter speed has been set.
 Use a tripod.
- I want to use flash.

Flash can be used, however, the result will be the same as using the <**P**> mode with flash. The desired depth of field will not be obtained.

Changing the Metering Mode ★

The metering mode determines the exposure. Different metering modes measure the subject brightness differently. Normally, evaluative metering is recommended.

Select the [Metering mode].

Under the [a:] tab, select [Metering mode], then press < (ET) >.



Set the metering mode.

Press the <◀▶> key to select the metering mode, then press <(€1)>.



Evaluative metering

This is an all-around metering mode suited for portraits and even backlit subjects. The camera sets the exposure automatically to suit the scene. This metering mode is set automatically in the Basic Zone modes



Partial metering

Effective when the background is much brighter than the subject due to backlighting, etc. The gray area in the figure is where the metering is weighted to obtain the standard exposure.



Spot metering

This is for metering a specific part of the subject or scene. The gray area in the left figure is where the metering is weighted to obtain the standard exposure. This metering mode is for advanced users.



Center-weighted average metering

The metering is weighted at the center and then averaged for the entire scene. This metering mode is for advanced users.

Setting Exposure Compensation ★

Exposure compensation is used to alter the standard exposure set by the camera. You can make the image look brighter (increased exposure) or darker (decreased exposure). The exposure compensation setting will not be automatically canceled when you turn off the camera. After taking the picture, reset the exposure compensation to zero.

Av Setting Exposure Compensation

Set exposure compensation if the exposure (without flash) does not come out as desired. This feature can be used in the Creative Zone modes (except < M >).



Increased exposure for a brighter image



Decreased exposure for a darker image





Exposure is dark

Making it brighter

Hold down the <Av᠌> button and turn the <८८० dial to the right. (Increased exposure)

Making it darker

Hold down the <Avቜ> button and turn the <a>> dial to the left. (Decreased exposure)

- As shown in the figure, the exposure level is displayed on the LCD monitor and in the viewfinder.



Increased exposure for a brighter image

☑ Flash Exposure Compensation *

Set flash exposure compensation if the flash exposure of the subject does not come out as desired.



Under the [☐¹] tab, select [Flash control], then press <([€1])>.

Select [Built-in flash func. setting].

• Select [Built-in flash func. setting], then press <(st)>.

Select [Flash exp. comp].

 
Select [Flash exp. comp], then press
 (SET)>.

Set the flash exposure compensation amount.

- To make the flash exposure brighter, press the <►> key. (Increased exposure)
 Or to make it darker, press the <◄> key.
 (Decreased exposure)
- After setting the flash exposure compensation amount, press <(ET)>.
- When you press the shutter button halfway, the <5≥ > icon and flash exposure compensation amount will be displayed on the LCD monitor and the <5≥ > icon will appear in the viewfinder.
- After taking the picture, do steps 1 to 4 to return the flash exposure compensation amount to zero.
- If the [Y: Custom Functions (C.Fn)] menu's [Auto Lighting Optimizer] (p.186) is set to a setting other than [3: Disable], the image may look bright even if a decreased exposure compensation or flash exposure compensation has been set.
 - The flash exposure compensation amount can also be set or canceled with the Quick Control screen (p.102).
 The exposure compensation can also be set with [O: Exposure compensation]
 - The exposure compensation can also be set with [a: Expo. comp./ AEB] menu (p.86).













MENU Auto Exposure Bracketing ★

This feature takes exposure compensation a step further by varying the exposure automatically with three shots as shown below. You can then choose the best exposure. This is called AEB (Auto Exposure Bracketing).



Standard exposure



Darker exposure (Decreased exposure)



Brighter exposure (Increased exposure)







Select [Expo. comp./AEB].

Under the [a:] tab, select [Expo. comp./AEB], then press < (E) >.

Set the AEB amount.

- Turn the < > dial to set the AEB amount
- Press the < I> > key to set the exposure compensation amount. If AEB is combined with exposure compensation, AEB will be applied centering on the exposure compensation amount.
- Press < (SET) > to set it.
- When you press the shutter button halfway, the AEB amount will be displayed on the LCD monitor.

Take the picture.

 Focus and press the shutter button completely. The three bracketed shots will be taken in this sequence: Standard, decreased exposure, and increased exposure.

Canceling AEB

- Follow steps 1 and 2 to turn off the AEB amount display.
- The AEB setting will be canceled automatically if the power switch is set to <OFF>, flash recycling is complete, etc.

☆ Shooting Tips

- Using AEB with continuous shooting.
 - If <뎈> continuous shooting (p.68) has been set and you press the shutter button completely, the three bracketed shots will be taken continuously in this sequence: Standard, decreased exposure, and increased exposure.
- Using AEB with <□> single shooting. Press the shutter button three times to take the three bracketed shots. The three bracketed shots will be exposed in the following sequence: Standard, decreased exposure, and increased exposure.
- Using AEB with exposure compensation. Centering on the exposure compensation amount, AEB will be applied.
- Using AEB with the self-timer or wireless remote control. With the self-timer or wireless remote control ($\langle \delta_i^{\dagger} \rangle$ or $\langle \delta_2 \rangle$), you can take three continuous shots. With $< \delta c >$ set, the number of continuous shots will be three times the number set (p.55).



- Neither flash nor bulb exposures can be used with AEB.
 - If the [4: Custom Functions (C.Fn)] menu's [Auto Lighting Optimizer] (p.186) is set to other than [3: Disable], the AEB may not be so effective.

Շահ Customizing a Picture Style ★

You can customize a Picture Style by adjusting individual parameters like [Sharpness] and [Contrast]. To see the resulting effects, take test shots. To customize [Monochrome], see page 90.









Select [Picture Style].

- Under the [☐:] tab, select [Picture Style], then press < (≶ET)>.
- The Picture Style selection screen will appear.

Select a Picture Style.

- ▶ The Detail set. screen will appear.

Select a parameter.

 Select a parameter such as [Sharpness], then press <(SET)>.

Set the parameter.

- Press the <◀▶> key to adjust the parameter as desired, then press <⑤>.
- Press the <MENU> button to save the adjusted parameter. The Picture Style selection screen will reappear.
- Any parameter settings different from the default will be displayed in blue.

Parameter Settings and Effects

Sharpness

Adjusts the sharpness of the image.

To make it less sharp, set it toward the **o** end. The closer it is to **o**, the softer the image will look.

To make it sharper, set it toward the **2** end. The closer it is to **2**, the sharper the image will look.

Contrast

Adjusts the image contrast and the vividness of colors.

To decrease the contrast, set it toward the minus end. The closer it is to , the blander the image will look.

To increase the contrast, set it toward the plus end. The closer it is to . the crisper the image will look.

Saturation

The image's color saturation can be adjusted.

To decrease the color saturation, set it toward the minus end.

The closer it is to . the lighter the colors will look.

To increase the color saturation, set it toward the plus end. The closer it is to . the deeper the colors will look.

Color tone

The skin tones can be adjusted.

To make the skin tone redder, set it toward the minus end. The closer it is to
the redder the skin tone will look

To make the skin tone less red, set it toward the plus end. The closer it is to . the more yellow the skin tone will look.



- By selecting [Default set.] in step 3, you can revert the respective Picture Style to its default parameter settings.
 - The above adjustments will not be applied to the Picture Styles used in the <CA > (Creative Auto) mode.

Monochrome Adjustment

For Monochrome, you can also set [Filter effect] and [Toning effect] in addition to [Sharpness] and [Contrast] explained on the preceding page.

Filter Effect



With a filter effect applied to a monochrome image, you can make white clouds or green trees stand out more.

Filter	Sample Effects		
N: None	Normal black-and-white image with no filter effects.		
Ye: Yellow	The blue sky will look more natural, and the white clouds will look crisper.		
Or: Orange	The blue sky will look slightly darker. The sunset will look more brilliant.		
R: Red	The blue sky will look quite dark. Fall leaves will look crisper and brighter.		
G: Green	Skin tones and lips will look fine. Tree leaves will look crisper and brighter.		



Increasing the [Contrast] will make the filter effect more pronounced.

Toning Effect



By applying a toning effect, you can create a monochrome image in that color. It can make the image look more impressive.

The following can be selected: [N:None] [S:Sepia] [B:Blue] [P:Purple] [G:Green].

👫 Registering a Picture Style *

You can select a base Picture Style such as [Portrait] or [Landscape]. adjust its parameters as desired and register it under [User Def. 1], [User Def. 2], or [User Def. 3].

You can create Picture Styles whose parameter settings such as for sharpness and contrast are different. You can also adjust the parameters of a Picture Style which has been registered to the camera with the provided software.

Select [Picture Style].

- Under the [□¹] tab, select [Picture Style], then press <(st)>.
- ▶ The Picture Style selection screen will appear.

Select [User Def.].

- Select [User Def. *], then press the <DISP.> button.
- The Detail set, screen will appear.

Press < (SET) >.

 With [Picture Style] selected, press <(SET)>.



0.0.0.0

0,0,0,0

3.0.N.N

SET [0]

MENU *5

Standard

Standard

Standard

Picture Style

Neutral Neutral

F Faithful

Monochrome

33-1 User Def. 1

32 User Def. 2

3 User Def. 3

DISP Detail set

 
Detail set.



Select the base Picture Style.

- Press the < AV > key to select the base Picture Style, then press < (SET) >.
- To adjust the parameters of a Picture Style which has been registered to the camera with the provided software, select the Picture Style here





 Select a parameter such as [Sharpness], then press < (SET) >.



Set the parameter.

■ Press the <◀▶> key to adjust the parameter as desired, then press <(SET)>.

For details, see "Customizing a Picture Style" on pages 88-90.



- Press the <MENU> button to register the new Picture Style. The Picture Style selection screen will then reappear.
- ▶ The base Picture Style will be indicated on the right of [User Def. *].
- ▶ The name of the Picture Style having any modified settings (different from the default) registered under [User Def. *1 will be displayed in blue.



If a Picture Style has already been registered under [User Def. *], changing the base Picture Style in step 4 will nullify the parameter settings of the registered Picture Style.



To shoot with the registered Picture Style, follow step 2 on page 73 to select [User Def. *] and then shoot.

MENU Setting the Color Space ★

 
The color space refers to the range of reproducible colors. With this camera, you can set the color space for captured images to sRGB or Adobe RGB. For normal shooting, sRGB is recommended. In the Basic Zone modes, sRGB is set automatically.

Select [Color space].

Under the [☐:] tab, select [Color space], then press <(ET)>.

Set the desired color space.

 Select [sRGB] or [Adobe RGB], then press <(si)>.



About Adobe RGB

This color space is mainly used for commercial printing and other industrial uses. This setting is not recommended if you do not know about image processing, Adobe RGB, and Design rule for Camera File System 2.0 (Exif 2.21).

Since the image will look very subdued with an sRGB computer environment and printers not compatible with Design rule for Camera File System 2.0 (Exif 2.21), post-processing of the image with software will be required.

 


- If the image is captured with the color space set to Adobe RGB, the file name will start with "MG" (first character is an underscore).
- The ICC profile is not appended. The ICC profile is explained in the PDF Software Instruction Manual on the CD-ROM


X AE Lock[★]

Use AE lock when the area of focus is to be different from the exposure metering area or when you want to take multiple shots at the same exposure setting. Press the <★> button to lock the exposure, then recompose and take the shot. This is called AE lock. It is effective for backlit subjects.





 - Press the shutter button halfway.
 - ➤ The exposure setting will be displayed.



- The < ★> icon lights in the viewfinder to indicate that the exposure setting is locked (AE lock).
- Each time you press the < *> button, it locks the current auto exposure setting.



Recompose and take the picture.

 If you want to maintain the AE lock while taking more shots, hold down the < *X > button and press the shutter button to take another shot.



AE Lock Effects

Metering	AF Point Selection Method (p.66)		
Mode (p.83)	Automatic Selection	Manual Selection	
③ *	AE lock is applied at the AF point that achieved focus.	AE lock is applied at the selected AF point.	
(i)(:)	AE lock is applied at the center AF point.		

^{*} When the lens' focus mode switch is set to <MF>, AE lock is applied at the center AF point.

X FE Lock[★]

 
FE lock locks the flash exposure setting over the desired area of the subject. This feature can also be used with a Canon EX-series Speedlite. * FE stands for Flash Exposure.



(\$ 0.0°2..1.14°1.12 ISO 400 9

Press the <4> button to pop up the built-in flash.

 Press the shutter button halfway and look in the viewfinder to check that the < \$ > icon is lit.





(4*) 136 0.012.11.19.11.12 ISO UND 0

Press the <+> button. (₺16)

- Aim the viewfinder center over the subject where you want to lock the flash exposure, then press the < X > button.
- The flash will fire a preflash and the required flash output is calculated and retained in memory.
- In the viewfinder, "FEL" is displayed for a moment and <4*> will light.
- Each time you press the < ★ > button, a preflash is fired and the required flash output is calculated and retained in memory.



Take the picture.

 
- Compose the shot and press the shutter button completely.
- The flash is fired to take the picture.



If the subject is too far away and beyond the effective range of the flash, the <\$> icon will blink. Get closer to the subject and repeat steps 2 to 4.

WB: Setting the White Balance *

White balance (WB) is for making the white areas look white. Normally, the < (Auto) setting will obtain the correct white balance. If natural-looking colors cannot be obtained with < (AUE) >, you can select the white balance settings for different sources or set it manually by shooting a white object. In the Basic Zone modes, < (AUE) > will be set automatically.






¶ Press the < ▲ WB > button.

- ▶ [White balance] will appear.
- Select the white balance.
 - Press the <◀▶> key to select the desired white balance, then press <ଢ़ा>.
 - The "Approx. ****K" (K: Kelvin) displayed for the selected white balance < ※ > < ♠ > < ♣ > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .** > < .**

Custom White Balance

 Custom white balance enables you to manually set the white balance for a specific light source for better accuracy. Do this procedure under the actual light source to be used.




Photograph a white object.

 - The plain, white object should fill the spot metering circle.
- Focus manually and set the standard exposure for the white object.
- You can set any white balance.







Select [Custom WB].

- Under the [☐¹] tab, select [Custom WB], then press <(ET)>.
- ► The custom white balance selection screen will appear.

Import the white balance data.

- Select the image that was captured in step 1, then press <(ετ)>.
- On the dialog screen which appears, select [OK] and the data will be imported.
- When the menu reappears, press the <MENU> button to exit the menu.

Select the custom white balance.

- Press the < ▲ WB > button.
- Press the < ◆▶> key to select < ▶≥>, then press < (ଛ)>.



- If the exposure obtained in step 1 is way off, a correct white balance might not be obtained.
- If the image was captured while the Picture Style was set to [Monochrome] (p.74), it cannot be selected in step 3.



- Instead of a white object, an 18% gray card (commercially available) can produce a more accurate white balance.
- The personal white balance registered with the provided software will be registered under < №2>. If you do step 3, the data for the registered personal white balance will be erased.

 
WB White Balance Correction ★

You can correct the white balance that has been set. This adjustment will have the same effect as using a commercially-available color temperature conversion filter or color compensating filter. Each color can be corrected to one of nine levels.

This is for advanced users who are familiar with using color temperature conversion or color compensating filters.

White Balance Correction





- Under the [☎:] tab, select [WB SHIFT/BKT], then press < (SET) >.
- ▶ The WB correction/WB bracketing screen will appear.



Set the white balance correction.

- Press the <♠> key to move the "■" mark to the desired position.
- B is for blue. A is amber. M is magenta, and G is green. The color in the respective direction will be corrected
- On the upper right, "SHIFT" indicates the direction and correction amount
- Pressing the <DISP.> button will cancel all the [WB SHIFT/BKT] settinas.
- Press < (SET) > to exit the setting and return to the menu





- During the white balance correction, < ₩² > will be displayed in the viewfinder and on the LCD monitor.
 - One level of the blue/amber correction is equivalent to 5 mireds of a color temperature conversion filter. (Mired: Measuring unit indicating the density of a color temperature conversion filter.)

White Balance Auto Bracketing

With just one shot, three images having a different color tone can be recorded simultaneously. Based on the color temperature of the current white balance setting, the image will be bracketed with a blue/amber bias or magenta/green bias. This is called white balance bracketing (WB-BKT). White balance bracketing is possible up to ±3 levels in single-level increments.



B/A bias +3 levels



Set the white balance bracketing amount.

- In step 2 for white balance correction, when vou turn the < ? > dial. the "■" mark on the screen will change to "= = " (3 points). Turning the dial to the right sets the B/A bracketing, and turning it to the left sets the M/G bracketing.
- On the right side of the screen, "BKT" indicates the bracketing direction and the bracketing amount.
- Pressing the < DISP.> button will cancel all the [WB SHIFT/BKT] settings.
- Press < (SET) > to exit the setting and return to the menu

Bracketing Sequence

The images will be bracketed in the following sequence: 1. Standard white balance, 2. Blue (B) bias, 3. Amber (A) bias, or 1. Standard white balance, 2. Magenta (M) bias, 3. Green (G) bias.



During WB bracketing, the maximum burst for continuous shooting will be lower and the number of possible shots will also decrease to one-third the normal number.



- Since three images are recorded for one shot, the card will take longer to record the shot.
- "BKT" stands for Bracketing.

MENU Lens Peripheral Illumination Correction

Due to the lens characteristics, the four corners of the picture might look darker. This is called lens light fall-off or drop in peripheral illumination. This can be corrected. For JPEG images, lens light fall-off is corrected when the image is captured. For RAW images, it can be corrected with Digital Photo Professional (provided software). The default setting is [Enable].

Quality AL.
Beep On
Release shutter without card

2 sec.

Review time



Select [Peripheral illumin. correct.].

 Under the [☐¹] tab, select [Peripheral illumin. correct.], then press <(€1)>.

Set the correction setting.

- On the screen, check that the attached lens' [Correction data available] is displayed.
- If [Correction data not available] is displayed, see "About the Lens Correction Data" on the next page.
- Press the <▲▼ > key to select
 [Enable], then press <(€) >.

Take the picture.

 The image will be recorded with the corrected peripheral illumination.



Correction enabled



Correction disabled

About the Lens Correction Data

The camera already contains lens peripheral illumination correction data for about 25 lenses. In step 2, if you select [Enable], the peripheral light correction will be applied automatically for any lens whose correction data has been registered in the camera.

With the EOS Utility (provided software), you can check which lenses have their correction data registered in the camera. You can also register the correction data for unregistered lenses. For details, see the PDF Software Instruction Manual (on the CD-ROM) for EOS Utility.



- Lens peripheral light correction cannot be applied to JPEG images already captured.
 - Depending on shooting conditions, noise might appear on the image periphery.
 - When using a third-party lens, setting the correction to [Disable] is recommended, even if [Correction data available] is displayed.



- Lens peripheral light correction is applied even when an Extender is attached
 - If the correction data for the attached lens has not been registered to the camera, the result will be the same as when the correction is set to [Disable].
 - The correction amount applied will be slightly lower than the maximum correction amount settable with Digital Photo Professional (provided software).
 - If the lens does not have distance information, the correction amount will be lower
 - The higher the ISO speed, the lower the correction amount will be.

Using the Quick Control Screen

The shooting settings are displayed on the LCD monitor where you can directly select and set the functions. This is called the Quick Control screen





Basic Zone modes



Creative Zone modes

Display the Quick Control screen.

- When the shooting settings are displayed, press < (SET) >.
- ▶ The Quick Control screen will appear (**\$10**).

Set the desired setting.

- Press the <♠> kev to select a function.
- In the Basic Zone modes, you can select certain drive modes (p.68) and the image-recording quality (p.70).
- A brief description of the selected function is displayed on the screen's bottom.
- Turn the < 2 > dial to change the settina.


Take the picture.

 Press the shutter button completely to take the picture.




If the setting of the [: Custom Functions (C.Fn)] menu's [Assign SET button] (p.188) is set to other than [0: Quick Control screen], the Quick Control screen cannot be displayed in the Creative Zone modes.

Quick Control Screen Nomenclature

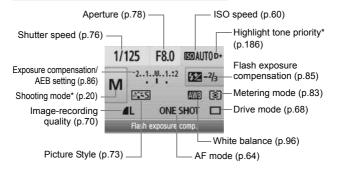

Asterisked functions cannot be set with the Quick Control screen.

Function Setting Display

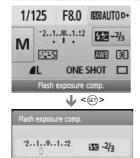

When using external flash, its flash exposure comp. overrides camera's

- On the Quick Control screen, select the function and press <
 The respective setting screen will then appear (except for the shutter speed and aperture).
- Turn the <[™]> dial to change the setting. You can also press the
 <◄> key to change the setting.
- Press < (sir) > to finalize the setting and return to the Quick Control screen.

Preventing Camera Shake *

The camera's mechanical shake caused by the reflex mirror action can affect images taken with a super telephoto lens or close-up (macro) lens. In such cases, mirror lockup is effective.

Mirror lockup is enabled by selecting the [4: Custom Functions (C.Fn)] menu's [Mirror lockup] and setting it to [1: Enable] (p.187).

- 1 Focus the subject, press the shutter button completely and release it.
 - ▶ The mirror will swing up.
- Press the shutter button completely again.
 - The picture is taken and the mirror goes back down.

Shooting Tips

- Using the self-timer < 32 > with mirror lockup. When you press the shutter button completely, the mirror locks up, then the picture is taken 2 sec. later.
- Remote control shooting.

Since you do not touch the camera when the picture is taken, remote control shooting together with mirror lockup can further prevent camera shake. With Remote Controller RC-5, pressing the transmit button locks up the mirror before the shot is taken 2 sec. later. With Remote Controller RC-1, set it to 2-sec. delay, then shoot.



- Do not point the camera toward the sun. The sun's heat can scorch and damage the shutter curtains.
 - If you use bulb exposures, the self-timer, and mirror lockup in combination, keep pressing the shutter button completely (self-timer delay time + bulb exposure time). If you let go of the shutter button during the self-timer countdown, there will be a shutter-release sound. However, this is not the actual shutter release (no picture is taken).



- Even if < □ > (Continuous shooting) has been set, single shooting will still take effect.
- The mirror locks up, and after 30 seconds, it will go back down automatically. Pressing the shutter button completely again locks up the mirror again.

Live View Shooting

You can shoot while viewing the picture on the camera's LCD monitor. This is called "Live View shooting."

Live View shooting is effective for still subjects which do not move.

If you handhold the camera and shoot while viewing the LCD monitor, camera shake can cause blurred images. Using a tripod is recommended.



About Remote Live View Shooting

With EOS Utility (provided software) installed in your computer, you can connect the camera to the computer and shoot remotely while viewing the computer screen. For details, see the PDF Software Instruction Manual on the CD-ROM.

△ Live View Shooting *







- Set the shooting mode to a Creative Zone mode.
- Live View shooting cannot be used in Basic Zone modes.

Display the Live View image.

- Press the < → > button.
- ► The Live View image will appear on the LCD monitor
- The Live View image will closely reflect the brightness level of the actual image you capture.
- If the standard exposure has not been obtained, turn the < i > dial.
- The image's field of view is about 100%.



Focus the subject.

 
- Before shooting, focus with AF or manual focus (p.111-118).
- Press the < * > button to focus in the current AF mode



Take the picture.

- Press the shutter button completely.
- The picture will be taken and the captured image is displayed on the LCD monitor.
- After the image review ends, the camera will return to Live View shooting automatically.
- Press the < >> button to end the Live View shooting.

To Enable Live View Shooting



Under [4: Live View function settings]. set [Live View shoot.] to [Enable].

Battery Life with Live View Shooting [Approx. number of shots]

Temperature	Shooting Conditions		
remperature	No Flash	50% Flash Use	
At 23°C / 73°F	190	170	
At 0°C / 32°F	180	160	

- The figures above are based on a fully-charged Battery Pack LP-E5 and CIPA (Camera & Imaging Products Association) testing standards.
- Continuous Live View shooting is possible for about 1 hour at 23°C/73°F (with a fully-charged Battery Pack LP-E5).



- During Live View shooting, do not point the lens toward the sun. The sun's heat can damage the camera's internal components.
 - Cautions for using Live View shooting are on pages 119-120.



In the following cases, the shutter will sound like it took two shots, but only one shot will be taken. During continuous shooting, only the first shot will make two shutter sounds.

- · Flash shots.
- · ISO 3200 or higher is set.



☐ Setting Shooting Functions *

Function settings particular to Live View shooting are explained here.

Functions Set with a Menu



Under the [4:] tab, the [Live View function settings] menu options, [Grid display], [Metering timer], and [AF model are as described below.

- Grid display With [Grid 1#1] or [Grid 2#1], you can display grid lines.
- Metering timer You can change the display time of the exposure setting.
- AF mode You can select [Live mode] (p.111), [Live mode] (p.112), or [Quick mode] (p.116).

Settable Functions when the Camera is ready to shoot

While the Live View image is displayed on the LCD monitor, press <(st) > so that the AF mode, Picture Style, white balance, drive mode, and image-recording quality can be set.



Press < (SET) >.

- ▶ The current settable function will be highlighted in blue.
- When < AF With > is selected, the AF points will also be displayed.

2

Select the function and set it.


- Press the < +> key to select the function to be set.
- ▶ The name of the selected function is displayed at the bottom.
- Turn the < > dial to change the setting.



- Even while the Live View image is displayed, you can still set <MENU> functions and execute playback < Σ>. If you select [α Dust Delete Data], [Υ Sensor cleaning], [Υ Clear settings], or [Υ Firmware Ver.], the Live View shooting will be terminated.
- The metering mode will be fixed to evaluative metering for Live View shooting.
- Under the [Y: Custom Functions (C.Fn)] menu, if [Shutter/AE lock button] (p.188) is set to [1: AE lock/AF], you can use AE lock by pressing the shutter button halfway.
- To check the depth of field, press the depth-of-field preview button.
- During continuous shooting, the exposure set for the first shot will also be applied to subsequent shots.
- Using <A-DEP> will be the same as using <P>.
- If the camera is not operated for a prolonged period, the power will turn off automatically as set with [Y Auto power off] (p.131). If [Y Auto power off] is set to [Off], the Live View shooting will stop automatically after 30 min. (camera power remains on).
- With the AV cable (provided) or HDMI cable (sold separately), you can display the Live View image on a TV (p.156-157).
- You can also use a remote controller (sold separately, p.194) for Live View shooting.

About the Information Display

 Each time you press the <DISP.> button, the information display will change.

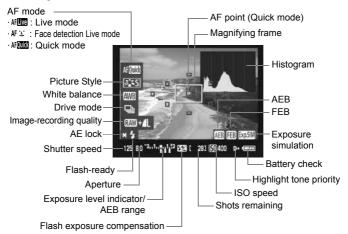



- When < > is displayed in white, it indicates that the Live View image brightness is close to what the captured image will look like.
- If < sill is blinking, it indicates that the Live View image is not being displayed at the suitable brightness due to low or bright light conditions.
 However, the captured image will reflect the exposure setting.
- If flash is used or bulb is set, the < icon and histogram will be grayed out (for your reference). The histogram might not be properly displayed in low or bright light conditions.

Using AF to Focus ★

Selecting the AF Mode

The AF modes available are [Live mode], [Live mode] (face detection, p.112), and [Quick mode] (p.116).

If you want to achieve precise focusing, set the lens focus mode switch to **MF**>, magnify the image, and focus manually (p.118).



Select the AF mode.

- Under [Y: Live View function settings], select [AF mode].
- While the Live View image is displayed, you can press < (sr) > to select the AF mode on the Quick Control screen.

Live Mode: AF

The image sensor is used to focus. Although AF is possible with the Live View image displayed, the AF operation will take longer than with the Quick mode. Also, achieving focus may be more difficult than with the Quick mode.



AF point

Display the Live View image.

- Press the < > button.
- ▶ The Live View image will appear on the LCD monitor.
- ▶ The AF point <□> will appear.

Move the AF point.

- You can press the < →> key to move the AF point to where you want to focus (it cannot go to the edges of the picture).
- To return the AF point to the center, press the < m̄ > button.



Focus the subject.

- Aim the AF point over the subject, and hold down the < *> button.
- When focus is achieved, the AF point will turn green and the beeper will sound.
- If focus is not achieved, the AF point will turn red



Take the picture.

 Check the focus and exposure, then press the shutter button to take the picture (p.106).

 
ট (Face detection) Live Mode: 🗚 এ

With the same AF method as the Live mode, human faces are detected and focused. Have the target person face the camera.



Display the Live View image.

- Press the < > button.
- ► The Live View image will appear on the LCD monitor
- When a face is detected, the < C> frame will appear over the face to be focused
- If multiple faces are detected, < > will be displayed. Press the < ◀ > > key to move the < > frame over the target face.



Focus the subject.

- Press the < *\frac{\foating }{\foating } > button to focus the face covered by the < [] > frame.
- ▶ When focus is achieved, the AF point will turn green and the beeper will sound.
- ▶ If focus is not achieved, the AF point will turn red
- If a face cannot be detected, the <□> AF point will be displayed and the center AF point will be used for focusing.



Take the picture.

 Check the focus and exposure, then press the shutter button to take the picture (p.106).



- If the focus is way off, face detection will not be possible. If the lens enables manual focusing even while the lens focus switch is set to <AF>, turn the focusing ring to attain rough focus. The face will then be detected and < ?> will be displayed.
 - An object other than a human face might be detected as a face.
 - Face detection will not work if the face is very small or large in the picture, too bright or too dark, titled horizontally or diagonally, or partially hidden.
 - The < ? > focusing frame might cover only part of the face.



- When you press the < m̄ > button, the AF mode will switch to the Live mode (p.111). You can press the < \darklow> key to switch to another AF point. Press the < m > button again to return to the : (face detection) Live mode.
- Since AF is not possible with a face detected near the edge of the picture, the < > will be graved out. Then if you press the < + > button, the center AF point <□> will be used to focus.

Live Mode and 🖰 (Face Detection) Live Mode Notes

AF operation

- Focusing will take slightly longer.
- Even when focus has been achieved, pressing the < ★ > button will focus again.
- The image brightness may change during and after the AF operation.
- If the light source changes while the Live View image is displayed, the screen might flicker and focusing can be difficult. If this happens, stop the Live View shooting and autofocus under the actual light source first.
- If you press the <@> button in the Live mode, the AF point area will be magnified. If it is difficult to focus in the magnified view, return to the normal view and autofocus. Note that the AF speed may differ between the normal and magnified views.
- If you autofocus in the Live mode's normal view and then magnify the image, the focus might be off.



 
- In the Live mode or : (face detection) Live mode, if you shoot a
 peripheral subject and the target subject is slightly out of focus, aim the
 center AF point over the subject to focus, then take the picture.
 - The AF-assist beam will not be emitted.
- AF is not possible with Remote Switch RS-60E3 (sold separately).

Shooting conditions which can make focusing difficult:

- Low-contrast subjects such as the blue sky and solid-color, flat surfaces.
- Subjects in low light.
- Stripes and other patterns where there is contrast only in the horizontal direction.
- Under a light source whose brightness, color, or pattern keeps changing.
- Night scenes or points of light.
- Under fluorescent lighting or when the image flickers.
- Extremely small subjects.
- Subjects at the edge of the picture.
- Subjects strongly reflecting light.
- The AF point covers both a near and faraway subject (such as an animal in a cage).
- Subjects which keep moving within the AF point and cannot keep still due to camera shake or subject blur.
- A subject approaching or moving away from the camera.
- Autofocusing while the subject is way out of focus.
- Soft focus effect is applied with a soft focus lens.
- A special effects filter is used.

Quick Mode: AFQUICK

The dedicated AF sensor is used to focus in the One-Shot AF mode (p.64), using the same AF method as with viewfinder shooting. Although you can focus the target area quickly, **the Live View image will be interrupted momentarily during the AF operation**.



Magnifying frame



Display the Live View image.

- Press the < > button.
 - ▶ The Live View image will appear on the LCD monitor.
 - The small boxes on the screen are the AF points, and the larger box is the magnifying frame.

Select the AF point.

- When you press < (ET) >, the Quick Control screen will appear.
- ► The current settable function will be highlighted in blue.
- Press the < ◀▶> key to make the AF point selectable.
- Turn the < >> dial to select the AF point.







Focus the subject.

- Aim the AF point over the subject, and hold down the $\langle \times \rangle$ button.
- ▶ The Live View image will turn off, the reflex mirror will go back down, and AF will be executed
- ▶ When focus is achieved, the beeper will sound and the Live View image will reappear.
- ► The AF point used to focus will be displayed in red.

Take the picture.

 Check the focus and exposure, then press the shutter button to take the picture (p.106).



- You cannot take a picture during autofocusing. Take the picture only while the Live View image is displayed.
 - AF is not possible with Remote Switch RS-60E3 (sold separately).

Focusing Manually*

You can magnify the image and focus precisely manually.





Magnifying frame





AE lock | Magnified area position Magnification

1 Set the lens focus mode switch to <MF>.

 Turn the lens focusing ring to focus roughly.

Move the magnifying frame.

- Press the < \$\dagset\$ key to move the magnifying frame to the position where you want to focus.
- To return the AF point to the center, press the < m̄ > button.

Magnify the image.

- Press the <⊕> button.
- The image within the magnifying frame will be magnified.
- Each time you press the <@> button, the display format will change as follows:

$$\rightarrow$$
 5x \rightarrow 10x \rightarrow Normal view

Focus manually.

- While looking at the magnified image, turn the lens focusing ring to focus.
- After achieving focus, press the <[⊕]
 button to return to the normal view.

Take the picture.

 Check the focus and exposure, then press the shutter button to take the picture (p.106).



Notes About the Live View Image

- Under low or bright light conditions, the Live View image might not reflect the brightness of the captured image.
- If the light source within the image changes, the screen might flicker. If this happens, stop and resume the Live View shooting under the actual light source to be used.
- If you point the camera in a different direction, it might throw off the Live View image's correct brightness momentarily. Wait until the brightness level stabilizes before shooting.
- If there is a very bright light source in the picture, such as the sun, the bright area might appear black on the LCD monitor. However, the actual captured image will correctly show the bright area.
- In low light, if you set the [Y: LCD brightness] to a bright setting. chrominance noise may appear in the Live View image. However, the chrominance noise will not be recorded in the captured image.
- When you magnify the image, the image sharpness may look more pronounced than it really is.

About the < 100 > icon

- If Live View shooting is used under direct sunlight or in other hot environments, the < 10 > icon (warning for the camera's high internal temperature) may appear on the screen. If Live View shooting continues with a high internal temperature, it may degrade image quality. You should therefore stop Live View shooting if the warning icon appears.
- If Live View shooting continues while the < salar varning icon is displayed and the camera's internal temperature increases, the Live View shooting will stop automatically. Live View shooting will be disabled until the camera's internal temperature decreases.



Notes About the Shooting Results

- When you shoot continuously with the Live View function for a long period, the camera's internal temperature may increase and it can degrade image quality. Terminate Live View shooting when not shooting images.
- Before taking a long exposure, stop Live View shooting temporarily and wait several minutes before shooting. This is to prevent image degradation.
- Live View shooting in high temperatures and at high ISO speeds may cause noise or irregular colors.
- When you shoot at high ISO speeds, noise (horizontal banding, light dots, etc.) may appear.
- If you take the picture during magnified view, the exposure might not come out as desired. Return to the normal view before taking the picture. During the magnified view, the shutter speed and aperture will be displayed in red. Even if you take the picture during magnified view, the captured image will show the normal view.

Custom Function Notes

- During Live View shooting, certain Custom Function settings will be disabled (p.183).
- If the [♥: Custom Functions (C.Fn)] menu's [Auto Lighting Optimizer] (p.186) is set to a setting other than [3: Disable], the image may look bright even if a decreased exposure compensation or flash exposure compensation has been set.

Notes About Lenses and Flash

- The focus preset feature on super telephoto lenses cannot be used.
- FE lock is not possible when the built-in flash or an external Speedlite is used. Modeling flash and test flash will not fire if an external Speedlite is used.

Shooting Movies



Set the Mode Dial to < ₹ > to shoot movies. The movie file format will be MOV.



SD Cards for Movie Shooting

When shooting movies, use a card with an SD speed Class 6 "CLASS®" or higher. If you use a card with a slower SD speed Class, the movie shooting and playback might not work properly.

Also, a large-capacity card is recommended for movie shooting.



About Full HD 1080

 
Full HD 1080 indicates compatibility with High-Definition with 1080 vertical pixels (scanning lines).



Shooting Movies

Connecting the camera to a TV set is recommended to playback movies (p.156-157).





▶ The reflex mirror will make a sound, then the image will appear on the LCD monitor.



Focus the subject.

- Before shooting a movie, autofocus or manual focus (p.111-118).
- Press the < *\frac{\times}{\times} > button to focus in the current AF mode.



Shoot the movie.

- Press the < → > button to start shooting the movie. To stop shooting the movie, press < → > again.
- While the movie is being shot, the "O" mark will be displayed on the upper right of the screen.



- During movie shooting, do not point the lens toward the sun. The sun's heat can damage the camera's internal components.
- Cautions for movie shooting are on pages 127-128.
- If necessary, also read the Live View shooting cautions on pages 119 and 120.



- One continuous movie shoot will be recorded as one file.
- AE lock is possible by pressing the <ISO> button. To cancel AE lock, press the <⊞> button.
- The ISO speed, shutter speed, and aperture are set automatically.
- Pressing the shutter button halfway displays the shutter speed and aperture (p.126) at the screen bottom left. This is the exposure setting for taking a still photo.
- With a fully-charged Battery Pack LP-E5, the total shooting time will be as follows: At 23°C/73°F: Approx. 1 hr. 10 min., At 0°C/32°F: Approx. 1 hr.

Movie Settings

Function settings particular to movie shooting are explained here.

Functions Set with a Menu



Display the movie menu.

- Select the [¹\(\overline{\
- The menu options displayed are explained below.

Movie-recording size

[1920x1080]: Full HD (Full High-Definition) recording quality.

[1280x720] : HD (High-Definition) recording quality.

[640x480] : Standard recording quality. The screen format will be 4:3.

Total Movie Recording Time and File Size Per Minute

Movie-	Total Recording Time		
recording Size	4GB Card	16GB Card	File Size
[1920x1080]	12 min.	49 min.	330 MB/min.
[1280x720]	18 min.	1 hr. 13 min.	222 MB/min.
[640x480]	24 min.	1 hr. 39 min.	165 MB/min.



- At [1920x1080], the movie is recorded at 20 frames per second (fps). At [1280x720] and [640x480], it will be 30 fps.
 - The semi-transparent parts on the top and bottom or on the left and right will not be recorded.
 - With ZoomBrowser EX/ImageBrowser (provided software), you can extract a still image from the movie. The still image quality will be as follows: Approx. 2 megapixels at [1920x1080], approx. 1 megapixel at [1280x720], and approx. 300,000 pixels at [640x480].

AF mode

The AF mode will be the same as described on pages 111-117. You can select [Live mode], [Live mode], or [Quick mode]. Note that continuous focusing of a moving subject cannot be done.

Grid display

With [Grid 1#] or [Grid 2##], you can display grid lines.

Metering timer

You can change how long the AE lock is to be maintained with the <ISO> button.

Sound recording

When the sound recording is set to [**On**], monaural sound will be recorded with the built-in microphone. (An external microphone cannot be used.) The sound recording level will be adjusted automatically.

Remote control

You can use Remote Controller RC-1/RC-5 (sold separately, p.194) to start and stop the movie shooting. With RC-1, set the timing switch to <2> (2-sec. delay), then press the transmit button. If the switch is set to <●> (immediate shooting), still photo shooting will take effect.

Settable Functions During Camera Ready

While the image is displayed on the LCD monitor, press < (ET) > so that the AF mode, Picture Style, white balance, movie-recording size, and still image-recording quality can be set.



Press < (SET) >.

- ➤ The current settable function will be highlighted in blue.
- When < AF is selected, the AF points will also be displayed.

Select the function and set it.

- Press the < +> key to select the function to be set.
- ► The name of the selected function is displayed at the bottom.
- Turn the < > dial to change the setting.



- By holding down the < Av 2 > button and turning the < △ > dial, you can set the exposure compensation.
 - In the movie shooting mode and Creative Zone modes, the setting will be the same for the Picture Style, white balance, image-recording quality. and exposure compensation (except **M**).

Shooting Still Photos



You can take a still photo at anytime by pressing the shutter button completely. even during movie shooting.


Taking Still Photos During Movie Shooting

- The still photo will record the entire screen including the semitransparent mask.
- If you take a still photo during movie shooting, the movie will have a still segment for about 1 sec.
- The captured still photo will be recorded to the card, and the movie shooting will resume automatically when the Live View image is displayed.
- The card will record the movie and still photo as separate files.
- Functions particular to still shooting are shown below. Other functions will be the same as for movie shooting.

Function	Setting	
Image-recording quality	As set in the [Quality] menu.	
Exposure compensation	Shutter speed and aperture automatically set. Displayed when the shutter button is pressed halfway.	
Drive mode	Single shooting (Self-timer not possible)	
Flash	Flash off	

About the Information Display

 Each time you press the <DISP.> button, the information display will change.

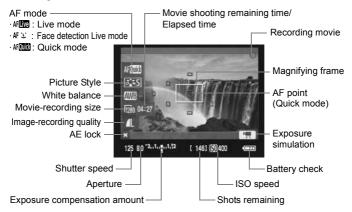



- If there is no card in the camera, the movie-recording size and movie shooting remaining time will be displayed in red.
- When movie shooting starts, the movie shooting remaining time will change to the elapsed time.
- When < > is displayed in white, it indicates that the Live View image brightness is close to what the actual movie will look like. If < > is blinking, it indicates that the Live View image is not being displayed at the suitable brightness due to low or bright light conditions. However, the actual movie recorded will reflect the exposure setting.



Notes on Movie Shooting

Recording and Image Quality

- At [1920x1080], the recorded frame rate is slower, so fast-moving subjects or scenes may look a little jerky.
- If a single movie's file size reaches 4 GB, the movie shooting will stop automatically. To start movie shooting again, press the < >> button. (A new movie file starts being recorded.)
- If the attached lens has an Image Stabilizer, the Image Stabilizer will operate at all times even if you do not press the shutter button halfway. The Image Stabilizer may cause the total movie shooting time or the number of possible shots to decrease. If you use a tripod or if the Image Stabilizer is not necessary, you should set the IS switch to <OFF>.
- The camera's built-in microphone will also pick up camera operation sounds. If you do not want to record any sound, set the sound recording to [Off].
- Autofocusing during movie shooting is not recommended since it might momentarily throw the focus way off or change the exposure. Even if the AF mode has been set to [Quick mode], it will switch to the Live mode during movie shooting.
- If the movie shooting is not possible due to the insufficient remaining capacity of the card, the movie recording size and movie shooting remaining time (p.126) will be displayed in red.
- If you use a card having a slow writing speed, the five-level indicator might appear on the right of the screen during movie shooting. It indicates how much data has not yet been written to the card (remaining capacity of the internal buffer memory). The slower the card, the faster the indicator will climb upward. If the indicator becomes full, movie shooting will stop automatically.



Indicator

If the card has a fast writing speed, the indicator will either not appear or the level (if displayed) will hardly go upward. First, shoot a few test movies to see if the card can write fast enough. If you take still photos during the movie shooting, the movie shooting might stop. If the still image recording quality has been set low, it might be improved.

 During movie shooting mode, certain Custom Function settings will be disabled (p.183).



Notes on Movie Shooting

Camera's internal temperature increase and image degradation

- If you continue to shoot movies for a prolonged period, the camera's internal temperature will increase. This can degrade the image quality. While not shooting, turn off the power.
- If you shoot under direct sunlight or high-temperature conditions, the < 10 > icon (high internal temperature warning) may appear on the screen. If you keep shooting a movie with the warning icon displayed, the image quality might degrade. You should turn off the power and allow the camera to rest for a while.
- camera's internal temperature increases further, the movie shooting will stop automatically. If this happens, you will not be able to shoot again until the camera's internal temperature decreases. Turn off the power and let the camera rest for a while.

Playback and TV connection

- If the brightness changes during movie shooting, that part might freeze momentarily.
- If you connect the camera to a TV set with an HDMI cable (p.157) and shoot a movie in [1920x1080] or [1280x720], the movie being shot will be displayed at a small size on the TV. However, the actual movie will be properly recorded at the movie recording size that was set.
- If you connect the camera to a TV set (p.156-157) and shoot a movie, the TV will not output any sound during the shooting. However, the sound will be properly recorded.

7

Handy Features

- Silencing the Beeper (p.130)
- Card Reminder (p.130)
- Setting the Image Review Time (p.130)
- Setting the Auto Power-off Time (p.131)
- Adjusting the LCD Monitor Brightness (p.131)
- File Numbering Methods (p.132)
- Auto Rotate of Vertical Images (p.134)
- Checking Camera Settings (p.135)
- Reverting the Camera to the Default Settings (p.136)
- About Copyright Information (p.137)
- Preventing the LCD Monitor from Turning off Automatically (p.138)
- Changing the Shooting Settings Screen Color (p.138)
- Setting the Flash (p.139)
- Automatic Sensor Cleaning (p.142)
- Appending Dust Delete Data (p.143)
- Manual Sensor Cleaning (p.145)

Handy Features

MENU Silencing the Beeper

You can prevent the beeper from sounding when focus is achieved or during self-timer operation.



Under the [**□**] tab, select [**Beep**], then press < (€) >. Select [**Off**], then press < (€) >.

MENU Card Reminder

This prevents shooting if there is no card in the camera.



Under the [\(\Omega^{\infty}\)] tab, select [Release shutter without card], then press <(\varepsilon) >. Select [Disable], then press <(\varepsilon) >. If there is no card installed and you press the shutter button, "Card" will be displayed in the viewfinder, and you cannot release the shutter.

MENU Setting the Image Review Time

You can set how long the image is displayed on the LCD monitor immediately after capture. If **[Off]** is set, the image will not be displayed immediately after image capture. If **[Hold]** is set, the image review will be displayed up until the **[Auto power off]** time. During the image review, if you operate any camera controls such as pressing the shutter button halfway, the image display will end.



Under the [Ω '] tab, select [Review time], then press < $(\Omega$). Set the time, then press < $(\Omega$).

MENU Setting the Auto Power-off Time

To save battery power, the camera turns off automatically after the set time of idle operation elapses. You can set this auto power-off time. When the camera has turned off due to auto power off, you can wake up the camera by pressing the shutter button halfway or any of the following buttons: <MENU> <DISP.> <E>> etc.

If [Off] has been set, either turn off the camera yourself or press the <DISP.> button to turn off the shooting settings display to save battery power.

If [Off] has been set and the camera is not used for 30 min., the LCD monitor will turn off automatically. To turn on the LCD monitor again, press the <DISP.> button.



Under the $[\P']$ tab, select [Auto power off], then press < (e) >. Set the time, then press < (e) >.

MENU Adjusting the LCD Monitor Brightness

You can adjust the brightness of the LCD monitor to make it easier to read.






Under the [**f**:] tab, select [LCD brightness], then press <€1>. With the adjustment screen displayed, press the <◀▶> key to adjust the brightness, then press <€1>.

When checking the exposure of an image, set the LCD monitor brightness to 4 and prevent the ambient light from affecting the reviewed image.

MENU File Numbering Methods

The file number is like the frame number on a roll of film. The captured images are assigned a sequential file number from 0001 to 9999 and saved in one folder. You can change how the file number is assigned. The file number will appear on a computer in this format:

 IMG 0001.JPG.




Under the [**f**'] tab, select [File numbering], then press <€)>. Follow the steps below to select a file numbering method, then press <€)>.

 [Continuous]: The file numbering continues in sequence even after the card is replaced.

Even after you replace the card, the file numbering continues in sequence up to 9999. This is convenient when you want to save the images numbered anywhere between 0001 to 9999 from multiple cards into one folder in your computer.

If the replacement card contains images recorded previously, the file numbering of the new images might continue from the file numbering of the existing images in the card. If you want to use continuous file numbering, you should use a newly-formatted card each time.

 File numbering after replacing the card




Next sequential file number

[Auto reset]: Resets the file numbering to 0001 whenever the card is replaced.

Each time you replace the card, the file numbering restarts from 0001. This is convenient if you want to organize images according to cards. If the replacement card contains images recorded previously, the file numbering of the new images might continue from the file numbering of the existing images in the card. To restart the file numbering from 0001, you should use a newly-formatted card.

 File numbering after replacing the card



File numbering is reset

 [Manual reset]: To reset the file numbering to 0001 manually or to start from file number 0001 in a new folder

When you reset the file numbering manually, a new folder is created automatically and the file numbering of images saved to that folder starts from 0001

This is convenient when you want to use different folders for the images taken vesterday and the ones taken today, for example, After the manual reset, the file numbering returns to continuous or auto reset.



If the file number in folder No. 999 reaches 9999, shooting will not be possible even if the card still has storage capacity. The LCD monitor will display a message to replace the card. Replace with a new card.



For both JPEG and RAW images, the file name will start with "IMG_". Movie file names will start with "MVI". The extension will be ".JPG" for JPEG images, ".CR2" for RAW images, and ".MOV" for movies.

MENU Auto Rotate of Vertical Images



Vertical images are rotated automatically so they are displayed vertically on the camera's LCD monitor and computer instead of horizontally. The setting of this feature can be changed.



Under the [♣'] tab, select [Auto rotate], then press <€□>. The available settings are described below. Select one, then press <€□>.

- [On ■] : The vertical image is automatically rotated only on the computer.
- [Off]: The vertical image is not automatically rotated at all.

? FAQ

- The vertical image is not rotated during the image review immediately after it is captured.
 - Press the < >> button and the image playback will display the rotated image.
- [On □ ■] is set, but the image does not rotate during playback. Auto rotate will not work with vertical images captured while [Auto rotate] was set to [Off]. Also, if the vertical image is taken while the camera is pointed up or down, the image might not rotate for playback. In such a case, see "Rotating the Image" on page 151.
- On the camera's LCD monitor, I want to rotate an image captured when [On ■] had been set.
 Set [On ■ ■], then playback the image. It will be rotated.
- The vertical image does not rotate on the computer screen.
 The software used is not compatible with image rotation. Use the camera's provided software instead.


DISP. Checking Camera Settings

While the menu is displayed, press the <DISP.> button to display the camera's current settings.




- While the menu is displayed, press the <DISP.> button to display the settings.
- Press the <DISP.> button again to return to the menu.
- Press the shutter button halfway to return to the shooting settings display.

Settings Display

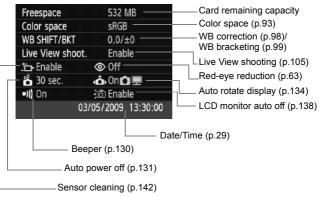

MENU Reverting the Camera to the Default Settings *

 This is for reverting all the camera's shooting settings and Custom Functions to the default settings. This works in the P> and other Creative Zone modes.







Select [Clear settings].

- Under the [¥:] tab, select [Clear settings], then press <(ET)>.
- Select the desired setting.
- To revert the shooting settings to the default, select [Clear all camera settings], then press <(si)>.
- To revert the Custom Functions to the default settings, select [Clear all Custom Func. (C.Fn)], then press <(ET)>.

Select [OK].

- Select [OK], then press < (st) >.
- Setting [Clear all camera settings] will reset the camera to the following default settings:

Shooting Settings

oncoming cominge			
AF mode	One-Shot AF		
AF point selection	Automatic selection		
Metering mode	(Evaluative metering)		
ISO speed	AUTO (Auto)		
Drive mode	☐ (Single shooting)		
Exposure compensation/AEB	Canceled		
Flash exposure compensation 0 (Zero)			
Live View shooting	g Enable		

Image-recording Settings

_	-
Quality	4 L
Picture Style	Standard
Color space	sRGB
White balance	AWB (Auto)
WB correction	Canceled
WB-BKT	Canceled
Peripheral illumination correction	Enable/ Correction data retained
File numbering	Continuous
Auto cleaning	Enable
Dust Delete Data	Erased

Camera Settings

Auto power off	30 sec.
Веер	On
Release shutter without card	Enable
Review time	2 sec.
Image jump w/ 🕮	10 images
Auto rotate	On 🗖 💻
LCD brightness	% н. ! нн ∰

Movie Settings

Movie-recording size	1280x720
AF mode	Live mode
Sound recording	On
Grid display	Off
Metering timer	16 sec.
Remote control	Disable



Custom Function settings, date/time, interface language, video system, and My Menu items will not change.

MENU About Copyright Information ★

If you use EOS Utility (provided software) to set your copyright information, the copyright information will be added to the image's Exif information. With the camera, the copyright information can only be viewed or deleted. If your copyright information has not been set, it will be graved out on the screen and unusable.





- With the [Clear settings] screen displayed, press the <DISP, > button to display the copyright information.
- Press the <MFNU> button to return to the [Clear settings] screen.
- To delete the copyright information, select [Delete copyright information] on the [Clear settings] screen

MENU Preventing the LCD Monitor from Turning off Automatically

This prevents the display-off sensor from turning off the shooting settings display automatically when your eye nears the viewfinder eyepiece.



 
Select [LCD auto off].

 Under the [Ŷ] tab, select [LCD auto off], then press <(x)>. Select [Disable], then press <(x)>.

MENU Changing the Shooting Settings Screen Color

You can change the background color of the shooting settings screen.





Select [Screen color].

- Under the [♥¹] tab, select [Screen color], then press <(€1)>.
- Select the desired color, then press
 (set)>.
- When you exit the menu, the selected color will be displayed for the shooting settings screen.



MENU Setting the Flash ★

The built-in flash and external Speedlite settings can be set with the menu. The [External flash ***] menu options for external Speedlites will be applicable only to an attached EX-series Speedlite compatible with the respective functions.

The setting procedure is the same as setting a camera menu function.



Select [Flash control].

- Under the [a] tab, select [Flash control], then press < (st) >.
- ► The flash control screen will appear.

[Flash firing]



- Normally, set this to [Enable].
- If [Disable] is set, both the built-in flash and external Speedlite will not fire. This is useful when you only want to use the AF-assist beam.

[Built-in flash func. setting] and [External flash func. setting]

The [Built-in flash func. setting] and [External flash func. setting] menus can set the functions listed on the next page. The functions displayed under [External flash func. setting] will vary depending on the Speedlite model.



- Select [Built-in flash func. setting] or [External flash func. setting].
- The flash functions will be displayed. The functions not dimmed can be set or selected.


[Built-in flash func. setting] and [External flash func. setting] Settable Functions

Function	[Built-in flash func. setting]	[External flash func. setting]	Page
Flash mode	Fixed at E-TTL II	0	140
Shutter sync.	Ô		140
FEB*	-	0	-
Flash exposure compensation	Ó		85
E-TTL II	0		141
Zoom*	-	0	_
Wireless setting*	_	0	-

^{*} Regarding the [FEB] (Flash exposure bracketing), [Zoom], and [Wireless set.], refer to the Speedlite's instruction manual.

Flash mode

 With an external Speedlite, you can select the flash mode to suit your flash shooting.



- [E-TTL II] is the standard mode for EX-series Speedlites for automatic flash shooting.
- [Manual flash] enables you to set the flash output yourself. This is for advanced users.
- Regarding other flash modes, refer to your Speedlite's instruction manual.


Shutter sync.

Normally, set this to [1st curtain] so that the flash fires immediately after the exposure starts.

If [2nd curtain] is set, the flash will fire right before the exposure ends. When this is combined with a slow sync speed, you can create a trail of light such as from car headlights at night. With 2nd curtain sync, two flashes will be fired, once when you press the shutter button completely, and once immediately before the exposure ends. If an external Speedlite is attached, you can also set [Hi-speed]. For details, see the Speedlite's instruction manual.

- E-TTL II
 For normal flash exposures, set it to [Evaluative].
 If [Average] is set, the flash exposure will be averaged for the entire metered scene as with an external metering flash. Flash exposure compensation may be necessary depending on the scene, so this setting is for advanced users.
- Clear Speedlite settings
 On the [External flash func. setting] screen, press the <DISP.>
 button to display the screen to clear the flash settings. When you select [OK], the settings for the built-in flash and external Speedlite will be cleared.

Setting the External Speedlite Custom Functions

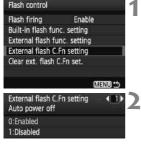

Display the Custom Function.

 Select [External flash C.Fn setting], then press < (sī) >.

Set the Custom Function.

- Press the <**◄▶>** key, then press <(♠)>.
- To clear all the Custom Function settings, select [Clear ext. flash C.Fn set.] in step 1.

 
Whenever you set the power switch to <0N> or <0FF>, the Self Cleaning Sensor Unit operates to automatically shake off the dust on the front of the sensor. Normally, you need not pay attention to this operation. However, you can execute the sensor cleaning at anytime as well as disable it.

Cleaning the Sensor Now



Select [Sensor cleaning].

Under the [♥¹] tab, select [Sensor cleaning], then press <(⟨€)⟩.



Select [Clean now :□].

- Select [Clean now . →], then press
 (set)>.
- Select [OK] on the dialog screen, then press <(SET)>.
- The screen will indicate that the sensor is being cleaned. Although there will be a shutter sound, a picture is not taken.



- For best results, do the sensor cleaning while the camera bottom is placed on a table or other flat surface.
- Even if you repeat the sensor cleaning, the result will not improve that much. Right after the sensor cleaning is finished, the [Clean now ---] option will remain disabled temporarily.

Disabling Automatic Sensor Cleaning

- In step 2, select [Auto cleaning : ☐] and set it to [Disable].
- The sensor cleaning will no longer be executed when you set the power switch to <ON> or <OFF>.

MENU Appending Dust Delete Data ★

Normally, the Self Cleaning Sensor Unit will eliminate most of the dust that might be visible on captured images. However, in case visible dust still remains, you can append the Dust Delete Data to the image to later erase the dust spots. The Dust Delete Data is used by Digital Photo Professional (provided software) to erase the dust spots automatically.

Preparation

- Get a solid-white object (paper, etc.).
- Set the lens focal length to 50mm or longer.
- Set the lens focus mode switch to <MF> and set the focus to infinity (∞). If the lens has no distance scale, look at the front of the lens and turn the focusing ring clockwise all the way.

Obtain the Dust Delete Data





 Under the [☐:] tab, select [Dust Delete Data], then press <ⓒ>.

 




Select [OK].

 Select [OK] and press < (ET) >. The automatic self-cleaning of the sensor will be performed, then a message screen will appear. Although there will be a shutter sound, a picture is not taken.







Photograph a solid-white object.

- At a distance of 20 cm 30 cm / 0.7 ft. 1.0 ft., fill the viewfinder with a patternless, solid-white object and take a picture.
- ➤ The picture will be taken in the aperturepriority AE mode with an aperture of f/22.
- Since the image will not be saved, the data can still be obtained even if there is no card in the camera.
 - When the picture is taken, the camera will start obtaining the Dust Delete Data. When the Dust Delete Data is obtained, a message will appear. Select [OK], and the menu will reappear.
- If the data was not obtained successfully, a message to that effect will appear. Follow the "Preparation" procedure on the preceding page, then select [OK]. Take the picture again.

About the Dust Delete Data

After the Dust Delete Data is obtained, it is appended to all the JPEG and RAW images captured thereafter. Before an important shoot, you should update the Dust Delete Data by obtaining it again.

To erase dust spots automatically with the provided software, see the PDF Software Instruction Manual on the CD-ROM.

The Dust Delete Data appended to the image is so small that it hardly affects the image file size.



Be sure to use a solid-white object such as a new sheet of white paper. If the paper has any pattern or design, it may be recognized as dust data and affect the accuracy of the dust deletion with the software.

MENU Manual Sensor Cleaning ★

Dust which could not be removed by the automatic sensor cleaning can be removed manually with a blower, etc.

 
The surface of the image sensor is extremely delicate. If the sensor needs to be cleaned directly, having it done by a Canon Service Center is recommended.

Before cleaning the sensor, detach the lens from the camera.



◀ Select [Sensor cleaning].

Under the [Y:] tab, select [Sensor cleaning], then press <(st) >.



Select [Clean manually].

Select [Clean manually], then press <(ET)>.



Select [OK].

- Select [**OK**], then press < (str) >.
- ▶ In a moment, the reflex mirror will lockup and the shutter will open.

4 End the cleaning.

Set the power switch to <OFF>.



- As power source, using the AC Adapter Kit ACK-E5 (sold separately) is recommended.
- If you use the battery, make sure it is fully recharged. If a battery grip with size-AA/LR6 batteries is attached, manual sensor cleaning will not be possible.



- While cleaning the sensor, never do any of the following. If the power is cut off, the shutter will close and the shutter curtains and image sensor might get damaged.
 - Setting the power switch to <OFF>.
 - · Opening the battery compartment cover.
 - · Opening the card slot cover.
- The surface of the image sensor is extremely delicate. Clean the sensor with care.
- Use a plain blower without any brush attached. A brush can scratch the sensor
- Do not insert the blower tip inside the camera beyond the lens mount. If the power is turned off, the shutter will close and the shutter curtains or reflex mirror might get damaged.
- Never use canned air or gas to clean the sensor. The blowing force can damage the sensor or the spray gas can freeze on the sensor.

8

Image Playback

This chapter explains features related to viewing photos and movies, going into more detail than in Chapter 2 "Basic Shooting and Image Playback" which explained the playback procedure. Here you will learn how to playback and erase photos and movies with the camera and viewing them on a TV set.

About images taken with another camera:

The camera might not be able to properly display images captured with a different camera or edited with a computer or whose file name was changed.

▶ Searching for Images Quickly

☑ Display Multiple Images on One Screen (Index display)

Search for images quickly with the index display showing four or nine images on one screen.



Playback the image.

 When you press the <►> button, the last captured image will be displayed.



Turn on the index display.

- Press the <■•Q > button.
- The 4-image index display will appear. The currently-selected image will be highlighted in a blue frame.
- Press the < ■•Q > button again to switch to the 9-image index display.









Select the image.

- Press the < ⋄ > key to move the blue frame to select the image.
- Turn the < > dial to see the next screen of index images.
- Press the <^Q> button to display the selected image in the normal view.
 (9 images → 4 images → 1 image)

Jump through Images (Jump display)

With the single image display, you can turn the < dial to jump through the images.



lmage jump w/			
1 image	Date		
10 images	Movies		
100 images	Stills		

◀ Select the jump method.

• In the [∑: Image jump w/ △ menu, select the desired jump method from [1 image/10 images/ Date/Movies/Stills], then press < (€) >.





Jump method | Image location

Browse by jumping.

 
- Press the < >> button to playback the image.
- On the single-image display, turn the
 > dial.
- The jump display will proceed according to the selected jump method.
- On the bottom right, the jump method and current image location are indicated.
- To change the jump method, press the < ▲ > key.




- To search images according to the shooting date, select [Date]. During image playback, turn the < > dial to display the shooting date.
- If the card has both [Movies] and [Stills], select either one to display only movies or stills.

You can magnify the image by 1.5x to 10x on the LCD monitor.





Magnified area position

 



Magnify the image.

- During image playback, press the
 Sutton
- ▶ The image will be magnified.
- To increase the magnification, hold down the <
 > button. The image will continue to be magnified until it reaches the maximum magnification.
- Press the < □·Q > button to reduce the magnification. If you hold down the button, the magnification will continue to reduce to the single image display.

Scroll around the image.

- Use the < ♦> key to scroll around the magnified image.
- To exit the magnified display, press the < ►> button and the singleimage display will return.

 


- You can turn the < >> dial to view another image while the magnification is maintained.
- Magnified view is not possible during the image review immediately after the image is taken.
- A movie cannot be magnified.

Rotating the Image

You can rotate the displayed image to the desired orientation.





 Under the [] tab, select [Rotate]. then press < (SET) >.



Select the image.

- Press the < ◀▶> key to select the image to be rotated.
- You can also select an image on the index display.



Rotate the image.

- Each time you press < (str) >, the image will rotate clockwise as follows: $90^{\circ} \rightarrow 270^{\circ} \rightarrow 0^{\circ}$
- To rotate another image, repeat steps 2 and 3.
- To exit and return to the menu, press the <MFNU> button.



- vertical shots, you need not rotate the image as described above.
 - If the rotated image is not displayed in the rotated orientation during image playback, set the [Auto rotate] menu to [On].
 - A movie cannot be rotated.

The Playing Movies



Playback the image.

Press the <▶> button to display the image.





Select a movie.

- Press the <◀▶> key to select the image.
- During the single-image display, the <! > icon displayed on the upper left indicates that it is a movie.
- During the index display, the perforation on the left edge of the image indicates that it is a movie. Movies cannot be played on the index display, so press the <€> button to switch to the singleimage display.



Press < (SET) >.

 
- On the single-image display, press <(SET)>.
- ▶ The movie playback panel will appear on the bottom.



Speaker

Playback the movie.

- Select [▶] (Play), then press <(sī)>.
- The movie will start playing.
- You can pause the movie playback by pressing <(set)>.
- During movie playback, you can adjust the sound volume by turning
- For more details on the playback procedure, see the next page.



Function	Playback Description	
್ರ Exit	Returns to the single-image display.	
► Play	Pressing < (st) > toggles between play and pause.	
I► Slow motion	Adjust the slow motion speed by pressing the < ◀►> key. The slow-motion speed is indicated on the upper right.	
₭ First frame	Displays the movie's first frame.	
II Previous frame	Each time you press $<$ \in r), a single previous frame is displayed. If you hold down $<$ \in r), it will rewind the movie.	
II▶ Next frame	Each time you press <@>>, the movie will play frame-by-frame. If you hold down <@>>, it will fast forward the movie.	
► Last frame	Displays the movie's last frame.	
	Playback position	
mm' ss"	Playback time	
ııll Volume	You can adjust the built-in speaker's (p.17) sound volume by turning the < > > dial.	



- With a fully-charged Battery Pack LP-E5, the continuous playback time will be as follows: At 23°C/73°F: Approx. 2 hr. 30 min.
 - During the single-image display, press the <DISP.> button to switch the shooting information display (p.161).
 - If you took a still photo when you shot the movie, the still photo will be displayed for about 1 sec. during the movie playback.
 - If you connect the camera to a TV set (p.156-157) to playback a movie, adjust the sound volume with the TV set. (Turning the < > dial will not adjust the sound volume.)
 - To edit a movie, use ZoomBrowser EX/ImageBrowser (provided software).

MENU Slide Show (Auto Playback)

You can playback the images in the card as an automatic slide show.



Select [Slide show].

 Under the [∑¹] tab, select [Slide show], then press <(€□)>.



 
Set up

Start

MENU!

Select the images to be played back.

Press the < ▲▼ > key to select the top menu item, then press < (x) >. Press the < ▲▼ > key to select one of the following: [□All images/ □ Stills/ □ Movies/ □ Date]. Then press < (x) >.



The [Select date] screen will appear.
 Press the < ▲▼ > key to select the date, then press < ℘̄ = >.



Function	Playback Description		
□ All images	□ All images All the still photos and movies in the card will be played back		
■ Date Still photos and movies taken on the selected shooting date w be played back.			
™Movies	Only the movies in the card will be played back.		
Stills	Only the still photos in the card will be played back.		



3 Set the play time and repeat option.

- Press the <▲▼> key to select [Set up], then press <
 □>.
- For still photos, set the [Play time] and [Repeat] options, then press the <MENU> button.

[Play time]



[Repeat]





✓ Start the slide show.

- Press the < ▲▼ > key to select [Start], then press < (€T) >.
- ► After [Loading image...] is displayed, the slide show will start.
- To pause the slide show, press <
 ([Ⅱ] displayed on upper left). Press
 <
 (□) again to resume playback.

Quit the slide show.

 To quit the slide show and return to the setting screen, press the <MENU> button.



 
- During auto playback, you can press the <DISP.> button to change the still photo display format.
- During movie playback, you can adjust the sound volume by turning the
- During pause, you can press the <◀▶> key to view another image.
- During the slide show, auto power off will not work.
- The display time may vary depending on the image.
- To view the slide show on a TV set, see page 156-157.

Viewing the Images on TV

You can also view the still photos and movies on a TV set. Before connecting or disconnecting the cable between the camera and television, turn off the camera and television.

- * Adjust the movie's sound volume with the TV set.
- * Depending on the TV set, part of the image displayed might be cut off.

Viewing on Non-HD (High-Definition) TV Sets



∭ AUDIO

 
∭ VIDEO

 
(Black)

Yellow)


Connect the provided AV cable to the camera.

- Connect the AV cable to the camera's
 A/V OUT/DIGITAL > terminal.
- With the plug's <Canon> logo facing the back of the camera, insert it into the <A/V OUT/DIGITAL> terminal.





 Turn on the TV and switch the TV's video input to select the connected terminal.





Press the <►> button.

 
- The image will appear on the TV screen. (Nothing will be displayed on the camera's LCD monitor.)
- To playback movies, see page 152.

 


- 0
- If the video system format does not match the TV's, the images will not be displayed properly. Set the proper video system format with [**V**: Video system].
- Do not use any AV cable other than the one provided. Images might not be displayed if you use a different cable.

Viewing on HD (High-Definition) TV Sets

The HDMI Cable HTC-100 (sold separately) is required.






Connect the HDMI cable to the camera.

- Connect the HDMI cable to the camera's <HDMI OUT > terminal.
- With the plug's < HDMI MINI> logo facing the front of the camera, insert it into the < HDMI OUT> terminal.

Connect the HDMI cable to the TV set.

 - Connect the HDMI cable to the TV's HDMI IN port.
- Turn on the TV and switch the TV's video input to select the connected port.
- 4 Set the camera's power switch to <0N>.



Press the <▶> button.

- The image will appear on the TV screen. (Nothing will be displayed on the camera's LCD monitor.)
- The images will be displayed automatically at the TV's optimum resolution.
- To playback movies, see page 152.



- Do not connect any other device's output to the camera's < HDMI OUT > terminal. Doing so may cause a malfunction.
- Some TVs might not be able to display the captured images. In such a
 case, use the provided AV cable to connect to the TV.
- The camera's < A/V OUT/DIGITAL > terminal and < HDMI OUT > terminal cannot be used at the same time.

Protecting Images

Protecting the image prevents it from being erased accidentally.





Select [Protect images].

- Under the [∑] tab, select [Protect images], then press < (set) >.
- ▶ The protect setting screen will appear.

Select the image and protect it.

- Press the <◀▶> key to select the image to be protected, then press <(SET)>.
- ▶ When an image is protected, the < -> icon will appear on the screen.
- To cancel the image protection, press <(set) > again. The < □ > icon will disappear.
- To protect another image, repeat step 2.
- To exit the image protection, press the <MFNU> button. The menu will reappear.



If you format the card (p.40), the protected images will also be erased.



- Once an image is protected, it cannot be erased by the camera's erase function. To erase a protected image, you must first cancel the protection.
- If you erase all the images (p.160), only the protected images will remain. This is convenient when you want to erase unnecessary images all at once

™ Erasing Images

You can either select and erase images one by one or erase them in one batch. Protected images (p.158) will not be erased.

Once an image is erased, it cannot be recovered. Make sure you no longer need the image before erasing it. To prevent important images from being erased accidentally, protect it. Erasing a WW + 1 L image will erase both the RAW and JPEG images.

Erasing a Single Image

Playback the image to be erased.



Press the <∰> button.

▶ The erase menu will appear at the bottom of the screen.



Erase the image.

 Select [Erase], then press < (st) >. The image displayed will be erased.

MENU Checkmarking <√> Images to be Erased in a Batch

By checkmarking the images to be erased, you can erase multiple images at one time.



¶ Select [Erase images].

Under the [☐'] tab, select [Erase images], then press <(€ET)>.



 
Select [Select and erase images]. Select [Select and erase images].

- then press < (SET) >.
- An image will appear.
- Press the < ■•Q > button to display the three-image view. To return to the single-image display, press the <€> button



Select the images to be erased.

- Select the images to be erased and press the < AV > key.
- ▶ The <√> icon will be displayed on the upper left.
- To erase other images, repeat step 3.



Erase the images.


- Press the < m̄ > button.
- Select [OK], then press <(FT)>.
- ▶ The selected images will be erased.

MENU Erasing All Images in the Card

You can also erase all the images in the card. When the [] Erase images] menu is set to [All images on card], all the images in the card will be erased.

DISP. Shooting Information Display

When you press the <DISP.> button during single-image playback, you can switch the shooting information display. The most detailed shooting information is shown below.

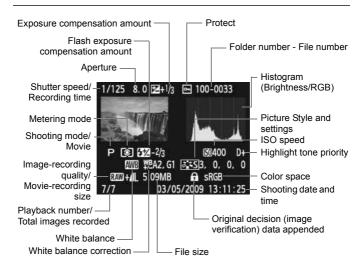

^{*} With RAW + **L** images, the **L** file size is displayed.

About the Highlight Alert

When the shooting information is displayed, any overexposed areas of the image will blink. To obtain more image detail in the overexposed areas, set the exposure compensation to a negative amount and shoot again.

^{*} In the case of movies, the movie icon <'\frac{1}{m} >, file type [MOV], and recording size ([1920], [1280], [640]) will be displayed. The ISO speed and certain other shooting information will not be displayed.

About the Histogram

The brightness histogram display shows the exposure level distribution and overall brightness. The RGB histogram display is for checking the color saturation and gradation. The display can be switched with the [El Histogram] menu.

[Brightness] Display

This histogram is a graph showing the distribution of the image's brightness level. The horizontal axis indicates the brightness level (darker on the left and brighter on the right), while the vertical axis indicates how many pixels exist for each brightness level. The more pixels there are toward the left, the darker the image. And the more pixels there are toward the right, the brighter the image. If there are too many pixels on the left, the shadow detail will be lost. And if there are too many pixels on the right, the highlight detail will be lost. The

Sample Histograms







Bright image

gradation in-between will be reproduced. By checking the image and its brightness histogram, you can see the exposure level inclination and the overall tone reproduction.

[RGB] Display

This histogram is a graph showing the distribution of each primary color's brightness level in the image (RGB or red, green, and blue). The horizontal axis indicates the color's brightness level (darker on the left and brighter on the right), while the vertical axis indicates how many pixels exist for each color brightness level. The more pixels there are toward the left, the darker and less prominent the color. And the more pixels there are toward the right, the brighter and denser the color. If there are too many pixels on the left, the respective color information will be lacking. And if there are too many pixels on the right, the color will be too saturated with no detail. By checking the image's RGB histogram, you can see the color's saturation and gradation condition and white balance inclination.

9

Printing Images and Transferring Images to a Computer

- Printing (p.164)
 You can connect the camera directly to a printer and print out the images in the card. The camera is compatible with "PictBridge" which is the standard for direct printing.
- Digital Print Order Format (DPOF) (p.173)
 DPOF (Digital Print Order Format) enables you to print images recorded in the card according to your printing instructions such as the image selection, quantity to print, etc. You can print multiple images in one batch or give the print order to a photofinisher.
- Transferring Images to a Computer (p.177)
 By connecting the camera to a computer, you can transfer images from the camera's card by operating the camera.

 
Preparing to Print

The direct printing procedure is done entirely with the camera while you look at the LCD monitor.

Connecting the Camera to a Printer




Set the camera's power switch to <0FF>.




 For details, see the printer's instruction manual.

Connect the camera to the printer.

  - Use the interface cable provided with the camera.
- When connecting the cable plug to the camera's < A/V OUT/DIGITAL> terminal, the cable plug's < ← > icon must face the front side of the camera.
- To connect to the printer, refer to the printer's instruction manual.





Set the camera's power switch to <0N>.

Some printers may make a beeping sound.



PictBridge





Playback the image.

- Press the < ►> button.
- ▶ The image will appear, and the icon will appear on the upper left to indicate that the camera is connected to a printer.
- ► The <△~> button lamp will light in blue



- Movies cannot be printed.
 - The camera cannot be used with printers compatible only with CP Direct or Bubble Jet Direct
 - Do not use any interface cable other than the one provided.
 - If there is a long beeping sound in step 5, it indicates a problem with the printer. To find out what's wrong, do the following:
 - 1. Press the < >> button to playback the image.
 - 2. Press < (SET) >.
 - On the print setting screen, select [Print].

The error message will be displayed on the LCD monitor (p.172).



- If you use the battery to power the camera, make sure it is fully charged. With a fully-charged Battery Pack LP-E5, printing up to about 4 hours is possible.
- Before disconnecting the cable, turn off the camera and printer first. Hold the plug (not the cord) to pull out the cable.
- For direct printing, using the AC Adapter Kit ACK-E5 (sold separately) to power the camera is recommended.



The screen display and setting options will differ depending on the printer. Some settings might not be available. For details, see the printer's instruction manual.

 
Printer-connected icon



Select the image to be printed.

- Check that the
 icon is displayed on the upper left of the LCD monitor.
- Press the <◀▶> key to select the image to be printed.
- - ► The print setting screen will appear.

Print setting screen



The paper size, type, and layout you have set are displayed.

* Depending on the printer, settings such as the date and file number imprinting and trimming might not be available.



Select [Paper settings].

- Select [Paper settings], then press <(set)>.
- ▶ The paper settings screen will appear.

☐ Setting the Paper Size



- Select the size of the paper loaded in the printer, then press < (\$\varepsilon \varepsilon \right) >.
- ▶ The paper type screen will appear.

Setting the Paper Type



- Select the type of the paper loaded in the printer, then press < (\$\varepsilon \text{\$\varepsilon} > \text{.}
- When using a Canon printer and Canon paper, read the printer's instruction manual to check what paper types can be used.
- ► The page layout screen will appear.

Setting the Page Layout



- Select the page layout, then press <(sr)>.
- ▶ The print setting screen will reappear.

Bordered	The print will have white borders along the edges.		
Borderless	The print will have no white borders. If your printer cannot print borderless prints, the print will have borders.		
Bordered f	The shooting information* will be imprinted on the border on 9x13cm and larger prints.		
xx-up	Option to print 2, 4, 8, 9, 16, or 20 images on one sheet.		
20-up [] 35-up []	On A4 or Letter size paper, 20 or 35 thumbnails of the images ordered through DPOF (p.173) will be printed. • [20-up] will have the shooting information* imprinted.		
Default	The page layout will vary depending on the printer type or its settings.		

^{*} From the Exif data, the camera name, lens name, shooting mode, shutter speed, aperture, exposure compensation amount, ISO speed, white balance, etc., will be imprinted.



Set the printing effects.

- Set as necessary. If you need not set any printing effects, go to step 5.
- The screen display may differ depending on the printer.
- Select the option on the upper right, then press <(SET)>.
- Select the desired printing effect, then press < (si)>.
- If the <≣> icon is displayed next to < □SP >, you can also adjust the printing effect (p.170).

Function	Description	
⊠On	The image will be printed according to the printer's standard colors. The image's Exif data is used to make automatic corrections.	
™ Off	No automatic correction will be performed.	
⊠Vivid	The image will be printed with higher saturation to produce more vivid blues and greens.	
™NR	The image noise is reduced before printing.	
B/W B/W	Prints in black-and-white with true blacks.	
B/W Cool tone	Prints in black-and-white with cool, bluish blacks.	
B/W Warm tone	Prints in black-and-white with warm, yellowish blacks.	
△ Natural	Prints the image in the actual colors and contrast. No automatic color adjustments will be applied.	
The printing characteristics are the same as the "Natural" setting. However, this setting enables finer printing adjustments than with "Natural."		
The printing will differ depending on the printer. For deta see the printer's instruction manual.		

^{*} When you change the printing effects, it is reflected in the image displayed on the upper left. Note that the printed image might look slightly different from the displayed image which is only an approximation. This also applies to [Brightness] and [Adjust levels] on page 170.



5 Set the date and file number imprinting.

- Set as necessary.
- Select <
 , then press <
- Set as desired, then press < (SET) >.



Set the number of copies.

- Set as necessary.
- Select <□>, then press <(□)>.
- Set the number of copies, then press
 ():1)>.



Start printing.

- Select [Print], then press < (SET) >.
- ► The <△</p>
 A > button's blue lamp will blink and the printing will start.



- With Easy printing, you can print another image with the same settings. Just select the image and press the <⊕</p>
 ✓> button lit in blue. With Easy printing, the number of copies will always be 1. (You cannot set the number of copies.) Also, any trimming (p.171) will not be applied.
- The [Default] setting for printing effects and other options are the printer's own default settings as set by the printer's manufacturer. See the printer's instruction manual to find out what the [Default] settings are.
- Depending on the image's file size and image-recording quality, it may take some time for the printing to start after you select [Print].
- If image tilt correction (p.171) has been applied, it will take longer to print the image.
- To stop the printing, press < (ET) > while [Stop] is displayed, then select [OK].
- If you execute [Clear all camera settings] (p.136), all the settings will
 revert to the default.

Adjustment of Printing Effects



In step 4 on page 168, select the printing effect. When the <=> icon is displayed next to < DISP. >, press the <DISP.> button. You can then adjust the printing effect. What can be adjusted or what is displayed will depend on the selection made in step 4.

 
Brightness

The image brightness can be adjusted.

Adjust levels

When you select [Manual], you can change the histogram's distribution and adjust the image's brightness and contrast.

With the Adjust levels screen displayed, press the <DISP.> button to change the position of the <1>. Press the <◀▶> key to freely adjust the shadow level (0 - 127) or highlight level (128 - 255).



Brightener

Effective in backlit conditions which can make the subject's face look dark. When [On] is set, the face will be brightened for printing.

Red-eye corr.

Effective in flash images where the subject has red eye. When [On] is set, the red eye will be corrected for printing.



- The [★Brightener] and [Red-eye corr.] effects will not show on the screen.
 - When you select [Detail set.], you can adjust the [Contrast], [Saturation], [Color tone], and [Color balance]. To adjust the [Color **balance**], use the < \dash > keys. B is for blue, A is amber, M is magenta, and G is green. The color in the respective direction will be corrected.
 - If you select [Clear all], all the printing effect settings will be reverted to the default.

Trimming the Image

Tilt correction



You can crop the image and print only the trimmed portion as if the image was recomposed. **Do the trimming right before printing.** If you set the trimming and then set the print settings, you may have to set the trimming again.

- 1 On the print setting screen, select [Trimming].
- 2 Set the trimming frame size, position, and aspect ratio.
 - The image area within the trimming frame will be printed. The trimming frame's aspect ratio can be changed with [Paper settings].

Changing the trimming frame size

When you press the $< \mathfrak{Q} >$ or $< \mathbf{E} \cdot \mathfrak{Q} >$ button, the size of the trimming frame will change. The smaller the trimming frame, the larger the image magnification will be for printing.

Moving the trimming frame

Press the < > key to move the frame over the image vertically or horizontally. Move the trimming frame until it covers the desired image area.

Rotating the frame

Each time you press the <DISP.> button, the trimming frame will toggle between the vertical and horizontal orientations. This enables you to create a vertical-oriented print from a horizontal image.

Image tilt correction

By turning the < > dial, you can adjust the image tilt angle up to ± 10 degrees in 0.5-degree increments. When you adjust the image tilt, the < > icon on the screen will turn blue.

- 3 Press <@> to exit the trimming.
 - ▶ The print setting screen will reappear.
 - You can check the trimmed image area on the upper left of the print setting screen.



- Depending on the printer, the trimmed image area might not be printed as you specified.
- The smaller you make the trimming frame, the grainier the picture will look on the print.
- While trimming the image, look at the camera's LCD monitor. If you look at the image on a TV screen, the trimming frame might not be displayed accurately.



Handling Printer Errors

If you resolve a printer error (no ink, no paper, etc.) and select [Continue] to resume printing but it does not resume, operate the buttons on the printer to resume printing. For details, see the printer's instruction manual.

Error Messages

If a problem occurs during printing, an error message will appear on the camera's LCD monitor. Press < (SET) > to stop printing. After fixing the problem, resume printing. For details on how to fix a printing problem, refer to the printer's instruction manual.

Paper Error

Check whether the paper is properly loaded in the printer.

Ink Error

Check the printer's ink level, and check the waste ink tank.

Hardware Error

Check for any printer problems other than paper and ink problems.

 
File Error

The selected image cannot be printed via PictBridge. Images taken with a different camera or images edited with a computer might not be printable.

Digital Print Order Format (DPOF)

You can set the print type, date imprinting, and file No. imprinting. The print settings will be applied to all print-ordered images. (They cannot be set individually for each image.)

Setting the Printing Options



Select [Print order].

▶ Under the [➡] tab, select [Print order], then press < (€F) >.



 
Select [Set up].

Select [Set up], then press < (\$\sum{\subset}\$\sigma>.

Set the option as desired.

- Set the [Print type], [Date], and [File No.].
- Select the option, then press < (SET) >.
 Select the setting, then press < (SET) >.





[Date]



[File No.]



	_			1	
Print type	▣	Standard		Prints one image on one sheet.	
		Index		Multiple, thumbnail images are printed on one sheet.	
		Bot	th	Prints both the standard and index prints.	
Date	0	n	[On] i	mprints the recorded date on the print.	
	Ó	ff	[On] implifies the recorded date on the print.		
File number	0	n	[On] i	mprints the file No. on the print.	
	0	ff	On implication and two of the print.		



Exit the setting.

- Press the <MFNU> button.
- ► The print order screen will reappear.
- Next, select [Sel.Image] or [All image to order the images to be printed.



- Even if [Date] and [File No.] are set to [On], the date or file No. might not be imprinted depending on the print type setting and printer model.
 - When printing with DPOF, you must use the card whose print order specifications have been set. It will not work if you just extract images from the card and try to print them.
 - Certain DPOF-compatible printers and photofinishers might not be able to print the images as you specified. If this happens with your printer. refer to the printer's instruction manual. Or check with your photofinisher about compatibility when ordering prints.
 - Do not insert into the camera a card whose print order was set by a different camera and then try to specify a print order. The print order may not work or may be overwritten. Also, depending on the image type, the print order may not be possible.



- RAW images and movies cannot be print ordered.
 - With [Index] prints, both the [Date] and [File No.] cannot be set to [On] at the same time.

Print Ordering

Sel.Image







Select and order images one by one. Press the < ■• Q > button to display the three-image view. To return to the singleimage display, press the <€> button. After completing the print order, press the <MENU> button to save the print order to the card

[Standard] [Both]

Press the < **T** > key to set the number of copies to be printed for the displayed image.

[Index]

Press the < **T** > key to checkmark the box $\langle \sqrt{} \rangle$ and the image will be included in the index print.

All image

If you select [Mark all on card], one copy of all the images in the card will be set for printing. If you select [Clear all on card], the print order will be cleared for all the images in the card.



- If you select "All image", RAW images and movies will not be included in the print order.
 - When using a PictBridge printer, print no more than 400 images for one print order. If you specify more than this, all the images might not be printed.

Direct Printing with DPOF



With a PictBridge printer, you can easily print images with DPOF.

1 Preparing to print.

- See page 164. Follow the "Connecting the Camera to a Printer" procedure up to step 5.
- 2 Under the [∑] tab, select [Print order].
- 3 Select [Print].
 - [Print] will be displayed only if the camera is connected to the printer and printing is possible.
- 4 Set the [Paper settings]. (p.166)
 - Set the printing effects (p.168) if necessary.
- 5 Select [OK].



- Before printing, be sure to set the paper size.
 - Certain printers cannot imprint the file No.
 - If [Bordered] is set, the date might be imprinted on the border, depending on the printer.
 - . Depending on the printer, the date might look light if it is imprinted on a bright background or on the border.



- Under [Adjust levels], [Manual] cannot be selected.
 - If you stopped the printing and want to resume printing the remaining images, select [Resume]. Note that printing will not resume if you stop the printing and any of the following occurs:
 - · Before resuming the printing, you changed the print order or deleted print-ordered images.
 - · When you set the index, you changed the paper setting before resuming the printing.
 - · When you paused the printing, the card's remaining capacity was low.
 - If a problem occurs during printing, see page 172.

Transferring Images to a Computer 1

By connecting the camera to a computer, you can transfer images from the camera's card by operating the camera. This is called direct image transfer.

Before connecting the camera to a computer, be sure to install the provided software (EOS DIGITAL Solution Disk on CD-ROM) in the computer.

For instructions to install the provided software, see the separate sheet, CD-ROM Guide.

Preparation for Image Transfer

 


 
Set the camera's power switch to <OFF>.

 
Set the shooting mode to any mode except < ™.

 


Connect the camera to the computer.



 












- When the program selection dialog window appears on the computer, select [EOS Utility].
- ► The [EOS Utility] window will appear on the computer, and the direct image transfer screen will appear on the camera's LCD monitor.



- If the [EOS Utility] window does not appear automatically, startup EOS Utility manually.
 - Before disconnecting the cable, turn off the camera. Pull out the cable by grasping the plug (instead of the cord).

Transferring Images to a Computer

The images sent to the computer will be saved in the [My Pictures] folder or [Pictures] folder in subfolders organized according to the shooting date.

All images



This is to transfer all the images in the card to the computer.

- Select [All Images], then press the <⊩Di~> button.
- ► The <△→> button's blue lamp will blink and the image transfer will start.
- ▶ When the image transfer is completed, the lamp will stay on.



- Since movie files are larger than still photo files, they will take longer to transfer
- During the file transfer, do not disconnect the cable.
- Shooting will be disabled while the direct transfer screen is displayed.

Options other than [All images] are explained below. To start the image transfer, press the $\langle \triangle \omega \rangle$ button.

New images

Images which have not yet been transferred to the computer will be selected by the camera automatically and transferred.

Transfer order images

You select the images and they are transferred to the computer in a batch. To select the images, see page 180.

Select & transfer



You select the images to be transferred individually. To exit, press the <MENU> button.

Wallpaper

The image you select and transfer will appear as the computer's wallpaper. To exit, press the <MENU> button.



- If you press <(♠)> instead of the <△</p>
 →> button, a confirmation dialog will appear. Select [OK], then press < (FT) > to start the transfer.
 - RAW images and movies cannot be transferred as wallpaper.

MENU Selecting the Images to be Transferred



Under the [☐] tab, you can use [Transfer order] to select the images to be transferred to a computer. When you select [Transfer order images] on page 179, you can transfer the images set by the transfer order.

Sel.Image



Select and order images one by one. Press the < **T** > key to include the displayed image in the transfer order. The $\langle \sqrt{\rangle}$ mark will also appear on the upper left.

After completing the transfer order, press the <MFNU> button to save the transfer order to the card

All image

If you select [Mark all on card], all the images in the card will be in the transfer order. If you select [Clear all on card], the transfer order will be cleared for all the images in the card.



Do not put into the camera any images whose transfer order was set by a different camera and then try to specify another transfer order. The images in the transfer order might all be overwritten. Also, depending on the image type, the transfer order may not be possible.



- For the transfer order, if you select an image captured in the RAW + △ L mode, it will be counted as one image. During the direct image transfer, both the RAW and JPEG images will be transferred to the computer.
- If you want to transfer more than 999 images in one batch, select [All images] on the direct transfer screen (p.178).

10

Customizing the Camera

You can customize various camera features to suit your picture-taking preferences. You can do it with Custom Functions. Custom Functions can be set and used only in Creative Zone modes.



MENU Setting Custom Functions ★



 
Select [Custom Functions (C.Fn)].

 Under the [♥:] tab, select [Custom Functions (C.Fn)], then press <(set)>.



Select the Custom Function number.

 Press the <◀▶> key to select the Custom Function No., then press <(€)>.



Change the setting as desired.

- Press the <▲▼> key to select the setting (number), then press <(st)>.
- Repeat steps 2 and 3 if you want to set other Custom Functions.
- At the bottom of the screen, the current Custom Function settings are indicated below the respective function numbers.
- Exit the setting.
 - Press the <MENU> button.
 - ▶ The screen for step 1 will reappear.

Clearing All Custom Functions

On the [**f**: Clear settings] menu, select [Clear all Custom Func. (C.Fn)] to clear all the Custom Function settings (p.136).

Custom Functions

C.Fn I: Exposure

	•	
1	Exposure level increments	
2	ISO expansion	p.184
3	Flash sync. speed in Av mode	

LV shooting	Movie shooting
0	
0	
0	

C.Fn II: Image

4	Long exposure noise reduction	p.185
5	High ISO speed noise reduction	p. 100
6	Highlight tone priority	p.186
7	Auto Lighting Optimizer	p. 100

0	
0	
0	
0	(0 works)

C.Fn III: Autofocus/Drive

8	AF-assist beam firing	p.187
9	Mirror lockup	p. 107



C.Fn IV: Operation/Others

10	Shutter/AE lock button	p.188
11	Assign SET button	p. 100
12	LCD display when power ON	p.189
13	Add original decision data	p. 103

(1 works)							
(0 works)							
0							
0							

The shaded Custom Functions do not function during Live View (Live View shooting) and/or movie shooting. (Settings are disabled.)

MENU Custom Function Settings ★

Custom Functions are organized into four groups based on the function type: C.Fn I: Exposure, C.Fn II: Image, C.Fn III: Auto focus/Drive, C.Fn IV: Operation/Others.

C.Fn I: Exposure

Exposure level increments C.Fn-1

0: 1/3-stop

1: 1/2-stop

Sets 1/2-stop increments for the shutter speed, aperture, exposure compensation. AEB, flash exposure compensation, etc. Effective when you prefer to control the exposure in less fine increments than 1/3-stop increments.



The exposure level will be displayed in the viewfinder and on the LCD monitor as shown below.



ISO expansion C.Fn-2

0: Off

1: On

Enables ISO 6400 and H (equivalent to ISO 12800) to be set.

C.Fn-3 Flash sync. speed in Av (Aperture-priority AE) mode

0: Auto

The flash sync speed is set automatically within a range of 1/200 sec. to 30 sec. to suit the scene's brightness.

1: 1/200-1/60 sec. auto

When flash is used with aperture-priority AE (Av), this prevents a slow flash-sync speed from being set automatically in low-light conditions. It is effective for preventing subject blur and camera shake. However, while the subject will be properly exposed with the flash, the background will come out dark.

2: 1/200 sec. (fixed)

The flash-sync speed is fixed to 1/200 sec. This more effectively prevents subject blur and camera shake than with setting 1. However, the background will come out darker than with setting 1.

C.Fn II: Image

C.Fn-4 Long exposure noise reduction

0: Off

1: Auto

For 1 sec. or longer exposures, noise reduction is performed automatically if noise typical of long exposures is detected. This [Auto] setting is effective in most cases.

2: On

Noise reduction is performed for all exposures of 1 sec. or longer. The [On] setting may be effective for noise that cannot be detected or reduced with the [Auto] setting.



- After the picture is taken, the noise reduction process may take the same amount of time as the exposure. You cannot take another picture until the noise reduction process is completed.
 - At ISO 1600 and higher, noise might be more pronounced at the 2 setting than at the 0 or 1 setting.
 - With setting 2, if a long exposure is used during Live View shooting, "BUSY" will be displayed and the Live View display will not appear untill the noise reduction process is completed. (You cannot take another picture.)

High ISO speed noise reduction C.Fn-5

Reduces the noise generated in the image. Although noise reduction is applied at all ISO speeds, it is particularly effective at high ISO speeds. At low ISO speeds, the noise in the shadow areas is further reduced. Change the setting to suit the noise level.

- 0: Standard
- 1: Low
- 2: Strong
- 3: Disable



With setting 2, the maximum burst for continuous shooting will decrease.

C.Fn-6 Highlight tone priority

0. Disable

1: Enable

Improves the highlight detail. The dynamic range is expanded from the standard 18% gray to bright highlights. The gradation between the grays and highlights becomes smoother.



With setting 1, noise in the shadow areas may be slightly more than usual.



With setting 1, the settable ISO speed range will be 200 - 3200. Also, the <D+> icon will be displayed on the LCD monitor and in the viewfinder when highlight tone priority is enabled.

C.Fn-7 **Auto Lighting Optimizer**

If the images comes out dark or the contrast is low, the brightness and contrast are corrected automatically.

The settings made with the camera can be reflected in RAW images when the images are processed with Digital Photo Professional (provided software).

0: Standard

1: Low

2: Strong

3: Disable









- Depending on the shooting conditions, noise might increase.
- This function will not work if manual exposure or bulb exposure has been set



In the Basic Zone modes, [Standard] is set automatically.

C.Fn III: Autofocus/Drive

C.Fn-8 AF-assist beam firing

The AF-assist beam can be emitted by the camera's built-in flash or by the external, EOS-dedicated Speedlite.

0: Enable

1: Disable

The AF-assist beam is not emitted.

2: Only external flash emits

If an external, EOS-dedicated Speedlite is attached, it will emit the AFassist beam when necessary. The camera's built-in flash will not fire the AF-assist beam



If the external, EOS-dedicated Speedlite's [AF-assist beam firing] Custom Function is set to [Disabled], the Speedlite will not emit the AF-assist beam even if the camera's C.Fn-8-0/2 is set.

C.Fn-9 Mirror lockup

0: Disable

1: Enable

Prevents camera vibrations caused by the reflex mirror action which can disturb shooting with super telephoto lenses or close-up (macro) shooting. See page 104 for the mirror lockup procedure.

C.Fn IV: Operation/Others

C.Fn-10 Shutter/AE lock button

0: AF/AE lock

1: AE lock/AF

Convenient when you want to focus and meter separately. Press the <★> button to autofocus and press the shutter button halfway to perform AE lock.

2: AF/AF lock, no AE lock

In the AI Servo AF mode, you can press the < *> button to stop the AF operation momentarily. This prevents the AF from being thrown off by any obstacle passing between the camera and subject. The exposure is set at the moment the picture is taken.

3: AE/AF, no AE lock

This is useful for subjects which keep moving and stopping repeatedly. In the AI Servo AF mode, you can press the < ★> button to start or stop the AI Servo AF operation. The exposure is set at the moment the picture is taken. Thus, the optimum focusing and exposure will always be achieved as you wait for the decisive moment.

C.Fn-11 Assign SET button

You can assign a frequently-used function to $\langle \mathfrak{m} \rangle$. When the camera is ready to shoot, you can press $\langle \mathfrak{m} \rangle$.

0: Quick Control screen

When you press <<p>
⟨<p⟩, the Quick Control screen will appear. Press the <<p>
⟨<p⟩ key to select the desired function, then turn the <<p>
⟨ dial to set it.

1: Image quality

Press <(xi)> to display the image-recording quality setting screen on the LCD monitor

Press the <♦> key to select the image-recording quality, then press <(set)>.

2: Flash exposure compensation

When you press < (sr) >, the flash exposure compensation setting screen will appear.

3: LCD monitor On/Off

Assigns the same function as the <DISP.> button.

4: Menu display

Assigns the same function as the <MENU> button.

5: Disabled

C.Fn-12 LCD display when power ON

0: Display

When the power switch is turned on, the shooting settings will be displayed (p.42).

1: Retain power OFF status

If you pressed the <DISP.> button and turned off the camera while the LCD monitor was off, the shooting settings will not be displayed when you turn on the camera again. This helps to save battery power. The menu screens and image playback will still be displayed when used. If you pressed the <DISP,> button and turned off the camera while the LCD monitor was on, the shooting settings will be displayed when you turn on the camera again.

C.Fn-13 Add original decision data

0: Off

1: On

Data for verifying whether the image is original or not is appended to the image automatically. When the shooting information of an image appended with the verification data is displayed (p.161), the < 1 > icon will appear.

 
To verify whether the image is original, the Original Data Security Kit OSK-E3 (sold separately) is required.



The images are not compatible with the image encryption/decryption features of Original Data Security Kit OSK-E3.


MENU Registering My Menu*

Under the My Menu tab, you can register up to six menu options and Custom Functions whose settings you change frequently.





  Under the [★] tab, select [My Menu settings], then press <(set)>.



My menu registered item

Release shutter without card

Peripheral Illumin, correct.

Quality Beep

Review time

Red-eye On/Off

Select [Register].

• Select [Register], then press < (SET) >.



Register the desired items.

- Select the item, then press < (SET) >.
- On the confirmation dialog, select [OK] and press <
 <i>> to register the menu item.
- You can register up to six items in My Menu.
- To return to the screen in step 2, press the <MENU> button.

About My Menu settings

Sort

You can change the order of the registered menu items in My Menu. Select [Sort] and select the menu item whose order you want to change. Then press <€)>. With [♠] displayed, press the <▲▼> key to change the order, then press <€)>.

Delete / Delete all items

Deletes the registered menu items. [**Delete**] deletes one menu item at a time, and [**Delete all items**] deletes all menu items.

Display from My Menu
 When [Enable] is set, the [★] tab will be displayed first when you display the menu screen.

11

Reference

This chapter provides reference information for camera features, system accessories, etc. The back of this chapter also has an index to make it easier to look up needed information.

When Autofocus Fails

Autofocus can fail to achieve focus (the focus confirmation light < >> blinks) with certain subjects such as the following:

Subjects difficult to focus

- Low-contrast subjects
 - (Example: Blue sky, solid-color walls, etc.)
- Subjects in low light
- Extremely backlit or reflective subjects (Example: Car with a reflective body, etc.)
- Near and far subjects covered by an AF point (Example: Animal in a cage, etc.)
- Repetitive patterns (Example: Skyscraper windows, computer keyboards, etc.)

In such cases, do one of the following:

 
- (1) With One-Shot AF, focus an object at the same distance as the subject and lock the focus before recomposing (p.46).
- (2) Set the lens focus mode switch to <MF> and focus manually.



- If an Extender (sold separately) is attached and the maximum aperture of the lens is f/5.6 or smaller (larger f/number), AF will not be possible (except Live mode/¿ Live mode AF). For details, see the Extender's instruction manual.
- For the situations where AF can fail to achieve focus with Live mode/'L'
 Live mode AF, see page 115.


Using a Household Power Outlet

With AC Adapter Kit ACK-E5 (sold separately), you can connect the camera to a household power outlet and not worry about the battery level




1 Connect the power cord.

 - Connect the power cord as shown in the illustration.
- After using the camera, unplug the power plug from the power outlet.




Connect the DC Coupler.

  Connect the cord's plug to the DC Coupler.



Insert the DC Coupler.

  Open the cover and insert the DC Coupler until it locks in place.



Push in the DC cord.

 
- Open the DC cord hole cover and install the cord as shown.
- Close the cover.

Do not connect or disconnect the power cord while the camera's power switch is set to < ON >.

Remote Control Shooting

Remote Controller RC-1/RC-5 (Sold separately)

Remote controllers to shoot wirelessly up to about 5 meters/16.4 feet from the camera. The RC-1 can trip the shutter immediately or after a 2sec. delay, and the RC-5 trips the shutter after a 2-sec. delay.



- Set the drive mode to <ỗ; > (p.55).
- Point the remote controller toward the camera's remote control sensor and press the transmit button.
- ▶ The camera will autofocus
- ▶ When focus is achieved, the self-timer lamp will light and the picture will be taken



Camera misoperation may occur near certain types of fluorescent lights. During wireless remote control, try to keep the camera away from fluorescent light.

Remote Switch RS-60E3 (Sold separately)

Remote switch with a 60 cm/2.0 feet cord for pressing the shutter button halfway or completely. It connects to the camera's remote control terminal.





Using the Eyepiece Cover

 
If you take a picture without looking at the viewfinder, light entering the eyepiece can throw off the exposure. To prevent this, use the eyepiece cover (p.23) attached to the camera strap.

During Live View shooting and movie shooting, attaching the eyepiece cover is unnecessary.



1 Remove the eyecup.

 Push the bottom of the eyecup upward.



Attaching the eyepiece cover.

 Slide the eyepiece cover down into the eyepiece groove to attach it.

External Speedlites

EOS-dedicated, EX-series Speedlites

Basically operates like a built-in flash for easy operation.

When an EX-series Speedlite (sold separately) is attached to the camera, almost all the autoflash control is done by the camera. In other words, it is like a high-output flash attached externally in place of the built-in flash.

For detailed instructions, see the EX-series Speedlite's instruction manual. This camera is a Type-A camera that can use all the features of EX-series Speedlites.



Shoe-mount Speedlites



Macro Lites



- With an EX-series Speedlite not controllable by the camera, only [Flash exp. comp] and [E-TTL II] can be settable for [External flash func. setting] (p.139).
 - (Certain EX-series Speedlites also enable [Shutter sync.] to be set.)
- If flash exposure compensation is set with the external Speedlite, the flash exposure compensation icon displayed on the camera's LCD monitor will change from 62 to 632.
- When the flash metering mode is set to TTL autoflash with the flash's Custom Function, the flash will fire at full output only.

Canon Speedlites other than the EX-series

- With an EZ/E/EG/ML/TL-series Speedlite set in TTL or A-TTL autoflash mode, the flash can be fired at full output only. Set the camera's shooting mode to <**M**> (manual exposure) or < Av > (aperture-priority AE) and adjust the aperture setting before shooting.
- When using a Speedlite which has manual flash mode, shoot in the manual flash mode.

Using Non-Canon Flash Units

Sync Speed

The camera can synchronize with compact, non-Canon flash units at 1/ 200 sec. or slower. Be sure to test the flash unit beforehand to make sure it synchronizes properly with the camera.

Cautions for Live View shooting

A non-Canon flash will not fire during Live View shooting.



- If the camera is used with a flash unit or flash accessory dedicated to another camera brand, the camera may not operate properly and malfunction may result.
 - Do not attach a high-voltage flash unit on the camera's hot shoe. It might not fire.

Function Availability Table

●: Set automatically ○: User selectable ☐ : Not selectable

											Crea	Movie shooting				
Mode Dial				Ą	*	*	包	S	E	CA	Р	Τv	Αv	М	A-DEP	' \
۵	JPEG		0	0	0	0	0	0	0	0	0	0	0	0	0	0
Quality	RAW		0	0	0	0	0	0	0	0	0	0	0	0	0	0
`	RAW +	4 L	0	0	0	0	0	0	0	0	0	0	0	0	0	0
ISO speed	Auto		•	•	•	•	•	•	•	•	0	0	0	0	0	•
ed	Manual										0	0	0	0	0	
	Standar	d	•			•	•	•	•	0	0	0	0	0	0	0
	Portrait			•						0	0	0	0	0	0	0
Picture Style	Landsca	ре			•					0	0	0	0	0	0	0
ure (Neutral										0	0	0	0	0	0
ityle	Faithful										0	0	0	0	0	0
	Monochi	rome								0	0	0	0	0	0	0
	User De	fined									0	0	0	0	0	0
	Auto WE	3	•	•	•	•	•	•	•	•	0	0	0	0	0	0
White balance	Preset V	VB									0	0	0	0	0	0
e ba	Custom	WB									0	0	0	0	0	0
lanc	WB corr	ection									0	0	0	0	0	
ĕ	WB brac	keting									0	0	0	0	0	
Auto L	ighting O	ptimizer	•	•	•	•	•	•	•	•	0	0	0		0	•
Periph	eral illumin tion	ation	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Long exposure noise reduction		oise	•	•	•	•	•	•	•	•	0	0	0	0	0	•
	One-Sho	ot		•	•	•		•			0	0	0	0	•	•
	Al Servo)					•				0	0	0	0		
AF	Al Focus	3	•						•	•	0	0	0	0		
AF	AF	Auto	•	•	•	•	•	•	•	•	0	0	0	0	•	0
	point selection	Manual									0	0	0	0		0
	AF-assis	t beam	•	•		•		•		•	0	0	0	0	0	

: Set automatically	O: User selectable	: Not selectable
---------------------	--------------------	------------------

	Mode Dial			В	asic	Zon	е		Creative Zone					Movie shooting	
		ą	*	*	×	ß.	E	CA	Р	Τv	Αv	М	A-DEP	' ,,	
_	Evaluative	•	•	•	•	•	•	•	•	0	0	0	0	0	
Metering mode	Partial									0	0	0	0	0	
ring	Spot									0	0	0	0	0	
	Center-weighted average									0	0	0	0	0	
	Program shift								0*1	0					
ᅏ	Exposure compensation								0*2	0	0	0		0	0
Exposure	AEB									0	0	0	0	0	
Fe	AE lock									0	0	0		0	
	Depth-of-field preview									0	0	0	0	0	
	Single	•		•	•		•	•	0	0	0	0	0	0	•
_	Continuous		•			•			0	0	0	0	0	0	
Drive	Self-timer/ Remote control	0	0	0	0	0	0	0	0	0	0	0	0	0	O*3
	Self-timer:2 sec									0	0	0	0	0	
	Self-timer:Continuous	0	0	0	0	0	0	0	0	0	0	0	0	0	
	Auto	•	•		•		•		0						
Б	Manual								0	0	0	0	0	0	
Built-in flash	Flash off			•		•		•	0						•
n fla	Red-eye reduction	0	0		0		0		0	0	0	0	0	0	
sh	FE lock									0	0	0	0	0	
	Flash exposure compensation								O*2	0	0	0	0	0	
Color space	sRGB	•	•	•	•	•	•	•	•	0	0	0	0	0	•
lor ace	Adobe RGB									0	0	0	0	0	
Live V	/iew shooting									0	0	0	0	0	•

^{*1:} Refers to "(2) Blurring/sharpening the background" function on page 54.

^{*2:} Refers to "(3) Adjusting the picture brightness" function on page 54.

^{*3:} On the movie shooting mode menu, [Remote control] can be set.

Menu Settings

☐ Shooting 1 (Red)

Page

Quality	4 L / 4 L / 4 M / 4 M / 4 S / 4 S / RAW + 4 L / RAW	70			
Веер	On / Off	130			
Release shutter without card	Enable / Disable				
Review time	Off / 2 sec. / 4 sec. / 8 sec. / Hold				
Peripheral illumination correction	Enable / Disable				
Red-eye On/Off	Off / On	63			
Flash control	Flash firing / Built-in flash function setting / External flash function setting / External flash C.Fn setting / Clear external flash C.Fn setting	139			

☐: Shooting 2 (Red)

Exposure compensation/AEB	1/3-stop increments, ±2 stops	86
Metering mode	® / © / □ / □	83
Custom WB	Manual setting of white balance	96
WB SHIFT/BKT	WB correction: White balance correction WB-BKT: White balance bracketing	98 99
Color space	sRGB / Adobe RGB	93
Picture Style	Standard / FFP Portrait / FFF Landscape / FFFF Handscape / FFFFF Landscape / FFFF Landscape / FFFFF Landscape / FFFFF Landscape / FFFFFFFFF Landscape / FFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFF	73 88 91
Dust Delete Data	Obtains data to be used to erase dust spots	143

□ Playback 1 (Blue)

Protect images	Erase-protect images	158
Rotate	Rotate vertical images	151
Erase images	Erase images	159
Print order	Specifies images to be printed (DPOF)	173
Transfer order	Select images to be transferred to a computer	180



- The [a*] Shooting 2, [¥*] Set-up 3, and [★] My Menu screens (tabs) are not displayed in Basic Zone modes.
 - Shaded menu items are not displayed in Basic Zone modes.

⊡: Playback 2 (Blue)

Page

Histogram	Brightness / RGB	162
Slide show	Select the images, set the Play time and repeat settings for automatic playback	154
Image jump w/ 🕮	1 image / 10 images / 100 images / Date / Movies / Stills	149

Y Set-up 1 (Yellow)

• ` '		
Auto power off	30 sec. / 1min. / 2 min. / 4 min. / 8 min. / 15 min. / Off	131
File numbering	Continuous / Auto reset / Manual reset	132
Auto rotate	On 🗖 🖳 / On 🖳 / Off	134
Format	Initialize and erase data in the card	40
LCD auto off	Enable / Disable	138
Screen color	Select the background color	138

¥: Set-up 2 (Yellow)

LCD brightness	Seven brightness levels provided	131
Date/Time	Set the date (year, month, day) and time (hour, min., sec.)	29
Language 🗐	Select the interface language	30
Video system	NTSC / PAL	156
	Auto cleaning: Enable / Disable	142
Sensor cleaning	Clean now	
	Clean manually	145
Live View function settings	Live View shooting / AF mode / Grid display / Metering timer	106

¥: Set-up 3 (Yellow)

Custom Functions (C.Fn)	Customize the camera as desired	182
Clear settings	Clear all camera settings / Clear all Custom Func. (C.Fn) / Delete copyright information	136
Firmware Ver.	For updating the firmware	-

★ My Menu (Green)

My Menu settings	Register frequently-used menu items and Custom Functions	190

Movie Shooting Mode Menu

Movie (Red)

Page

Grid display	Off / Grid 1## / Grid 2###	124
Metering timer	4 sec. / 16 sec. / 30 sec. / 1 min. / 10 min. / 30 min.	124
Movie recording size	1920x1080 / 1280x720 / 640x480	123
AF mode	Live mode / 🖰 Live mode / Quick mode	123
Sound recording	On / Off	124
Remote control	Disable / Enable	124



About the menu screen during the movie shooting mode

- The [] screen (tab) is displayed only when the movie shooting mode is set
- The [¥:] Set-up 3 and [★] My Menu screens (tabs) will not be displayed.
- Under the [a:] tab, the [Expo. comp./AEB] item will become [Exposure comp.].
- The following menu items will not be displayed:
 - [at]: Red-eye On/Off, Flash control
 - []: Metering mode, WB SHIFT/BKT, Color space, Dust Delete Data
 - [4"]: LCD auto off. Screen color
 - [4:]: Sensor cleaning, Live View function settings

Troubleshooting Guide

If a problem occurs, first refer to this Troubleshooting Guide. If this Troubleshooting Guide does not resolve the problem, contact your dealer or nearest Canon Service Center.

Power-Related Problems

The battery cannot be recharged with the battery charger provided.

 Do not recharge any battery pack other than genuine Canon Battery Pack LP-E5.

The camera does not operate even when the power switch is set to <0N>.

- The battery is not properly installed in the camera (p.26).
- Recharge the battery (p.24).
- Make sure the battery compartment cover is closed (p.26).
- Make sure the card slot cover is closed (p.31).
- Press the <DISP.> button (p.42).

The access lamp still blinks even when the power switch is set to <OFF>.

 If the power is cut off while an image is being recorded to the card, the access lamp will light/blink for a few sec. When the image recording is completed, the power will turn off automatically.

The battery becomes exhausted quickly.

- Use a fully-charged battery (p.24).
- The rechargeable battery will degrade after repeated use. Purchase a new one.
- If you use Live View shooting or shoot movies for a prolonged period (p.105, 121), the number of possible shots will decrease.

The camera turns off by itself.

- Auto power off is in effect. If you do not want auto power off to take effect, set [Y Auto power off] to [Off].
- Even if [Y Auto power off] has been set to [Off], the LCD monitor will still turn off after the camera is idle for 30 min. Press the <DISP.> button to turn on the LCD monitor

Shooting-Related Problems

No images can be shot or recorded.

- The card is not properly inserted (p.31).
- If the card is full, replace the card or delete unnecessary images to make room (p.31, 159).
- If you try to focus in One-Shot AF mode while the focus confirmation light < ● > in the viewfinder blinks, a picture cannot be taken. Press the shutter button halfway again to focus, or focus manually (p.37, 67).
- Slide the card's write-protect switch to the Write/Erase setting (p.31).

The image is out of focus.

- Set the lens focus mode switch to <AF> (p.33).
- To prevent camera shake, hold the camera still and press the shutter button gently (p.36, 37).
- If the lens has an Image Stabilizer, set the IS switch to < 0N>.

The card cannot be used.

If a card error message is displayed, see page 40 or 209.

The maximum burst during continuous shooting is lower.

- Set the [Y: Custom Functions (C.Fn)] menu's [High ISO speed noise reduction] to [Standard], [Low], or [Disable]. If it is set to [Strong], the maximum burst during continuous shooting will decrease (p.185).
- If you shoot a subject which has fine detail (field of grass, etc.), the file size will be larger and the actual maximum burst will be lower than the number mentioned on page 70.

ISO 100 cannot be set.

 Under the [Y: Custom Functions (C.Fn)] menu, if [Highlight tone priority] is set to [Enable], ISO 100 cannot be set. When [Disable] is set, ISO 100 can be set (p.186).

When I use the <Av> mode with flash, the shutter speed becomes slow.

• If you shoot night scenes, the shutter speed becomes slow automatically (slow-sync shooting) so that both the subject and background are properly exposed. If you do not want a slow shutter speed to be set, set the [Y: Custom Functions (C.Fn)] menu's [Flash sync. speed in Av mode] to 1 or 2 (p.184).

The built-in flash does not fire.

 If you shoot continuously with the built-in flash at short intervals, the flash might stop operating to protect the flash unit.

The camera makes a noise when it is shaken.

The built-in flash's pop-up mechanism moves slightly. This is normal.

The shutter makes two shooting sounds during Live View shooting.

 If you use flash or if ISO 3200 or higher is set, the shutter will make two sounds each time you shoot (p.107).

The movie shooting terminates by itself.

- If the card's writing speed is slow, movie shooting may stop automatically. Use an SD Speed Class 6 "CLASS®" or faster card. To find out the card's read/write speed, see the card manufacturer's Web site
- If the movie file size reaches 4 GB or if the movie recording time reaches 29 min. 59 sec., movie shooting will stop automatically.

The 1920x1080 movie looks distorted.

 When shooting movies at 1920x1080 with this camera, only 20 frames are recorded per second (20 fps). Therefore, if there is fast movement in the movie scene, the picture might look distorted. This distortion will be resolved if you shoot at the 1280x720 recording size (p.123).

When the movie is played, camera operation noise can be heard.

 If you operate the camera's dial or lens during movie shooting, the respective operation noise will also be recorded (p.127).

Display & Operation Problems

The LCD monitor does not display a clear image.

- If dust is adhering to the LCD monitor, wipe its surface with a lens cloth or soft cloth.
- In low or high temperatures, the LCD monitor display may seem slow or might look black. It will return to normal at room temperature.

Few tabs and options are displayed on the menu screen.

 In the Basic Zone modes and movie shooting mode, certain tabs and menu options are not displayed. Set the shooting mode to a Creative Zone mode (p.38).

The image cannot be erased.

If the image has been protected, it cannot be erased (p.158).

The file name's first character is an underscore ("_MG_").

 Set the color space to sRGB. If Adobe RGB is set, the first character will be an underscore (p.93).

The file numbering does not start from 0001.

 If you use a card which already has images recorded, the file numbering might start from the last image in the card (p.132).

The shooting date and time displayed is incorrect.

The correct date and time has not been set (p.29).

No image appears on the TV screen.

- Make sure the AV cable or HDMI cable's plug is connected all the way in (p.156, 157).
- Set the video OUT format (NTSC/PAL) to the same video format as the TV (p.201).
- Use the AV cable that came with the camera (p.156).

Printing-Related Problems

There are fewer printing effects than listed in the instruction manual.

What the screen will display may differ depending on the printer. This
instruction manual lists all the printing effects available (p.168).

Error Codes




If there is a problem with the camera, an error message will appear. Follow the onscreen instructions.


Countermeasures

No.	Error Message & Solution
01	Communications between the camera and lens is faulty. Clean the lens contacts.
	→ Clean the electrical contacts on the camera and lens and use a Canon lens. (p.13, 16)
02	Card cannot be accessed. Reinsert/change card or format card with camera.
02	Remove and install the card again, replace the card, or format the card (p.31, 40).
	Cannot save images because card is full. Replace card.
04	→ Replace the card, erase unnecessary images, or format the card (p.31, 159, 40).
05	The built-in flash could not be raised. Turn the camera off and on again.
	→ Power switch operation (p.27).
06	Sensor cleaning is not possible. Turn the camera off and on again.
06	→ Power switch operation (p.27).
10, 20, 30, 40, 50, 60, 70, 80	Shooting is not possible due to an error. Turn the camera off and on again.
	→ Operate the power switch, remove and install the battery again, or use a Canon lens (p.27, 26).

^{*} If the error still persists, write down the error No. and contact your nearest Canon Service Center.

System Map

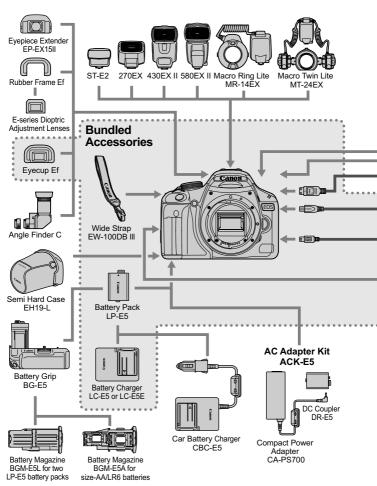

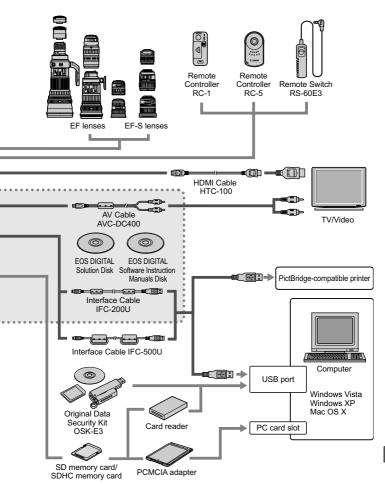

Specifications

Type

Type: Digital, single-lens reflex, AF/AE camera with built-in flash

Recording media: SD memory card, SDHC memory card

Image sensor size: 22.3 x 14.9 mm

Compatible lenses: Canon EF lenses (including EF-S lenses)

(35mm-equivalent focal length is approx.1.6 times the

lens focal length)

Lens mount: Canon EF mount

Image Sensor

Type: CMOS sensor

Effective pixels: Approx. 15.10 megapixels

Aspect ratio: 3:2

Dust delete feature: Auto, Manual, Dust Delete Data appending

Recording System

Recording format: Design rule for Camera File System 2.0 Image type: JPEG. RAW (14-bit Canon original)

RAW+JPEG simultaneous recording possible
Recorded pixels: Large : Approx. 15.10 megapixels (4752 x 3168)
Medium: Approx. 8.00 megapixels (3456 x 2304)

Small : Approx. 3.70 megapixels (2352 x 1568)
RAW : Approx. 15.10 megapixels (4752 x 3168)

Image Processing

Picture Style: Standard, Portrait, Landscape, Neutral, Faithful,

Monochrome, User Def. 1 - 3

White balance: Auto, Preset (Daylight, Shade, Cloudy, Tungsten light,

White fluorescent light, Flash), Custom

White balance correction and white balance bracketing

features provided

* Color temperature information transmission enabled Applicable to long exposures and high ISO speed shots

Noise reduction: Automatic image

brightness correction: Auto Lighting Optimizer

Highlight tone priority: Provided

Lens peripheral

illumination correction: Provided

Viewfinder

Type: Eye-level pentamirror

Coverage: Vertical/Horizontal approx. 95%

212

Magnification: Approx. 0.87x (-1 m⁻¹ with 50mm lens at infinity)
Eye point: Approx. 19 mm (From eyepiece lens center at -1 m⁻¹)

Built-in dioptric adjustment: -3.0 - +1.0 m⁻¹ (dpt)
Focusing screen: Fixed, Precision Matte
Mirror: Quick-return type

Depth-of-field preview: Provided

Autofocus

Type: TTL secondary image-registration, phase detection

AF points: 9 AF points

Metering range: EV -0.5 - 18 (at 23°C/73°F, ISO 100)

Focus modes: One-Shot AF, Al Servo AF, Al Focus AF, Manual focusing (MF)

AF-assist beam: Small series of flashes fired by built-in flash

Exposure Control

Metering modes: 35-zone TTL full-aperture metering

· Evaluative metering (linkable to any AF point)

Partial metering (approx. 9% of viewfinder at center)
Spot metering (approx. 4% of viewfinder at center)

Center-weighted average metering

Metering range: EV 1 - 20 (at 23°C/73°F with EF 50mm f/1.4 USM lens, ISO 100) Exposure control: Program AE (Full Auto, Portrait, Landscape, Close-up, Sports,

 $\label{eq:linear_prop} \mbox{Night Portrait, Flash Off, Creative Auto, Program), shutter-priority AE, aperture-priority AE, depth-of-field AE, manual exposure$

ISO speed: Basic Zone modes: ISO 100 - 1600 set automatically (Recommended exposure index) Creative Zone modes: ISO 100 - 3200 (in 1-stop increments), Auto, or ISO spee

increments), Auto, or ISO speed can be expanded to ISO 6400 or

ISO 12800

Exposure compensation: Manual and AEB (Settable in combination with manual

exposure compensation)

Settable amount: ±2 stops in 1/3- or 1/2-stop increments

Auto: Applied in One-Shot AF mode with evaluative

metering when focus is achieved

Manual: By AE lock button

Shutter

AE lock:

Type: Electronically-controlled, focal-plane shutter

Shutter speeds: 1/4000 sec. to 1/60 sec. (Full Auto mode), X-sync at 1/200 sec.

 $1/\!4000$ sec. to 30 sec., bulb (Total shutter speed range.

Available range varies by shooting mode.)

Flash

Built-in flash: Retractable, auto pop-up flash

Guide No.: 13/43 (ISO 100, in meters/feet) Flash coverage: 17mm lens angle of view

Recycling time approx. 3 sec.

External flash: EX-series Speedlite (Functions settable with the camera)

Flash metering: E-TTL II autoflash

Flash exposure compensation: ±2 stops in 1/3- or 1/2-stop increments

FE lock: Provided PC terminal: None

Drive System

Drive mode: Single shooting, continuous shooting, self-timer with 10-sec. or 2-sec. delay and 10-sec. delay with continuous shooting

Continuous shooting speed: Max. approx. 3.4 shots/sec.

Max. burst: JPEG Large/Fine: Approx. 170 shots

RAW: Approx. 9 shots

RAW+JPEG Large/Fine: Approx. 4 shots

* Figures are based on Canon's testing standards (ISO 100 and Standard Picture Style) using a 2GB card.

Live View Shooting

Focusing: Live mode, Face detection Live mode (Contrast detection)

Quick mode (Phase-difference detection)
Manual focusing (5x/10x magnification possible)

Metering modes: Evaluative metering with the image sensor

Metering range: EV 0 - 20 (at 23°C/73°F with EF 50mm f/1.4 USM lens, ISO 100)

Movie Shooting

Movie type: MOV (Video: H.264, Audio: Linear PCM)

Recording size/

Frame rate: 1920x1080 / 20 fps (Full HD), 1280x720 / 30 fps (HD),

640x480 / 30 fps (SD)

File size: 1920x1080: Approx. 330 MB/min., 1280x720: Approx.

222 MB/min., 640x480: Approx. 165 MB/min.

Focusing: Same as focusing with Live View shooting

Metering range: EV 0 - 20 (at 23°C/73°F with EF 50mm f/1.4 USM lens,

ISO 100)

Continuous shooting time: Approx. 1 hr. 10 min. at 23°C/73°F

Approx. 1 hr. at 0°C/32°F

(With fully-charged Battery Pack LP-E5)

LCD Monitor

Type: TFT color liquid-crystal monitor (Brightness adjustable to

7 levels)

Monitor size and dots: 3-in. with approx. 920,000 dots (VGA)

Coverage: Approx. 100%

Interface languages: 25

Image Playback

Image display formats: Single, Single + Info (Image-recording quality, shooting

information, histogram), 4-image index, 9-image index,

image rotate possible

Zoom magnification: Approx. 1.5x - 10x

Image browsing methods: Single image, jump by 10 or 100 images, by shooting date,

by movie, by stills

Highlight alert: Overexposed highlights blink

Movie playback: Enabled (LCD monitor, video/audio OUT, HDMI OUT)

Built-in speaker

Direct Printing

Compatible printers: PictBridge-compatible printers
Printable images: JPEG and RAW images
Print ordering: DPOF Version 1.1 compatible

Customization

Custom Functions: 13
My Menu registration: Provided

Interface

Digital terminal: For computer communication and direct printing (Hi-

Speed USB)

For video/audio output (NTSC/PAL selectable)

HDMI mini OUT terminal: Type C (Auto switching of resolution)

Remote control terminal: For Remote Switch RS-60E3

Wireless remote control: Compatible with Remote Controller RC-1/RC-5

Power Source

Battery: Battery Pack LP-E5 (Quantity 1)

* AC power can be supplied via AC Adapter Kit ACK-E5

* With Battery Grip BG-E5 attached, size-AA/LR6

batteries can be used

Battery life: With viewfinder shooting:

(Based on CIPA Approx. 400 shots at 23°C/73°F, approx. 380 shots at 0°C/32°F

testing standards) With Live View shooting:

Approx. 170 shots at 23°C/73°F, approx. 160 shots at 0°C/32°F

. Dimensions and Weight

Dimensions (W x H x D): 128.8 x 97.5 x 61.9 mm / 5.1 x 3.8 x 2.4 in. Weight:

Approx. 480 q / 16.9 oz. (body only)

Operation Environment

Working temperature range: 0°C - 40°C / 32°F - 104°F

Working humidity: 85% or less

Battery Pack LP-E5

Type: Rechargeable lithium-ion battery

Rated voltage: 7.4 V DC Battery capacity: 1080 mAh

Dimensions (W x H x D): 36 x 14.7 x 53.1 mm / 1.4 x 0.6 x 2.1 in.

Weight: Approx. 50 g / 1.8 oz.

Battery Charger LC-E5

Compatible battery: Battery Pack LP-E5
Recharging time: Approx. 2 hours

Rated input: 100 - 240 V AC (50/60 Hz)

Rated output: 8.4 V DC

Working temperature range: 0°C - 40°C / 32°F - 104°F

Working humidity: 85% or less

Dimensions (W x H x D): 67 x 26 x 87.5 mm / 2.6 x 1.0 x 3.4 in.

Weight: Approx. 80 g / 2.8 oz.

Battery Charger LC-E5E

Compatible battery: Battery Pack LP-E5
Power cord length: Approx. 2 m / 6.6 ft.
Recharging time: Approx. 2 hours

Rated input: 100 - 240 V AC (50/60 Hz)

Rated output: 8.4 V DC

Working temperature range: 0°C - 40°C / 32°F - 104°F

Working humidity: 85% or less

Dimensions (W x H x D): 67 x 26 x 87.5 mm / 2.6 x 1.0 x 3.4 in.

Weight: Approx. 75 g / 2.6 oz.

EF-S 18-55mm f/3.5-5.6 IS

Angle of view: Diagonal extent: 74°20' - 27°50'

Horizontal extent: 64°30' - 23°20' Vertical extent: 45°30' - 15°40'

Lens construction: 11 elements in 9 groups

Minimum aperture: f/22 - 36

Closest focusing distance: 0.25 m / 0.82 ft. (From image sensor plane)

Max. magnification: 0.34x (at 55 mm)

Field of view: 207 x 134 - 67 x 45 mm / 8.1 x 5.3 - 2.6 x 1.8 in. (at 0.25 m)

Image Stabilizer: Lens shift type
Filter size: 58 mm
Lens cap: E-58

 Max. diameter x length:
 68.5 x 70 mm / 2.7 x 2.8 in.

 Weight:
 Approx. 200 g / 7.1 oz.

 Hood:
 EW-60C (sold separately)

 Case:
 LP814 (sold separately)

• EF-S 18-200mm f/3.5-5.6 IS

Angle of view: Diagonal extent: 74°20' - 7°50'

Horizontal extent: 64°30′ - 6°30′ Vertical extent: 45°30′ - 4°20′ 16 elements in 12 groups

Minimum aperture: f/22 - 36

Lens construction:

Closest focusing distance: 0.45 m / 1.48 ft. (From image sensor plane)

Max. magnification: 0.24x (at 200 mm)

Field of view: 452 x 291 - 93 x 62 mm / 17.8 x 11.5 - 3.7 x 2.4 in. (at

 $0.45 \, m)$

Image Stabilizer: Lens shift type Filter size: 72 mm

Lens cap: E-72

Max. diameter x length: 78.6 x 102 mm / 3.1 x 4.0 in.

Weight: Approx. 595 g / 21.0 oz.

Hood: EW-78D (sold separately)
Case: LP1116 (sold separately)

- All specifications above are based on Canon's testing standards.
- The camera's specifications and exterior are subject to change without notice.
- If a problem occurs with a non-Canon lens attached to the camera, consult the respective lens maker.

Trademarks

- Adobe is a trademark of Adobe Systems Incorporated.
- Windows is a trademark or registered trademark of Microsoft Corporation in the United States and other countries.
- Macintosh and Mac OS is a trademark or registered trademark of Apple Inc. in the United States and other countries.
- The SDHC logo is a trademark.
- HDMI, HDMI logo, and High-Definition Multimedia Interface are a trademark or registered trademark of HDMI Licensing LLC.
- All other corporate and product names and trademarks mentioned in this manual are the property of their respective owners.
- * This digital camera supports Design rule for Camera File System 2.0 and Exif 2.21 (also called "Exif Print"). Exif Print is a standard that enhances compatibility between digital cameras and printers. By connecting the camera to an Exif Print-compliant printer, the shooting information is incorporated to optimize the print output.

About MPEG-4 Licensing

"This product is licensed under AT&T patents for the MPEG-4 standard and may be used for encoding MPEG-4 compliant video and/or decoding MPEG-4 compliant video that was encoded only (1) for a personal and non-commercial purpose or (2) by a video provider licensed under the AT&T patents to provide MPEG-4 compliant video. No license is granted or implied for any other use for MPEG-4 standard."

* Notice displayed in English as required.

Use of genuine Canon accessories is recommended

This product is designed to achieve excellent performance when used with genuine Canon accessories. Canon shall not be liable for any damage to this product and/or accidents such as fire, etc., caused by the malfunction of nongenuine Canon accessories (e.g., a leakage and/or explosion of a battery pack). Please note that this warranty does not apply to repairs arising out of the malfunction of non-genuine Canon accessories, although you may request such repairs on a chargeable basis.

Safety Warnings

Follow these safeguards and use the equipment properly to prevent injury, death, and material damage.

Preventing Serious Injury or Death

- To prevent fire, excessive heat, chemical leakage, and explosions, follow the safeguards below:
 - Do not use any batteries, power sources, and accessories not specified in this booklet. Do not use any home-made or modified batteries.
 - Do not short-circuit, disassemble, or modify the battery pack or back-up battery. Do not apply heat or apply solder to the battery pack or back-up battery. Do not expose the battery pack or back-up battery to fire or water. And do not subject the battery pack or back-up battery to strong physical shock.
 - Do not install the battery pack or back-up battery in reversed polarity (+ -). Do not mix new and old or different types of batteries.
 - Do not recharge the battery pack outside the allowable ambient temperature range of 0°C - 40°C (32°F - 104°F). Also, do not exceed the recharging time.
 - Do not insert any foreign metallic objects into the electrical contacts of the camera, accessories, connecting cables, etc.
- Keep the back-up battery away from children. If a child swallows the battery, consult a
 physician immediately. (Battery chemicals may harm the stomach and intestines.)
- When disposing of a battery pack or back-up battery, insulate the electrical contacts with tape to prevent contact with other metallic objects or batteries. This is to prevent fire or an explosion.
- If excessive heat, smoke, or fumes are emitted during battery pack recharging, immediately unplug the battery charger from the power outlet to stop the recharging and prevent a fire.
- If the battery pack or back-up battery leaks, changes color, deforms, or emits smoke or fumes, remove it immediately. Be careful not to get burned in the process.
- Prevent any battery leakage from contacting your eyes, skin, and clothing. It can
 cause blindness or skin problems. If the battery leakage contacts your eyes, skin, or
 clothing, flush the affected area with lots of clean water without rubbing it. See a
 physician immediately.
- During the recharging, keep the equipment away from the reach of children. The cord can accidentally choke the child or give an electrical shock.
- Do not leave any cords near a heat source. It can deform the cord or melt the insulation and cause a fire or electrical shock.
- Do not fire the flash at someone driving a car. It may cause an accident.
- Do not fire the flash near a person's eyes. It may impair the person's vision. When using flash to photograph an infant, keep at least 1 meter away.
- Before storing the camera or accessory when not in use, remove the battery pack and disconnect the power plug. This is to prevent electrical shock, heat generation, and fire.
- Do not use the equipment where there is flammable gas. This is to prevent an
 explosion or fire.

- If you drop the equipment and the casing breaks open to expose the internal parts, do not touch the internal parts due to the possibility of electrical shock.
- Do not disassemble or modify the equipment. High-voltage internal parts can cause electrical shock.
- Do not look at the sun or an extremely bright light source through the camera or lens.
 Doing so may damage your vision.
- Keep the camera from the reach of small children. The neck strap can accidentally choke the child.
- Do not store the equipment in dusty or humid places. This is to prevent fire and electrical shock.
- Before using the camera inside an airplane or hospital, check if it is allowed.
 Electromagnetic waves emitted by the camera may interfere with the plane's instruments or the hospital's medical equipment.
- To prevent fire and electrical shock, follow the safeguards below:
 - Always insert the power plug all the way in.
 - Do not handle a power plug with wet hands.
 - When unplugging a power plug, grasp and pull the plug instead of the cord.
 - Do not scratch, cut, or excessively bend the cord or put a heavy object on the cord.
 Also do not twist or tie the cords.
 - Do not connect too many power plugs to the same power outlet.
 - Do not use a cord whose insulation has been damaged.
- Occasionally unplug the power plug and use a dry cloth to clean off the dust around the power outlet. If the surrounding is dusty, humid, or oily, the dust on the power outlet may become moist and short-circuit the outlet to cause a fire.

Preventing Injury or Equipment Damage

- Do not leave equipment inside a car under the hot sun or near a heat source. The equipment may become hot and cause skin burns.
- Do not carry the camera around while it is attached to a tripod. Doing so may cause injury. Also make sure the tripod is sturdy enough to support the camera and lens.
- Do not leave a lens or lens-attached camera under the sun without the lens cap attached. Otherwise, the lens may concentrate the sun's rays and cause a fire.
- Do not cover or wrap the battery-recharging apparatus with a cloth. Doing so may trap heat within and cause the casing to deform or catch fire.
- If you drop the camera in water or if water or metal fragments enter inside the camera, promptly remove the battery pack and back-up battery. This is to prevent fire and electrical shock.
- Do not use or leave the battery pack or back-up battery in a hot environment. Doing so may cause battery leakage or a shorter battery life. The battery pack or back-up battery can also become hot and cause skin burns.
- Do not use paint thinner, benzene, or other organic solvents to clean the equipment.
 Doing so may cause fire or a health hazard.

If the product does not work properly or requires repair, contact your dealer or your nearest Canon Service Center.



European Union (and EEA) only.

This symbol indicates that this product is not to be disposed of with your household waste, according to the WEEE Directive (2002/96/ EC) and your national law. This product should be handed over to a designated collection point, e.g., on an authorized one-for-one basis when you buy a new similar product or to an authorized collection site for recycling waste electrical and electronic equipment (EEE). Improper handling of this type of waste could have a possible negative impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE. At the same time, your cooperation in the correct disposal of this product will contribute to the effective usage of natural resources. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, waste authority, approved WEEE scheme or your household waste disposal service. For more information regarding return and recycling of WEEE products, please visit www.canon-europe.com/environment.

(EEA: Norway, Iceland and Liechtenstein)

Index

1st-curtain sync140	BULB (Bulb exposure) 81
2nd-curtain sync140	
2-sec. self-timer69	C
4- or 9-image index display148	(Creative Auto) 53
4- or 3-image muck display140	Cable3, 211
Α	Camera
A/V OUT terminal156	Camera shake 104
AC Adapter Kit193	Clear settings136
Access lamp32	Holding the camera
A-DEP	Settings display 135
(Automatic depth-of-field AE)82	Camera shake35 - 37
Adobe RGB93	Card 2, 13, 31
AE lock94, 124	Card reminder
AEB86	Format
AF → Focusing	SD speed class
AI FOCUS (AI Focus AF)65	SDHC2
AI SERVO (AI Servo AF)65	Center-weighted average metering 83
Aperture-priority AE78	Cleaning (image sensor) 142
Audio/video OUT terminal156	Clock → Date/Time
Auto Lighting Optimizer43, 186	Close-up
Auto playback → Slide show	Color space
Auto power off27, 131	Color temperature96
Autofocus → Focusing	Color tone
Av (Aperture-priority AE)78	Continuous shooting 68
	Contrast89
В	Copyright information
B/W (Monochrome)74	Cord 3, 211
Basic Zone modes20	Creative Auto53
Battery → Power	Creative Zone modes20
Battery check28	Custom Functions 182
Battery Grip BG-E5210	Clear all 182
Beeper130	List 183
Black-and-white image74, 90	D
Built-in flash62, 77, 80	
Bulb81	Date/Time

Depth-of-field preview 80 Digital terminal .164, 177 Dioptric adjustment .36 Direct printing → Printing .173 DPOF .173 Drive mode .68 Dust Delete Data .143 E .159 Error codes .209 Evaluative metering .83 Exposure compensation .84 Extension .133 External Speedlite .139, 196 Eyepiece cover .23, 195	Flash
Face detection Live mode (AF)112 Faithful74	Difficult-to-focus subjects 115, 192 Manual focusing
FE lock95	Out of focus45, 115, 192
File number132	Recompose
File size70, 123, 161	Format (card initialization)40
Filter effect (Monochrome)90	Full Auto
Firmware Ver201	Full HD 121, 123
	Full High-Definition
	Function availability table 198
	G
	Grid display 108, 124
	Н

Highlight detail loss161	Language selection 30
Highlight tone priority60, 186	LCD monitor13
Histogram (Brightness/RGB)162	Auto off 138
	Brightness adjustment 131
l	Display switching 42
CC profile93	Image playback 56, 147
mage	Menu settings 38
Auto playback154	Screen color138
Erase159	Shooting settings display 18
Highlight alert161	Lens 21, 33 - 35
Histogram162	Attaching/Detaching33
Index148	Lens peripheral illumination
Jump display149	correction 100
Magnified view150	Live mode (AF)111
Playback56, 147	Live View shooting 105
Protect158	Focusing 111
Rotate134, 151	Grid display108
Shooting information110, 161	Possible shots107
Transfer	Long exposures \rightarrow Bulb
Transfer to computer	Low level format 40, 41
View on TV156	
mage area34	М
mage dust prevention143	M (Manual exposure) 81
mage review time130	Magnified view 118, 150
mage Zone20	Main Dial 16, 75
mage-recording quality70	Malfunction203
ndex display148	Manual exposure
SO speed60	Manual focusing 67, 118
Automatic setting61	•
ISO expansion60, 184	Maximum burst71
	Memory card → Card
J	Menu
JPEG70	Menu settings
Jump display149	My Menu
	Setting operation
L	Metering mode 83
_andscape48, 73	Metering timer 108, 124
	MF (Manual focusing) 67, 118

Microphone124	Picture Style
Mirror lockup104, 187	Adjustment 88
Mode Dial20	Selection73
Monochrome74	User defined91
Movie	Pixels70
Playback152	Playback56, 147
Recording size123	Portrait47, 51, 73
Shooting121	Possible shots28, 107
Still image shooting125	Power
View on TV156	Auto power off27, 131
My Menu190	Battery check28
N	Household power
	Possible shots
Neutral74	Recharge24 Switch27
Night Portrait51	
Night scene48	Printing164 Page layout167
Noise reduction	Paper settings167
High ISO speed68, 72, 185	Print Order (DPOF)173
Long exposure81, 185	Printing effects 168, 170
Nomenclature 16 - 22	Tilt correction171
NTSC201	Trimming 171
0	Program AE58
	Program shift59
ONE SHOT (One-Shot AF)64 Original decision	Protect (image erase-protection) 158
(image verification) data189	Q
P	Quick Control screen102
P (Program AE)58	Quick mode (AF) 116
PAL201	R
Paper settings (printing)166	RAW70 - 72
Partial metering83	RAW+JPEG70 - 72
Peripheral illumination correction100	
PictBridge163	Recharge
Fictbridge103	Red-eye reduction
	Release shutter without card 31

Remote control	Sports 50
shooting55, 69, 124, 194	Spot metering83
Revert to default settings136	Standard 73
Rotate (image)134, 151	Stopped-down aperture80
S	Strap23
	System map 210
Safety warnings219	
Saturation89	Т
SD/SDHC card → Card	Tone priority186
Self-timer69	Toning effect (Monochrome) 90
Sensor cleaning27, 142, 145	Trimming (printing) 171
Sepia (Monochrome)90	Tv (Shutter-priority AE) 76
Sharpness89	
Shooting information	V
display110, 126, 161	Video system 156, 201
Shooting mode20	View on TV 156
A-DEP	Viewfinder 19
(Automatic depth-of-field AE) 82	Dioptric adjustment 36
M (Manual exposure)81	Volume (Movie playback)153
Av (Aperture-priority AE)78	
Tv (Shutter-priority AE)76	W
P (Program AE)58	WB → White balance
CA (Creative Auto)53	White balance
☐ (Full Auto)44	Bracketing 99
(Portrait)47	Correction
(Landscape)48	Custom
(Close-up)49	Personal97
(Sports)50	
(Night Portrait)51	Z
(Flash Off)52	Zoom ring lock34
¹ ── (Movie shooting)121	
Shooting settings display18	
Shutter button37	
Shutter-priority AE76	

 Slide show
 154

 Sound recording
 124

 Speaker
 152



Canon

CANON INC.

30-2 Shimomaruko 3-chome, Ohta-ku, Tokyo 146-8501, Japan

Europe, Africa & Middle East

CANON EUROPA N.V.

PO Box 2262, 1180 EG Amstelveen. The Netherlands

CANON UK I TD

CANON UK LTD
For technical support, please contact the Canon Help Desk:
Canon UK, RCC Customer Service
Unit 130, Centennial Park, Elstree, Herts, WD6 3SE, UK
Helpdesk: 0844 389 Ur0 (b) pencehrin from a BT landine, other costs may vary)
Fax: 000 8731 4164

www.canon.co.uk CANON FRANCE SAS

17, quai du Président Paul Doumer 92414 Courbevoie cedex, France Hot line 0825 002 923 (0,15 €/min.) www.canon.fr

CANON DELITSCHI AND GmbH

Europark Fichtenhain A10, 47807 Krefeld, Germany Helpdesk: 0180 500 6022 (0,14 €/min.) www.canon.de

CANON ITALIA S.P.A.

Via Milano 8, I-20097 San Donato Milanese (MI), Italy Servizio clienti: 848 800519 (0,0787 €+ 0,0143 €/min) Fax: 02-8248.4600

CANON ESPAÑA S.A.

Avenida de Europa nº 6. 28108 Alcobendas (Madrid) Helpdesk: 901.900.012 (€0,039/min) Fax: (+34) 91 411 77 80 www.canon.es

CANON BELGIUM N.V. / S.A.

Berkenlaan 3, B – 1831 Diegem, Belgium Helpdesk: (02) 620.01.97 (0,053 € + 0,053 €/min) Fax: (02) 721.32.74

www.canon.be

Rue des Joncs 21, L-1818 Howald, Luxembourg Helpdesk : 27 302 054 (0,12 €/min) Fax: (352) 48 47 96232

CANON NEDERLAND N.V.

Neptunusstraat 1, 2132 JA Hoofddorp, The Netherlands Helpdesk: 0900 – 202 2915 (0,13 €/min) www.canon.nl

CANON DANMARK A/S

Knud Højgaards Vej 1, DK-2860 Søborg, Denmark Helpdesk: 70 20 55 15 (0,25 DKK + 0,25 DKK/min) Fax: 70 155 025 www.canon.dk

CANON NORGE as

Hallagerbakken 110, Postboks 33, Holmlia, 1201 Oslo, Norway Helpdesk: 23 50 01 43 (0,89 NOK + 0,49 NOK/min)

CANON OY

Kuluttajatuotteet, Huopalahdentie 24, PL1, 00351 Helsinki, Finland Helpdesk: 020 366 466 (0,02 €/min + pvm tai mpm) www.canon.fi

CANON SVENSKA AR

Gustav III:s Boulevard 26, S-169 88 Solna, Sweden Helpdesk: +46 (0)8 519 923 69 (0,23 SEK + 0,45 SEK/min) Fax: +46 (0)8 97 20 01 www.canon.se

CANON (SCHWEIZ) AG

Industriestrasse 12, 8305 Dietlikon, Switzerland Helpdesk: 0848 833 838 (0,08 CHF/min) www.canon.ch

CANON AUSTRIA GmbH

Oberlaaer Strasse 233, A – 1110 Wien, Austria Helpdesk: 0810 081009 (0,07 €/min) www.canon.at

CANON PORTUGAL, S.A.

Rua Alfredo Silva, 14 - Alfragide, 2610-016 Amadora, Portugal Helpdesk: +351 21 42 45 190 (€0,0847 + €0,031/min) www.canon.pt

WEB SELF-SERVICE: www.canon-europe.com

This Instruction Manual booklet is current as of April 2009. For information on the camera's compatibility with any accessories and lenses introduced after this date, contact any Canon Service Center.