

Canon

EOS 500N EOS REBEL G

Accessories

These are some of the accessories available for the EOS 500N / EOS Rebel G to make picture-taking easier and more enjoyable.



Speedlite 220EX

High-performance, compact flash unit with a higher flash output and longer flash range than the built-in flash. Also, the SE (Save Energy) feature turns off the Speedlite automatically after 90 sec. of non-use.



Eyeiece Extender EP-EX15

This extends the eyepiece by 15 mm from the camera body. It relieves your nose from pressing against the camera back.



Remote Switch RS-60E3

This is a 60cm cable release for macro shots and long exposures (bulb) when the camera is mounted on a tripod.



Battery Pack BP-8

External battery pack which enables the camera to be powered by widely-available size-AA batteries instead of lithium batteries. Light and compact, it also has a hand strap for holding ease.



EOS 500N / EOS Rebel G System Accessories

Speedlites



Speedlite 220EX

High-performance, compact flash unit. Maximum Guide No. 22 (at ISO 100 in meters).



Speedlite 380EX

Compact, zoom flash unit with high flash output. Maximum Guide No. 38 (at ISO 100 in meters).



Macro Ring Lite ML-3

Flash unit dedicated to close-up flash photography with macro lenses. Guide No. 11 (at ISO 100 in meters). A mini lamp for focusing is built-in.

Viewfinder Accessories



Angle Finder B

Convenient for low-angle shots.




Magnifier S

This magnifies the center of the image area by 2.5 times to make focusing easier.



Eyepiece Extender EP-EX15

Extends the eyepiece by 15 mm.

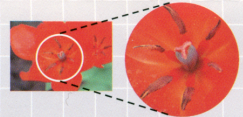

Viewfinder image with Magnifier S

Since the center of the image is magnified, focusing close-up subjects is easier.

Power Packs and Grips




Grip GR-80TP

This grip extension has a hand strap and built-in mini tripod.



Sample use of the GR-80TP

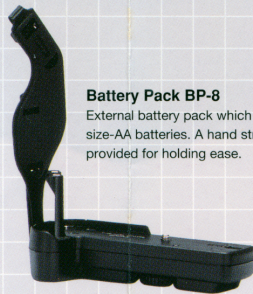

Battery Pack BP-8

External battery pack which uses size-AA batteries. A hand strap is also provided for holding ease.



Sample use of the GR-80TP

Remote Control Accessories



Remote Switch RS-60E3

Dedicated remote switch to prevent camera shake. For use with a tripod-mounted camera.

