


# PowerShot S1 IS SYSTEM MAP

DIGITAL CAMERA

Wide Converter  
WC-DC52A

Tele-converter  
TC-DC52B

**Canon**

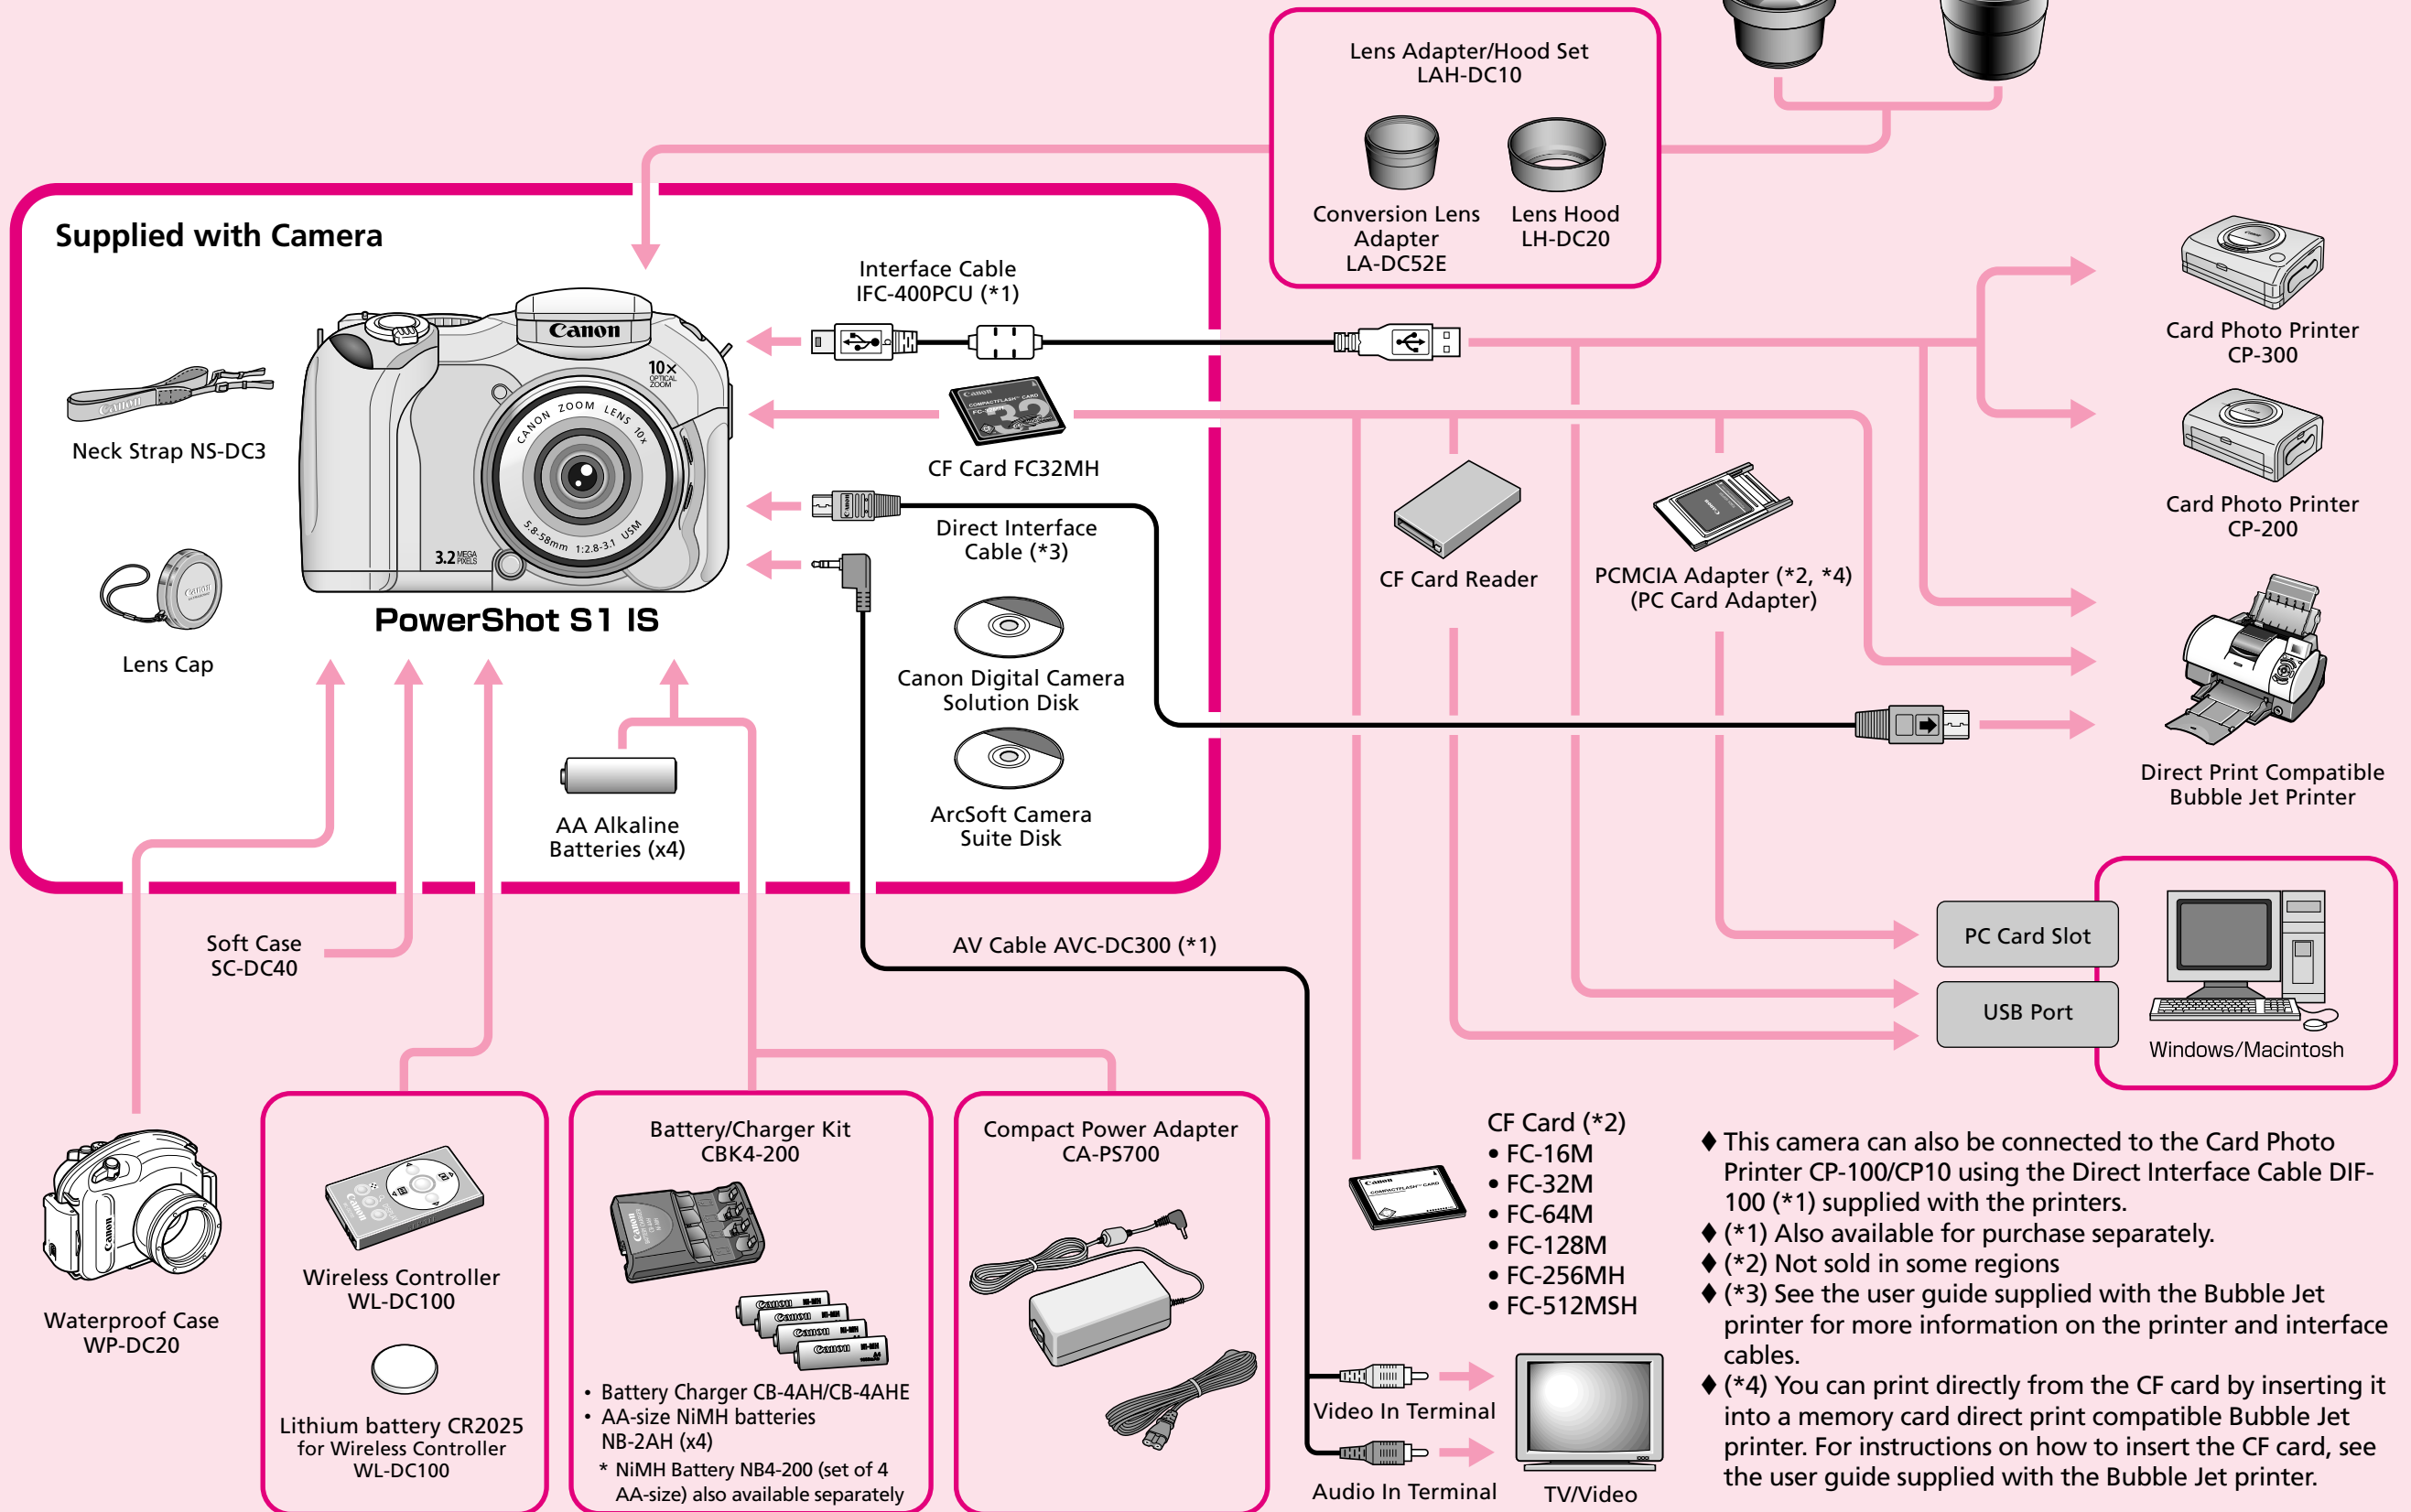

- ◆ This camera can also be connected to the Card Photo Printer CP-100/CP10 using the Direct Interface Cable DIF-100 (\*1) supplied with the printers.
- ◆ (\*1) Also available for purchase separately.
- ◆ (\*2) Not sold in some regions
- ◆ (\*3) See the user guide supplied with the Bubble Jet printer for more information on the printer and interface cables.
- ◆ (\*4) You can print directly from the CF card by inserting it into a memory card direct print compatible Bubble Jet printer. For instructions on how to insert the CF card, see the user guide supplied with the Bubble Jet printer.

## Confirming the Package Contents

Your camera package includes all of the following items. If any of these items are missing, please contact the dealer for assistance.

- Digital Camera
- Lens Cap
- Neck Strap NS-DC3
- AA Alkaline Batteries (x4)
- CompactFlash™ Card FC-32MH
- CompactFlash Card Case
- Interface Cable IFC-400PCU
- AV Cable AVC-DC300
- Canon Digital Camera Solution Disk
- ArcSoft Camera Suite Disk
- Quick Start Guide
- Camera User Guide
- Direct Print User Guide
- Software Starter Guide
- "For Windows® XP and Mac OS X Users" Leaflet
- System Map (this sheet)
- "Canon Customer Support" Leaflet
- Warranty Card

## Optional Accessories

The following camera accessories are sold separately. **Some accessories are not sold in some regions.**

### Lenses, Lens Adapter

- **Lens Adapter/Lens Hood Set LAH-DC10**  
This conversion lens adapter and hood set is required for mounting the wide converter and tele-converter to the camera.
- **Wide Converter WC-DC52A**  
Converts the focal distance of the body lens by a factor of approximately 0.7 (35mm film equivalent at maximum wide angle: approximately 26.6 mm) when attached.
- **Tele-converter TC-DC52B**  
Converts the focal distance of the body lens by a factor of approximately 1.6 (35mm film equivalent at telephoto end: approximately 608 mm) when attached.

### Power Supplies

- **Compact Power Adapter CA-PS700**  
This adapter lets you power the camera from any standard household power outlet. Recommended to power a camera for an extended period of time or when connecting to a computer.

- **Battery/Charger Kit CBK4-200**  
This dedicated battery charger kit includes both a charger unit and four rechargeable AA-size NiMH (nickel metal hydride) batteries. Convenient when taking or playing back large numbers of images.
- **NiMH battery NB4-200**  
A set of four rechargeable AA-size NiMH batteries.

### Connection Accessories

These connection accessories can be used with computers equipped with the following OS.

Windows: Systems running preinstalled Windows 98 (including Second Edition), Windows Millennium (Windows Me), Windows 2000, Windows XP  
Macintosh: Mac OS 9.0 - 9.2, Mac OS X (v10.1/v10.2)\*  
\* Only systems equipped with genuine Apple-brand built-in USB interfaces.

- **Interface Cable IFC-400PCU**  
Use this cable to connect the camera to a computer, Card Photo Printer CP-300 or CP-200, or to a Bubble Jet printer (refer to your Bubble Jet printer user guide).

- **PCMCIA Adapter (PC Card Adapter)**  
Allows you to load a CF card into the computer's PC card slot.

### Other Accessories

- **CF Cards**  
CompactFlash™ (CF) cards are used to store images recorded by the camera. Canon CF cards are available in 16 MB, 32 MB, 64 MB, 128 MB, 256 MB and 512 MB.
- **AV Cable AVC-DC300**  
Use this cable to connect the camera to a TV set.
- **Wireless Controller WL-DC100**  
Operates camera from a distance.
- **Waterproof Case WP-DC20**  
A waterproof case for the PowerShot S1 IS. You can use this case to take underwater shots at depths of up to 40 meters (130 feet). And of course it's also ideal for taking worry-free pictures in the rain, at the beach, or on the ski slopes.
- **Soft Case SC-DC40**  
Protects the camera from dust and scratches.

## Direct Print Compatible Printers

Canon offers the following separately sold printers for use with the camera. You can produce prints quickly and easily by connecting them to the camera with a single cable and operating the camera's controls. **Some accessories are not sold in some regions.**

### Card Photo Printers

- **CP-300/CP-200/CP-100**  
These super-compact, light-weight printers print high-quality postcard size, L-size and card size images. The Canon rechargeable battery\* makes these printers portable, even allowing you to print your images outdoors. The rechargeable battery is included with the CP-300.  
\* CP-300/CP-100 only
- **Color Ink/Paper Set KP-36IP, KL-36IP, KC-36IP**
- **Color Ink/Label Set KC-18IF**
- **Color Ink/Full-Sized Label Set KC-18IF**  
Color ink and paper sets.
- **Paper Cassette PCL-CP100**  
L-size paper cassette.

- **Paper Cassette PCC-CP100**  
Credit card-size paper cassette (required to print with the CP-200).
- **Computer Connection Kit CCK-CP200**  
Connects your computer to the CP-100 or the CP-10, allowing you to print images directly from your computer. With the CP-300 and CP-200 printers, you can use the software included with the printers to print images from your computer.
- **Battery and Charge Adapter Kit BCA-CP100**  
This rechargeable lithium-ion battery and charger for the CP-300/CP-100 let you print images on the move.

- **Car battery Adapter CBA-CP100**  
Allows you to print images on the go, using a car cigarette lighter as a power source.
- **Card Photo Printer CP-10**  
Prints high-quality, credit card-size images.

### Bubble Jet Printers

For more information, visit your nearest Canon retailer.