

Set for vertical pictures

LISTINGS

Camon Camera Holder w/case
anon Tripod
anon Flash Unit, Model B-ll w/case
(for all Canons except Model IV)
anon Flash Unit Model X
(for Canon Model IV)
1. Main Flash Unit Housing w/Micro-Sync,
Battery Cap & Additional Battery Case
2. Side Lighting Unit Housing w/Clamp
3. 5" Reflector
4. 7" Reflector
5. Penlight Battery Cartridge
6. Midget Bulb Adapter
7. Self-Extension Adapter
8. Extension Cord, 15 ft
9. Flash Tester
Items 1, 4, 5, 6, 7, 8, & 9 w/ Leather
Carrying Case constitute a set

Prices subject to change without notice.

Canon Camera Company, Inc.

3, Ginza 5-chome, Chuo-ku, Tokyo, Japan
(Z Ave, Ginza, Tokyo)

Canon

CAMERA HOLDER




Canon Camera Co., Inc.

Manufacturer & Exporter of Canon Cameras & Serenar Lenses

For taking sharp and well-composed pictures with your Canon camera, the use of a tripod and the Canon CAMERA HOLDER is highly recommended. With this HOLDER you can set your camera sturdily in perfect level-horizontally or vertically. Tripod sockets on the HOLDER so located as to well-balance the camera mounted with SERENAR lenses of any focal length. Additional sockets can be used to mount Canon Side Lighting Units.

Images formed on 35 mm film will have to be reproduced either by enlargement on a photographic paper or by projection on a screen. Whichever it may be, it is extremely important to have the negatives sharply focused in perfect composition in order to meet a great magnification and pleasant formation requirements. With the use of the Canon CAMERA HOLDER these requirements can be easily accomplished whether it is close-up or distance shots at any shutter setting.

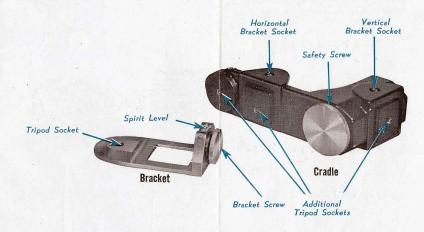

The Canon CAMERA HOLDER consists of a Cradle and a Bracket. The Cradle is of rigid and light weight aluminum die-cast with black Japanese lacquer finish and velvet lining for protecting the camera, while the Bracket is

made of brass with chromium plated finish. The bnilt-in Spirit Level on the bracket affords a positive level for object composition.



HOW TO MOUNT THE CAMERA

- 1. Mount the Bracket onto tripod.
- 2. Slide the camera into the Cradle.
- 3. Tighten the Safety Screw.
- 4. Place the Cradle onto the Brackethorizontally or vertically.
- 5. Tighten the Bracket Screw.

When necessary to interchange lenses or to reload film, dismount the camera from the Cradle by unscrewing the Safety Screw

