

# **Confirming the Package Contents**

Your camera package includes all of the following items. If any of these items are missing, please contact the dealer for assistance.

- Digital Camera
- Lens Cap
- Neck Strap NS-DC3
- AA Alkaline Batteries (x4)
- SD Memory Card SDC-16M
- Interface Cable IFC-400PCU
- Stereo/Video Cable STV-250N
- Canon Digital Camera Solution Disk
- Quick Start Guide
- Camera User Guide
- Direct Print User Guide
- Software Starter Guide
- "For Windows® XP and Mac OS X Users" Leaflet
- System Map (this sheet)
- "Canon Customer Support" Leaflet
- Warranty Card

## **Optional Accessories**

The following camera accessories are sold separately. Some accessories are not sold in some regions.

## Lenses, Lens Adapter

- Lens Adapter/Lens Hood Set LAH-DC20
  This conversion lens adapter and hood set is required for mounting the wide converter and tele-converter to the camera.
- Wide Converter WC-DC58A
   Converts the focal length of the body lens by a factor of approximately 0.75 (35mm film equivalent at maximum wide angle: approximately 27mm) when attached.
- Tele-converter TC-DC58B
   Converts the focal length of the body lens by a factor of approximately 1.5 (35mm film equivalent at maximum telephoto: approximately 648mm) when attached.
- Close-up Lens 500D (58mm)
   This lens can be used to take close-ups of subjects that are 35 to 50 cm (at maximum telephoto) from the lens tip.

### Flash

High-Power Flash HF-DC1
 This attachable supplementary flash can be used to capture photographic subjects that are too distant for the built-in flash to illuminate.

## **Power Supplies**

- Compact Power Adapter CA-PS700
   This adapter lets you power the camera from any standard household power outlet. Recommended to power a camera for an extended period of time or when connecting to a computer.
- Battery/Charger Kit CBK4-200
   This dedicated battery charger kit includes both a charger unit and four rechargeable AA-size NiMH (nickel metal hydride) batteries. Convenient when taking or playing back large numbers of images.
- NiMH Battery NB4-200
   A set of four rechargeable AA-size NiMH batteries.

### **Connection Accessories**

These connection accessories can be used with computers equipped with the following OS.

Windows: System running preinstalled

Windows 98 Second Edition (SE), Windows Me, Windows 2000 Service Pack 4, or Windows XP (including Service Pack 1 and Service Pack 2).

Macintosh: Mac OS X (v10.1.5-v10.3)\*

\* Only systems equipped with genuine built-in USB interfaces.

#### • Interface Cable IFC-400PCU

Use this cable to connect the camera to a computer, Compact Photo Printer (SELPHY series), Card Photo Printer (other than the CP-100/CP-10), or to a Bubble Jet printer (refer to your Bubble Jet printer user quide).

## Other Accessories

- SD Memory Card
- SD Memory Cards are used to store images recorded by the camera.
  Canon brand cards are available in 128 MB and 512 MB capacities.
- Stereo/Video Cable STV-250N
   Use this cable to connect the camera to a TV set (sound can be played in stereo).

# **Direct Print Compatible Printers**

Canon offers the following separately sold printers for use with the camera. You can produce photo quality prints quickly and easily by connecting them to the camera with a single cable and operating the camera's controls.

- Compact Photo Printers (SELPHY series)
- Card Photo Printers
- PIXMA series printers

For more information, visit your nearest Canon retailer.