



- (\*1) Also available for purchase separately.
- (\*2) See the user guide supplied with the Bubble Jet printer for more information on the printer and interface cables.
- (\*3) This camera can also be connected to the Card Photo Printer CP-10/CP-100/CP-200/CP-300.
- (\*4) Not sold in some regions.

## Confirming the Package Contents

Your camera package includes all of the following items. If any of these items are missing, please contact the dealer for assistance.

- Digital Camera
- Camera Station CS-DC1
- Wrist Strap WS-900
- Battery Pack NB-4L
- Cover for Battery Pack
- MultiMediaCard MMC-16M
- Compact Power Adapter CA-DC20/CA-DC20E
- Interface Cable IFC-400PCU
- AV Cable AVC-DC300
- Canon Digital Camera Solution Disk
- Wireless Controller WL-DC200
- Lithium Battery CR2025 for Wireless Controller WL-DC200
- Basic Camera User Guide
- Advanced Camera User Guide
- Direct Print User Guide
- Software Starter Guide
- System Map (this sheet)
- Warranty Card
- "For Windows® XP and Mac OS X Users" Leaflet\*
- "Canon Customer Support" Leaflet\*
- "Use of Genuine Canon Accessories Recommended" Leaflet\*

\* These leaflets are printed together on one sheet of paper. Please separate them before reading.

## Optional Accessories

The following camera accessories are sold separately.

**Some accessories are not sold in some regions.**

### Flash

- **High-Power Flash HF-DC1**  
This attachable supplementary flash can be used to capture photographic subjects that are too distant for the built-in flash to illuminate.

### Power Supplies

- **Compact Power Adapter CA-DC20/20E**  
An adapter for supplying power to operate the camera.
- **Battery Charger CB-2LV/CB-2LVE**  
An adapter for charging Battery Pack NB-4L.
- **Battery Pack NB-4L**  
Rechargeable lithium-ion battery.

### Connection Accessory

This connection accessory can be used with computers equipped with genuine built-in USB interfaces and running the following operating systems.

**Windows:** Systems running preinstalled Windows 98 Second Edition (SE), Windows Me, Windows 2000 Service Pack 4, or Windows XP (including Service Pack 1 and Service Pack 2).

**Macintosh:** Mac OS X (v10.2 – v10.3)

- **Interface Cable IFC-400PCU**  
Use this cable to connect the camera station to a computer, Compact Photo Printer (SELPHY series), or to a Bubble Jet printer (refer to your Bubble Jet printer user guide).

### Other Accessories

- **SD Memory Card**  
SD memory cards are used to store images recorded by the camera. Canon brand cards are available in 128 MB and 512 MB capacities.
- **Camera Station CS-DC1**  
Use this to charge the battery, play back images, or connect to a TV set, computer or printer.
- **AV Cable AVC-DC300**  
Use this cable to connect the camera station to a TV set.
- **All Weather Case AW-DC40**  
You can use this case to take underwater shots at depths of up to 3 meters (10 feet), and of course it's ideal for taking worry-free pictures in the rain, at the beach, or on the ski slopes.

## Direct Print Compatible Printers

Canon offers the following separately sold printers for use with the camera. You can produce photo quality prints quickly and easily by connecting them to the camera with a single cable and operating the camera's controls.

- **Compact Photo Printers (SELPHY series)**
- **Bubble Jet Printers**

For more information, visit your nearest Canon retailer.