 


PowerShot TX1 SYSTEM MAP

DIGITAL CAMERA



 
 
 
Supplied with Camera

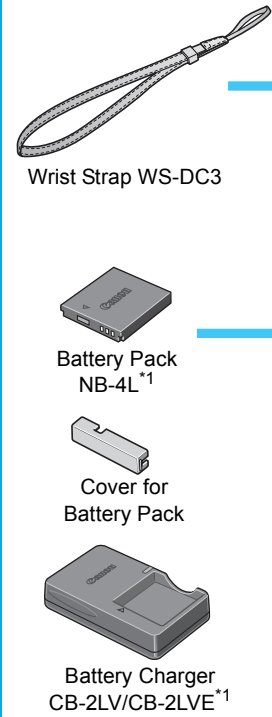


Interface Cable IFC-400PCU^{*1}




Direct Interface Cable

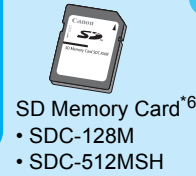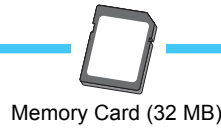


Stereo/Video Cable STV-250N^{*1}

 




Component Cable CTC-100/S^{*5}

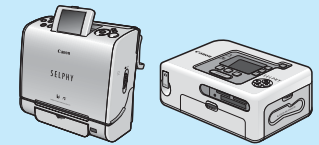 


 
Compact Photo Printer^{*2, *3}
(SELPHY series)

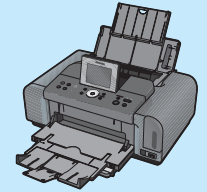

   Direct Print Compatible Bubble Jet Printer^{*4}
(PIXMA series)

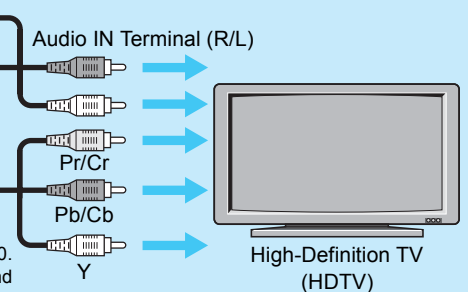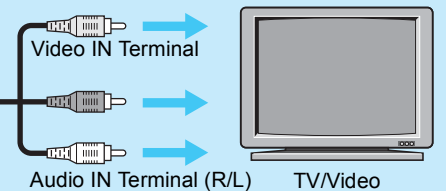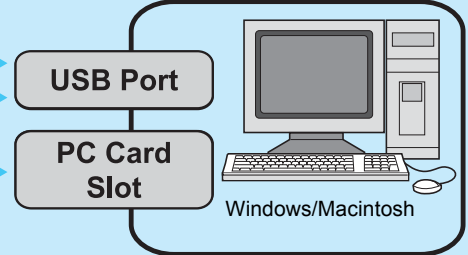

AC Adapter Kit ACK-DC10

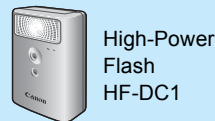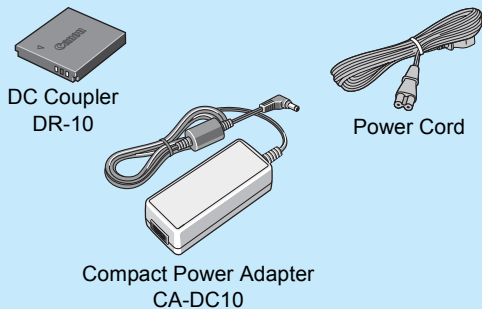  

- *1 Also available for purchase separately.
- *2 See the user guide supplied with the printer for more information on the printer.
- *3 This camera can also be connected to the Card Photo Printer CP-10/CP-100/CP-200/CP-300.
- *4 See the user guide supplied with the Bubble Jet printer for more information on the printer and interface cables.
- *5 Component Cable CTC-100 (sold separately) can also be used in the same way. When using a component cable, you must connect Stereo/Video Cable STV-250N in order to hear audio.
- *6 Not sold in some regions.

Confirming the Package Contents

Your camera package includes all of the following items. If any of these items are missing, please contact the dealer for assistance.

- Digital Camera
- Wrist Strap WS-DC3
- Battery Charger CB-2LV/CB-2LVE
- Battery Pack NB-4L
- Cover for Battery Pack
- Memory Card (32 MB)
- Interface Cable IFC-400PCU
- Component Cable CTC-100/S (1.5 m (4.9 ft.))
- Stereo/Video Cable STV-250N
- Canon Digital Camera Solution Disk
- Basic Camera User Guide
- Advanced Camera User Guide
- Direct Print User Guide
- Software Starter Guide
- System Map (this sheet)
- Warranty Card
- “Use of Genuine Canon Accessories Recommended” Leaflet
- “Canon Customer Support” Leaflet

Optional Accessories

The following camera accessories are sold separately. **Some accessories are not sold in some regions.**

Flash

- **High-Power Flash HF-DC1**
This attachable supplementary flash can be used to capture photographic subjects that are too distant for the built-in flash to illuminate.

Power Supplies

- **AC Adapter Kit ACK-DC10**
This kit lets you power the camera from any standard household power outlet. Recommended to power a camera for an extended period of time or when connecting to a computer.
- **Battery Charger CB-2LV/CB-2LVE**
An adapter for charging Battery Pack NB-4L.
- **Battery Pack NB-4L**
Rechargeable lithium-ion battery.

Other Accessories

- **SD Memory Card**
SD memory cards are used to store images recorded by the camera. Canon brand cards are available in 128 MB and 512 MB capacities.
- **Interface Cable IFC-400PCU**
Use this cable to connect the camera to a computer, Compact Photo Printer (SELPHY series), or to a Bubble Jet printer (refer to your Bubble Jet printer user guide).
- **Stereo/Video Cable STV-250N**
Use this cable to connect the camera to a TV or VCR (Playback with stereo sound is possible).
- **Component Cable CTC-100 (2.9 m (9.5 ft.))**
Use this cable to connect the camera to an HDTV.

Direct Print Compatible Printers

Canon offers the following separately sold printers for use with the camera. You can produce photo quality prints quickly and easily by connecting the printer to the camera with a single cable and operating the camera's controls.

- **Compact Photo Printers (SELPHY series)**
 - **Bubble Jet Printers (PIXMA series)**
- For more information, visit your nearest Canon retailer.