


PowerShot Pro1 System Map

DIGITAL CAMERA

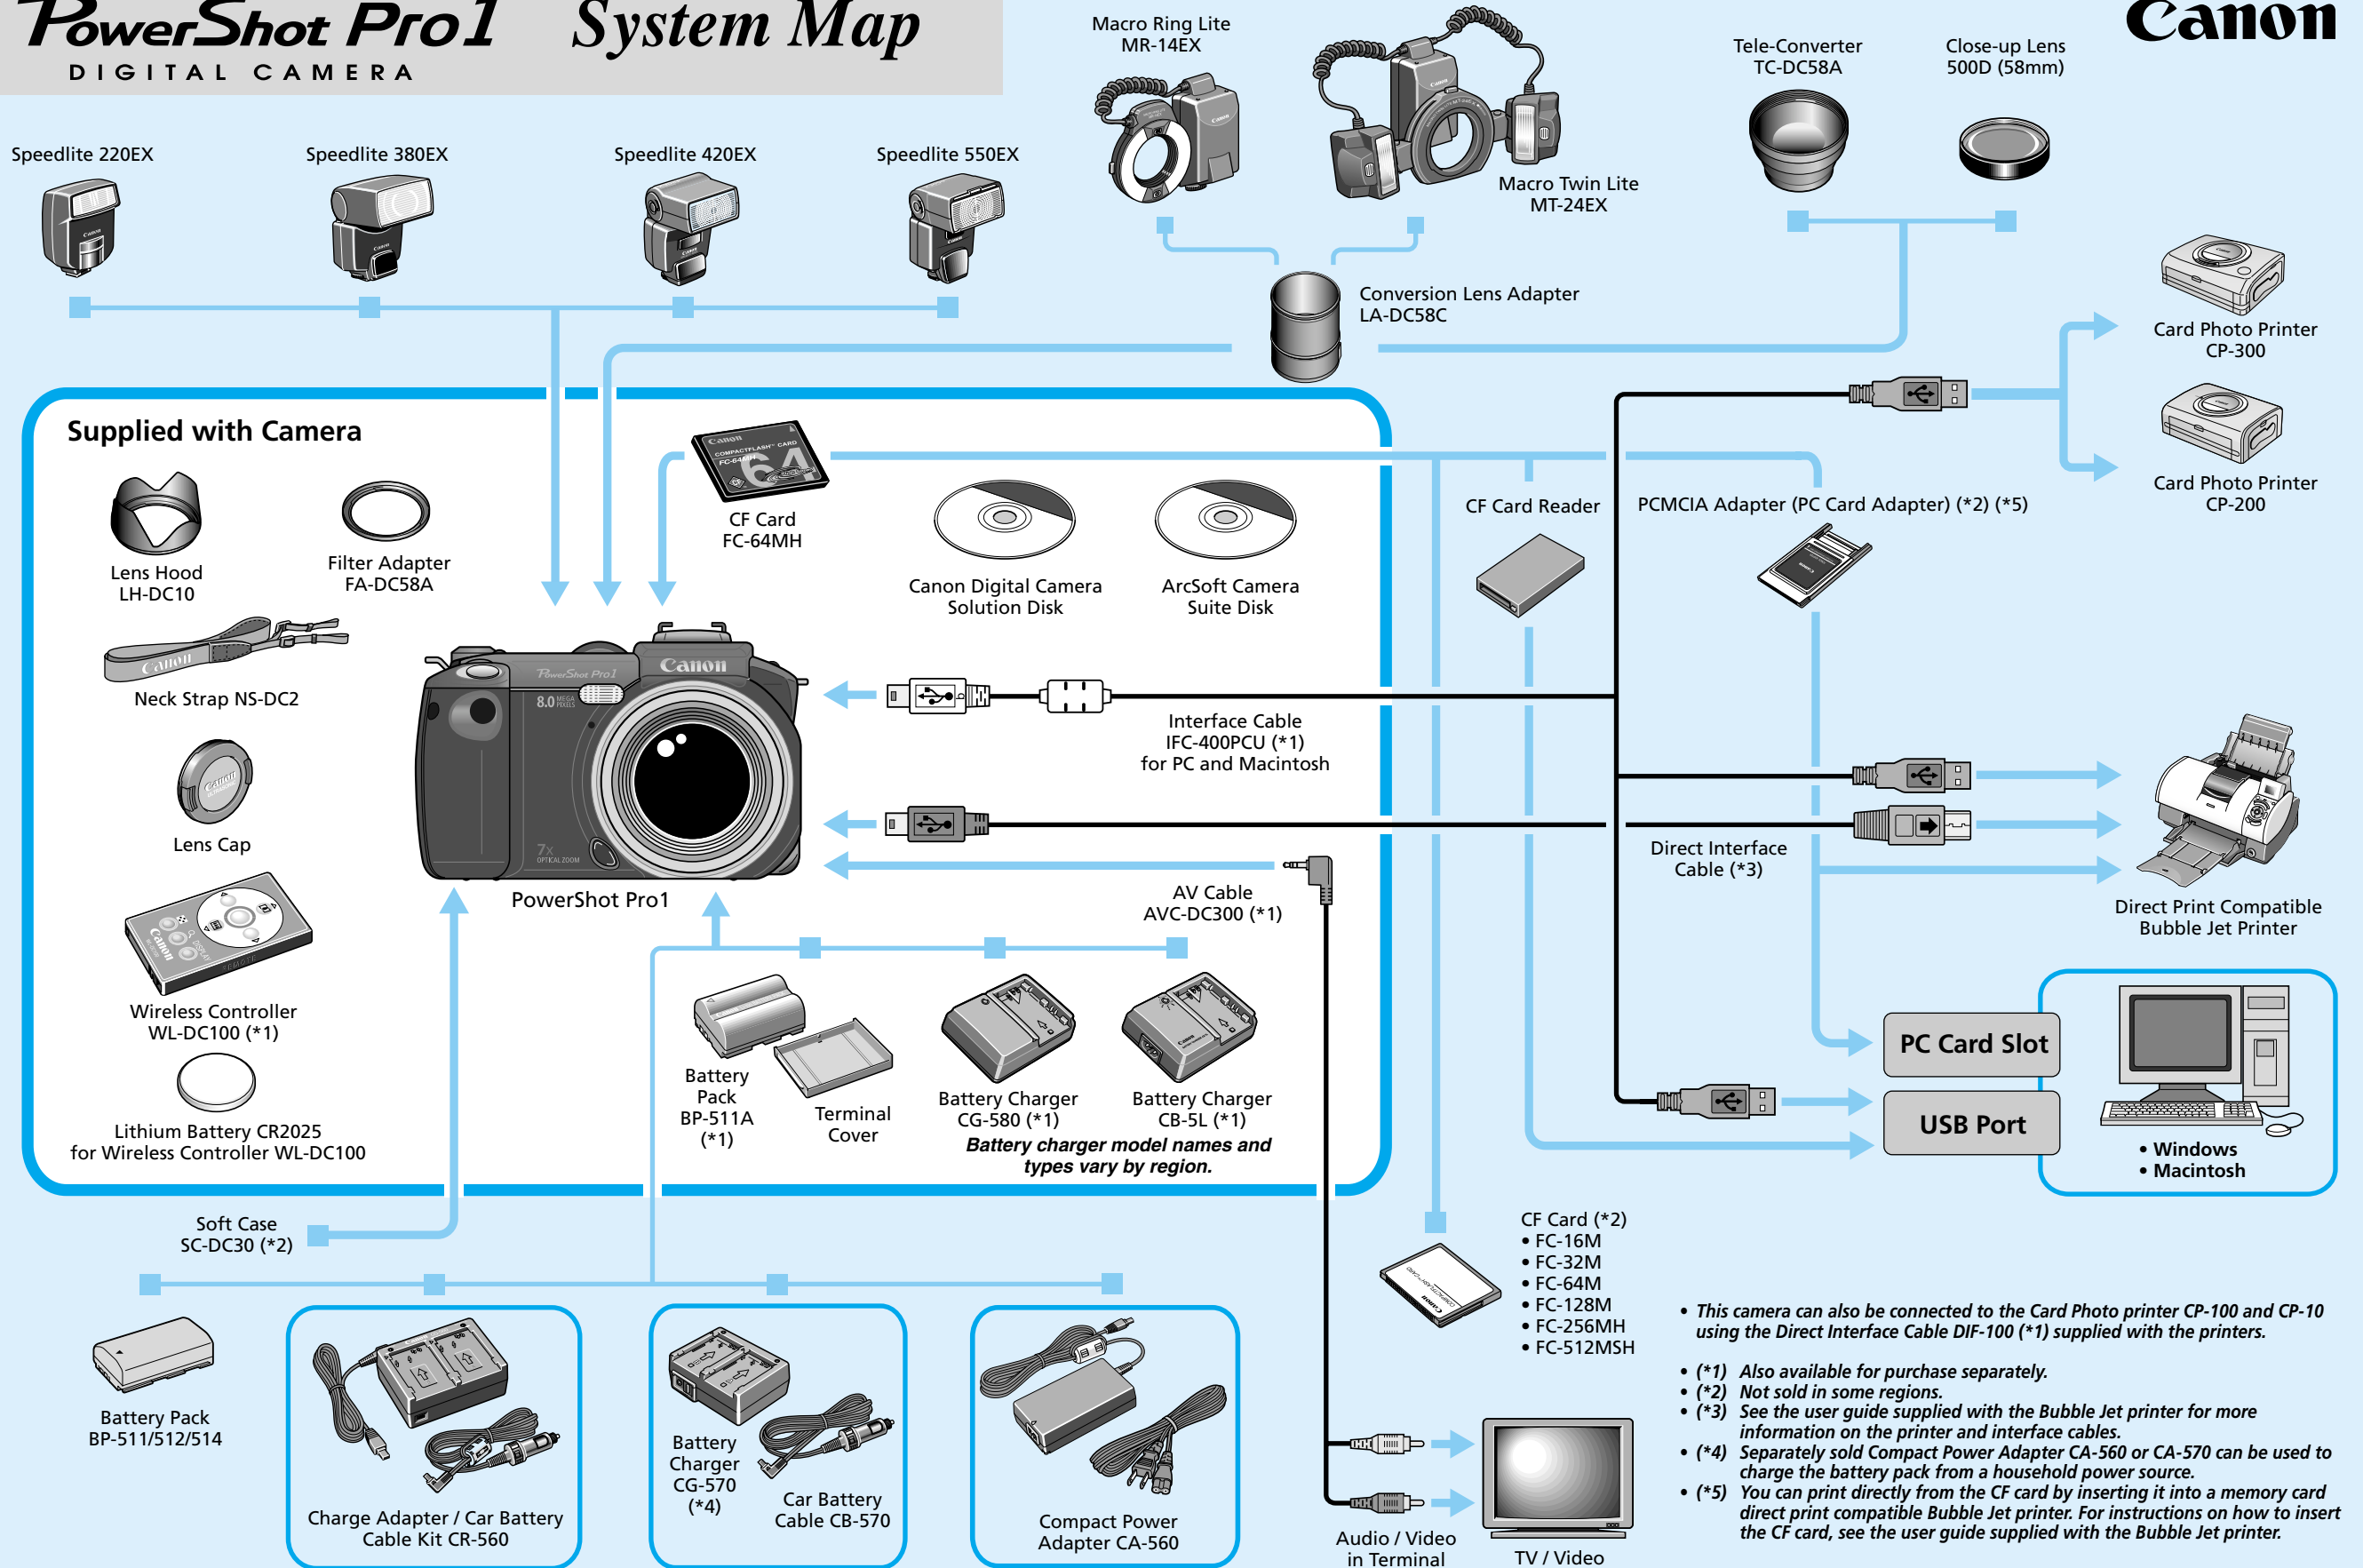

- This camera can also be connected to the Card Photo printer CP-100 and CP-10 using the Direct Interface Cable DIF-100 (*1) supplied with the printers.
- (*1) Also available for purchase separately.
- (*2) Not sold in some regions.
- (*3) See the user guide supplied with the Bubble Jet printer for more information on the printer and interface cables.
- (*4) Separately sold Compact Power Adapter CA-560 or CA-570 can be used to charge the battery pack from a household power source.
- (*5) You can print directly from the CF card by inserting it into a memory card direct print compatible Bubble Jet printer. For instructions on how to insert the CF card, see the user guide supplied with the Bubble Jet printer.

Confirming the Package Contents

The camera package should contain the following items. Contact your camera retailer if any are missing.

- Digital Camera
- Lens Cap
- Neck Strap NS-DC2
- Lens Hood LH-DC10
- Filter Adapter FA-DC58A
- Battery Charger CG-580* or Battery Charger CB-5L*
- Battery Pack BP-511A
- Terminal Cover (for Battery Pack BP-511A)
- CompactFlash™ Card FC-64MH
- Case for CompactFlash Card
- Interface Cable IFC-400PCU
- AV Cable AVC-DC300
- Canon Digital Camera Solution Disk
- ArcSoft Camera Suite Disk
- Wireless Controller WL-DC100
- Lithium Battery CR2025 (for Wireless Controller WL-DC100)
- Quick Start Guide
- Camera User Guide
- Direct Print User Guide
- Software Starter Guide
- "For Windows® XP and Mac OS X users" Leaflet
- System Map (this publication)
- "Canon Customer Support" Leaflet
- Warranty Card

*Battery charger model names and types vary by region.

Optional Accessories

The following optional accessories are available. **Some accessories are not sold in some regions.**

Lens

- **Conversion Lens Adapter LA-DC58C**
Adapter for fitting the tele-converter, close-up lens, Macro Ring Lite MR-14EX, and Macro Twin Lite MT-24EX to the camera.
- **Tele-converter TC-DC58A**
Converts the focal distance of the body lens by a factor of 1.5 when attached.
- **Close-up Lens 500D (58mm)**
A lens for shooting at higher magnifications when the camera's macro mode is used.

Flash

- **EX-Series Speedlites**
Speedlites for Canon EOS models. Subjects are optimally illuminated for crisp, natural images.
 - Speedlite 220EX
 - Speedlite 420EX
 - Speedlite 550EX*Speedlite Transmitter ST-E2 (sold separately) is also available.*
- **Macro Ring Lite MR-14EX**
- **Macro Twin Lite MT-24EX**
As macro photography dedicated flashes, they can be used for various macro flash photography purposes.

Power Supplies

- **Compact Power Adapter CA-560**
An adapter for powering the digital camera from a household power source. You are recommended to use the compact power adapter to power the camera for prolonged use or during a computer connection.

Please check the cable of the CA-560 you purchased. A ferrite core should be located near the adapter. If there is no ferrite core, please contact your retailer.



- **Battery Pack BP-511/511A/512/514**
Rechargeable lithium ion battery.
- **Battery Charger CG-570**
Battery packs can be charged from a household power source using Compact Power Adapter CA-560 or Compact Power Adapter CA-570 (sold separately).
- **Car Battery Cable CB-570**
Required when charging the battery pack from a car battery, using the Battery Charger CG-570.
- **Battery Charger CG-580**
- **Battery Charger CB-5L**
A small convenient battery charger that charges the battery packs using a household power source.

Direct Print Compatible Printers

Canon offers the following separately sold printers for use with the camera. You can produce prints quickly and easily by connecting them to the camera with a single cable and operating the camera's controls. **Some accessories are not sold in some regions.**

Card Photo Printers (CP Series)

- **Card Photo Printer CP-300/CP-200/CP-100**
These super-compact, light-weight printers print high-quality postcard size, L-size and card size images. The Canon rechargeable battery* makes these printers portable, even allowing you to print your images outdoors. The rechargeable battery is included with the CP-300.
** CP-300/CP-100 only*
 - **Color Ink/Paper Set KP-36IP, KL-36IP, KC-36IP**
 - **Color Ink/Label Set KC-18IL**
 - **Color Ink/Full-Sized Label Set KC-18IF**
Color ink and paper sets.
 - **Paper Cassette PCL-CP100**
L-size paper cassettes.
 - **Paper Cassette PCC-CP100**
Credit card-size paper cassette (required to print with the CP-200).
 - **Computer Connection Kit CCK-CP200**
Connects your computer to the CP-100 or the CP-10, allowing you to print images directly from your computer. With the CP-300 and CP-200 printers, you can use the software included with the printers to print images from your computer.
 - **Battery and Charge Adapter Kit BCA-CP100**
This rechargeable lithium-ion battery and charger for the CP-300/CP-100 let you print images on the move.
 - **Car Battery Adapter CBA-CP100**
Allows you to print images on the go, using a car cigarette lighter as a power source.
- **Card Photo Printer CP-10**
Prints high-quality, credit card-size images.

Connection Accessories

- **Interface Cable IFC-400PCU**
Use this cable to connect the camera to the computer, to a card photo printer (CP-300 / CP-200) or to a Bubble Jet printer (refer to your Bubble Jet printer user guide).
This cable can be used with computers equipped with the following OS.

Windows: Systems running preinstalled Windows 98 (including Second Edition), Windows Me, Windows 2000, or Windows XP.

Macintosh: Mac OS 9.0 - 9.2, Mac OS X (v10.0/v10.2)*
**Only systems equipped with genuine built-in USB interfaces.*

- **PCMCIA Adapter (PC Card Adapter)**
An adapter to fit a CF card so that it can be used in a PC card slot in a computer.

Others

- **CF Cards**
CompactFlash™ (CF) cards are used to store images recorded by the camera.
Canon brand cards are available in 16 MB, 32 MB, 64 MB, 128 MB, 256 MB, and 512 MB capacities.
- **AV Cable AVC-DC300**
A cable used to connect the camera to a TV or video player.
- **Wireless Controller WL-DC100**
Operates camera from a distance.
- **Soft Case SC-DC30**
Protect the camera from scratches and dirt.

Bubble Jet Printers

For more information, visit your nearest Canon retailer.