


PowerShot S80 SYSTEM MAP

DIGITAL CAMERA

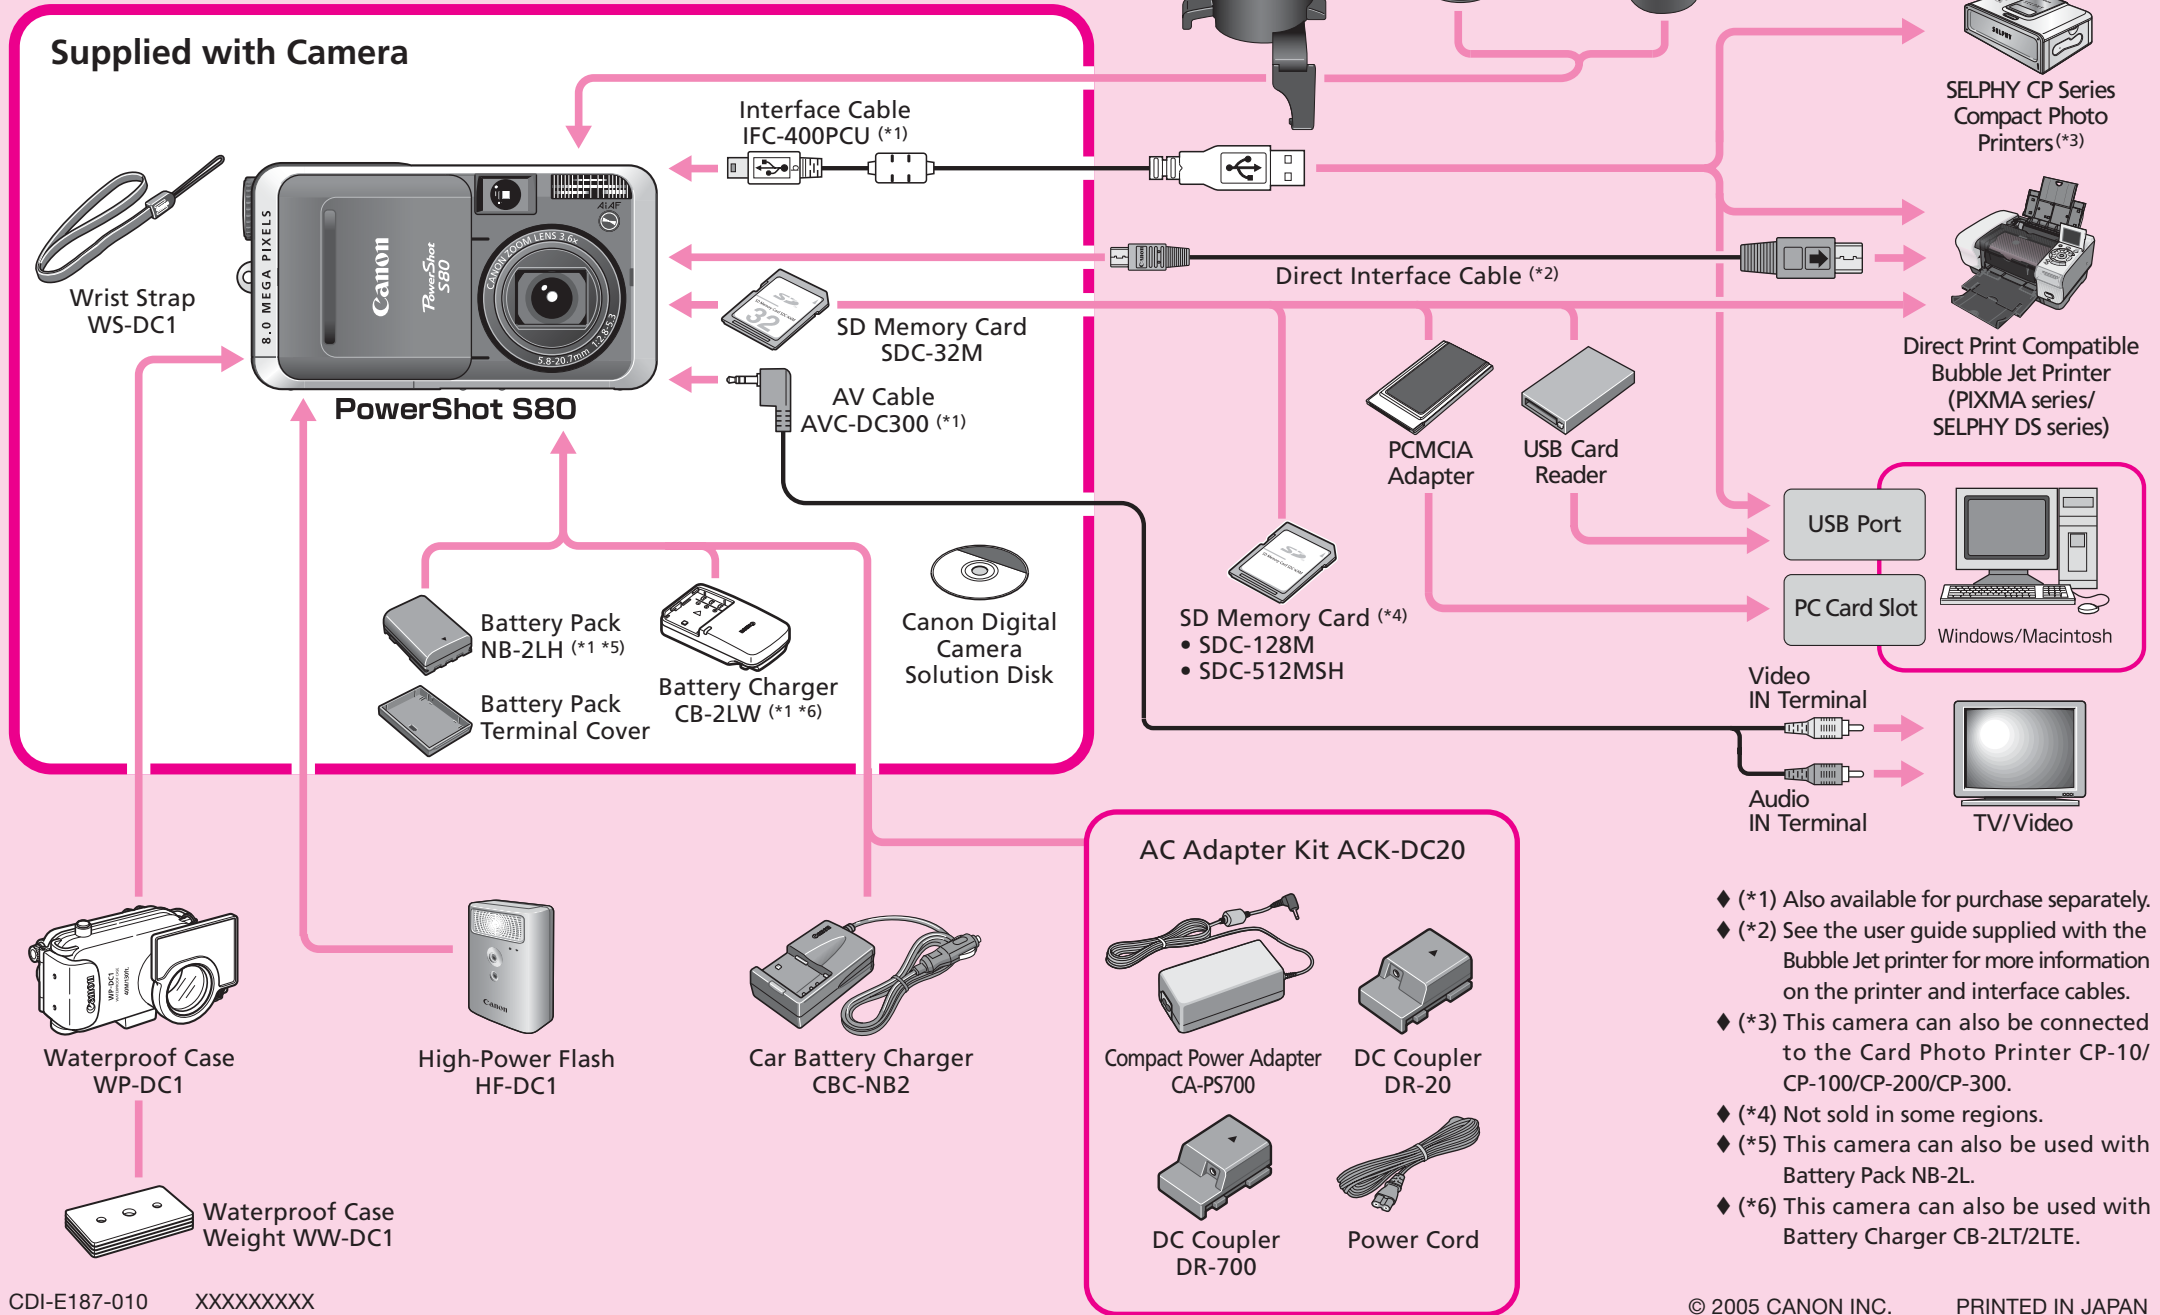

- ◆ (*1) Also available for purchase separately.
- ◆ (*2) See the user guide supplied with the Bubble Jet printer for more information on the printer and interface cables.
- ◆ (*3) This camera can also be connected to the Card Photo Printer CP-10/CP-100/CP-200/CP-300.
- ◆ (*4) Not sold in some regions.
- ◆ (*5) This camera can also be used with Battery Pack NB-2L.
- ◆ (*6) This camera can also be used with Battery Charger CB-2LT/2LTE.

Confirming the Package Contents

Your camera package includes all of the following items. If any of these items are missing, please contact the dealer for assistance.

- Digital Camera
- Wrist Strap WS-DC1
- Battery Pack NB-2LH
- Battery Pack Terminal Cover
- Battery Charger CB-2LW
- SD Memory Card SDC-32MH
- Interface Cable IFC-400PCU
- AV Cable AVC-DC300
- Canon Digital Camera Solution Disk
- Basic Camera User Guide
- Advanced Camera User Guide
- Direct Print User Guide
- Software Starter Guide
- "For Windows® XP and Mac OS X Users" Leaflet*
- System Map (this sheet)
- "Canon Customer Support" Leaflet*
- "Use of Genuine Canon Accessories Recommended" Leaflet*
- Warranty Card

* These leaflets are printed together on one sheet of paper. Please separate them before reading.

Optional Accessories

The following camera accessories are sold separately. **Some accessories are not sold in some regions.**

Lenses, Lens Adapter

- **Lens Adapter LA-DC20**
This conversion lens adapter is required for mounting the wide converter and tele-converter to the camera.
- **Wide Converter WC-DC10**
Converts the focal length of the body lens by a factor of approximately 0.8 (35mm film equivalent at maximum wide angle: approximately 22.4mm) when attached.
- **Tele-converter TC-DC10**
Converts the focal length of the body lens by a factor of approximately 2 (35mm film equivalent at maximum telephoto: approximately 200mm) when attached.

Flash

- **High-Power Flash HF-DC1**
This attachable supplementary flash can be used to capture photographic subjects that are too distant for the built-in flash to illuminate.

Power Supplies

- **AC Adapter kit ACK-DC20**
This adapter lets you power the camera from any standard household power outlet. Recommended to power a camera for an extended period of time or when connecting to a computer.
 - **Compact Power Adapter CA-PS700**
 - **DC Coupler DR-20**
 - **DC Coupler DR-700**
(Not available on the PowerShot S80)
 - **Power Cord**
- **Battery Charger CB-2LW**
A battery charger for Battery Pack NB-2LH.
- **Battery Pack NB-2LH**
Rechargeable lithium ion battery.
- **Car Battery Charger CBC-NB2**
Allows you to change your camera's battery from the cigarette lighter socket of your car.

Connection Accessories

This connection accessory can be used with computers equipped with genuine built-in USB interfaces and running the following operating systems.

Windows:	System running preinstalled Windows 98 Second Edition (SE), Windows Me, Windows 2000 Service Pack 4, or Windows XP (including Service Pack 1 and Service Pack 2).
Macintosh:	Mac OS X (v10.2-v10.3)

- **Interface Cable IFC-400PCU**
Use this cable to connect the camera to a computer, Compact Photo Printer (SELPHY series), or to a Bubble Jet printer (refer to your Bubble Jet printer user guide).

Other Accessories

- **SD Memory Card**
SD Memory Cards are used to store images recorded by the camera. Canon brand cards are available in 128 MB and 512 MB capacities.
- **AV Cable AVC-DC300**
Use this cable to connect the camera to a TV set.
- **Waterproof Case WP-DC1**
You can use this case to take underwater shots at depths of up to 40 meters (130 feet). And of course it's also ideal for taking worry-free pictures in the rain, at the beach, or on the ski slopes.
- **Waterproof Case Weight WW-DC1**
Used with the Canon Waterproof Case to prevent the case from floating while taking pictures underwater.

Direct Print Compatible Printers

Canon offers the following separately sold printers for use with the camera. You can produce photo quality prints quickly and easily by connecting them to the camera with a single cable and operating the camera's controls.

- **Compact Photo Printers (SELPHY series)**
- **PIXMA series printers**

For more information, visit your nearest Canon retailer.