


# CANON SELF-TIMER V

The Canon Self-Timer V is primarily designed for use on the Canon Cameras Model L series. It screws onto the cable release socket of the camera and gives a delay of approximately 10 seconds.

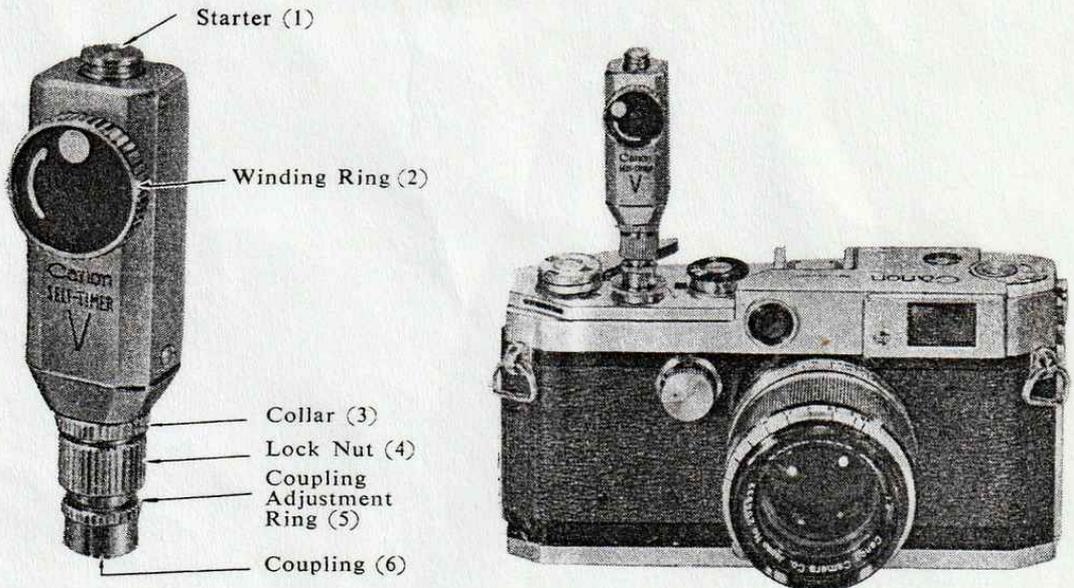

## PROCEDURE OF OPERATION

1. Screw the Coupling (6) onto the cable release socket on the camera. After that, you can turn the head of the Self-Timer in any direction.
2. Set the camera's shutter. Cock the Self-Timer by turning the Winding Ring (2) as indicated by the arrow. You can either cock the camera shutter, first, and the Self-Timer then or vice versa.
3. Push the Starter (1) and you will see the Winding Ring rotate and hear a buzz. After a lapse of a given time . . . . . about 10 seconds when the Self-Timer is fully wound up . . . . ., the shutter will be released. The plunger, which pushes the camera's shutter release button, will retract automatically after that.

When necessary, you can stop the Self-Timer before the shutter is released by pulling out the Starter (1).

When you have started the Self-Timer without having cocked the camera's shutter, the Self-Timer will, of course, not function. In that case, be sure to recock the Self-Timer and pull out the Starter before cocking the camera's shutter.

## PROCEDURE OF ADJUSTMENTS

The Canon Self-Timer is adjusted at the factory before leaving the factory. Should the plunger retract without releasing the shutter or should it not retract automatically after releasing the shutter, certain adjustments are required.

- a. Dismount the Self-Timer. Loosen the Lock Nut (4) by turning it slightly counter-clockwise while holding the Collar (3) with your finger.
- b. Turn the Coupling Adjustment Ring (5) counter-clockwise so that the Coupling (6) will get as close to the Collar (3) as possible.
- c. Mount the Self-Timer, thus adjusted, onto the camera. Cock both the camera's shutter and Self-Timer.
- d. Depress the Starter (1). The shutter will soon be released. The Winding Ring will continue to rotate a little further but it will stop before it completes its full travel.
- e. Turn the head of the Self-Timer clockwise very slowly. Immediately, the Winding Ring will begin to rotate again and you will hear a buzz. Continue to turn the head until you feel the plunger retract with a slight shock and the Winding Ring will return to its uncocked position.
- f. Dismount the Self-Timer and fasten the Lock Nut while holding the Collar (3).