
Canon FLASH COUPLER L

INSTRUCTIONS

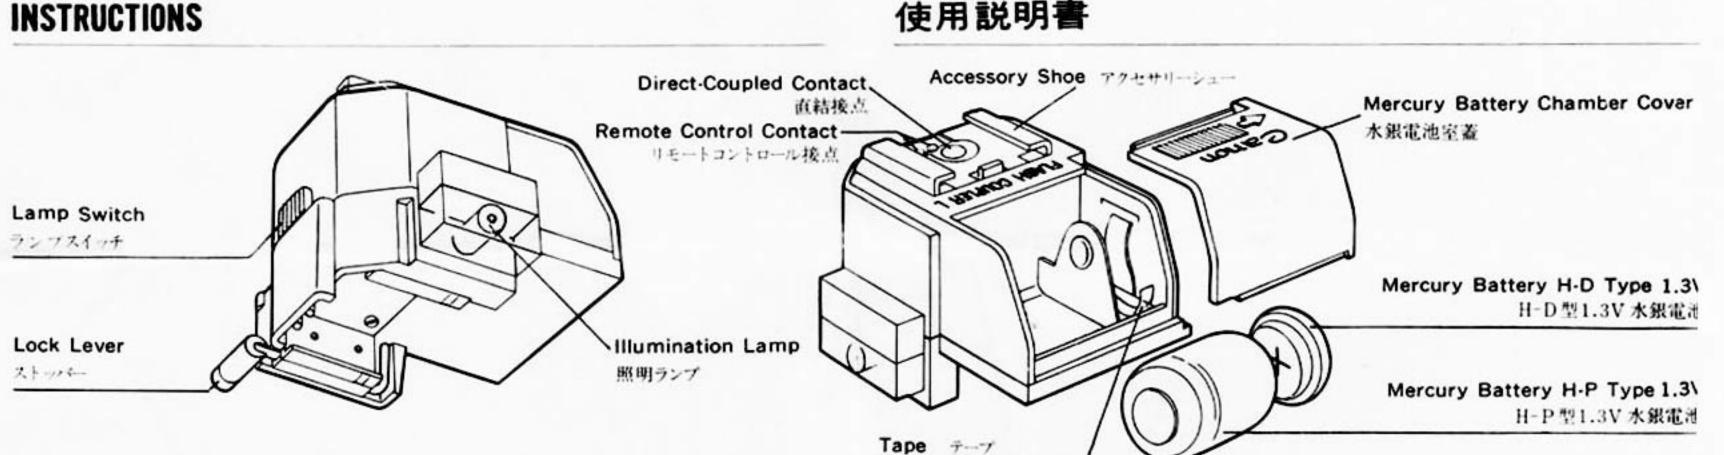

CANON FALSH COUPLER L

The Canon Flash Coupler L is an exclusive adapter for connecting the Canon Speedlite 133D with Canon F-1. It is also used as an accessory for connecting a general flash unit. It has a direct-coupled flash contact and works at the same time as the electric source of the Canon Auto Tuning (CAT) System meter circuit. It has also an illumination lamp for the informations in the viewfinder to be read easily in a dark place.

LOADING THE BATTERIES

Open the mercury battery chamber cover by pulling it following the arrow and insert the mercury batteries confirming \oplus and \ominus as indicated on the diagram on the backside of the cover. A large mercury battery is for the illumination lamp and a small one is for the CAT System.

- The large mercury battery (H-P Type, 1.3V) is equivalent to Mallory PX-1 or Eveready EPX-1.
- The small mercury battery (H·D Type, 1.3 V) is equivalent to Mallory PX-625 or Eveready EPX-625. This is durable about one year.

Note: Be sure to wipe off the soils and fingerprints on the mercury batteries before inserting them. Soils may cause corrosion and may prevent correct operation.

CHECKING THE BATTERIES

The Flash Coupler L has no battery checker built in. So sheck the batteries in such ways as follows:

Check the small mercury battery (H-D Type, 1.3 V) for the CAT System by setting it into the F-1 body.

The large mercury battery (H-P Type, 1.3V) for the lamp provides about 40 hours of continuous lighting in normal temperature and when it becomes weary the light becomes dark; check it by the brightness of the lamp.

■ In cold climate, the capacity of the battery lowers and it does not function in prescribed period.

ATTACHING TO THE CANON F-1

Turn the lock lever counter-clockwise and insert it into the accessory shoe of the F-1 firmly until it stops; then, turn up the lever to fix it on the body.

DETACHING

Pull off the cord of the Flash-Auto Ring and push down the lock lever to detach.

HOW TO USE

Insert the Speedlite 133D into the accessory shoe on the top of the Flash Coupler L, and connect the plug of the cord of the Flash-Auto Ring firmly to the contact socket of the Speedlite 133D.

By connecting them, the CAT System automatically functions and when you push the lamp switch of the Flash Coupler L following the arrow. the illumination lamp lights to enlight the illumination window of the camera body for the informations in the viewfinder to be read easily.

When you use the Canon Speedlite 133D with F-1, be sure to set the meter switch of the F-1 at OFF+FLASH, or the exact exposures cannot be obtained.

■ As for the operations at photographing, please consult with the instructions of the Canon Speedlite 133D. Subject to alterations.

キヤノンフラッシュカプラーL

キヤノンスピードライト 133D をキヤノン F-1 に取りつけるための専用 アダプターで、一般のフラッシュを取りつけるアクセサリーとしても使 用できます.

キヤノンフラッシュカプラーL

フフッシュ直結接点をもち、CATシステムのメーター連動回路、電源装 置を兼用します。また、暗い場所でもファインダー情報を見易くする照 明装置つきです.

■電池の入れ方

水銀電池室蓋を矢印方向に引いてあけ、水銀電池を入れます。このさい 電池の①の向きをまちがえないように水銀電池室蓋の裏の図に従って 入れてください、照明ランプの電源には大型水銀電池を、CATシステム の電源には小型の水銀電池を使用します.

※大型水銀電池(H-P 型1.3V)は、ナショナル、東芝のH-P 型を使用し、米国の Mallory PX-1, Everedy EPX-1 に相当します。

※小型水銀電池 (H-D 型 1.3V) は、ナショナル製 H-D 型、または、東芝TH-KCを使 用します。これは米国の Mallory PX-625, Eveready EPX-625 に相当し、約1ヶ年 の使用に耐えます.

(注意) 水銀電池の汚れや、指紋を拭きとって入れてください、そのまま入れると腐 触の原因となり、作動しないことがあります.

■水銀電池のチェック方法

フラッシュカプラーLは、バッテリーチェッカーを内蔵していませんの で次の様にしてチェックをしてください。

●CAT'S 用の小型水銀電池 (H-D型1.3V) は、F-1 ボディに入れかえてチェックし てください、ランプ用の大型水銀電池 (H-P 型1.3V) は常温で連続点灯した場合、約 40時間使用でき、容量がなくなると照明が暗くなりますので、それを目安としてくだ さい.

※寒い場所では電池容量が低下して規定の時間,作動しませんのでご注意ください.

■キヤノンF-1への取りつけ方

ロックレバーを反時計方向に倒し、確実にF-1のアクセサリーシューへ 止まるまで差し込み、ロックレバーを起し、ボディに固定します。

※(はずし方) フラッシュオートリングのコードを抜きとってから、ロックレバーを 倒してはずしてください.

■使い方

アクセサリーカプラーLの上部にスピードライト133Dを差し込み、フラ ッシュオートリングコード先端のプラグを133Dの接続ソケットに確実に 挿入します.

接続と同時に CAT 回路は自動的に働き、カプラー L のスイッチを矢印 方向に入れると照明ランプが点灯し、ボディの採光窓を照らし、ファイ ンダー内の情報を見易くします。キヤノンスピードライト133Dを使用す るときは、必らずF-1ボディのメータースイッチを OFF・FLASH にセ ットしてください. これを忘れると適正露出は得られません.

※撮影操作に関しては、キヤノンスピードライト133Dの使用書をご覧ください。

※都合により製品の外観デザインの一部を変更することがあります。

CANON INC. 9-9, Ginza 5-chome, Chuo-ku, Tokyo 104, Japan キヤノン株 式 会 社 東京都品川区東五反田 1-13-12 〒141 (03) 449-2111 キヤノン販売株式会社

PUB. IM1001E 0373D3 PRINTED IN JAPA